
ILLUSTRATED PARTS LIST

MACHINE


300U401B

UPPER SHAFT ASSEMBLY

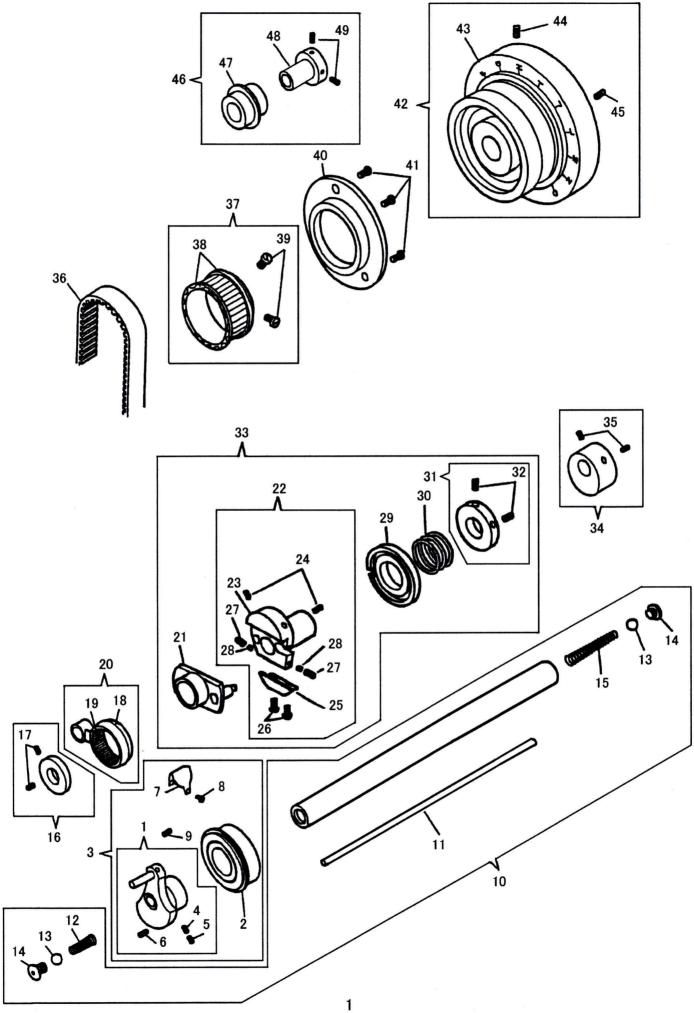


NO.	PART NO.	DESCRIPTION
1	K415133	NEEDLE BAR CRANK WITH K500272-833, K544358 AND K549024
2	K32848	ARM SHAFT BALL BEARING (FRONT)
3	K281209	NEEDLE BAR CRANK COMPLETE, NOS. K415133, K32848, K281258, KE0099 AND TWO K545205–451
4	K549024	NEEDLE BAR CRANK POSITION SCREW
5	K544358	NEEDLE BAR CRANK POSITION SCREW CHECK SCREW
6	K500272 -833	NEEDLE BAR CRANK SET SCREW
7	KE0099	NEEDLE BAR CRANK COVER
8	K545205 -451	NEEDLE BAR CRANK COVER SCREW (2)
9 10	K281258	NEEDLE BAR CRANK OIL PACKING (WICK) ARM SHAFT WITH K268009, K268044, K268264, TWO EACH K268214 AND K414578
11	K415128 K268264	ARM SHAFT WITH K200009, K200044, K200204, TWO EACH K200214 AND K414378 ARM SHAFT OIL CONTROL ROD (WOOD)
12	K268009	ARM SHAFT OIL STOP BALL SPRING (FRONT)
13	K268214	ARM SHAFT OIL STOP BALL 5/32 IN. DIA. (2)
14	K414578	ARM SHAFT OIL STOP BALL SCREW (2)
15	K268044	ARM SHAFT OIL STOP BALL SPRING (REAR)
16	K415308	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC SPACING COLLAR WITH TWO K414529
17	K414529	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC SPACING COLLAR SET SCREW (2)
18	K267608	NEEDLE BAR ROCK FRAME DRIVING CONNECTION
19	K271055	NEEDLE BAR ROCK FRAME DRIVING CONNECTION NEEDLE BEARING
20	K267609	NEEDLE BAR ROCK FRAME DRIVING CONNECTION K267608 WITH K271055
21	KE0004	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC
22	K415073	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763,
		K414555, K414557 AND K374098
23	K415074	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE
24	K414555	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE SET SCREW (2)
25	K267623	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE
26	K374098	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW (2)
27	K414557	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)
28	K241763	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BRASS) (2)
29	K268065	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC
30	K268066	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING
31	K412011	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325
32	K544325	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)
33	KE0003	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073
34	K281256	COUNTERBALANCE WITH TWO K544208-005
34 35	K281256 K544208 -005	COUNTERBALANCE WITH TWO K544208-005 COUNTERBALANCE SET SCREW (2)
35 36	K544208 -005 K268270	COUNTERBALANCE SET SCREW (2) ARM SHAFT CONNECTION BELT (REINFORCED NEOPRENE)
36 37	K268270 K281290	ARM SHAFT CONNECTION BELT (REINFORCED NEOPRENE) ARM SHAFT CONNECTION BELT PULLEY WITH TWO EACH K414546 AND K202253
		ARM SHAFT CONNECTION BELT PULLEY WITH TWO EACH K414546 AND K202253 ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE (2)
38 39	K202253 K414546	ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE (2) ARM SHAFT CONNECTION BELT PULLEY SET SCREW (2)
39 40	K268004 -451	ARM SHAFT CONNECTION BELT POLLET SET SCREW (2) ARM SHAFT BALL BEARING (BACK) HOUSING
40	K544336	ARM SHAFT BALL BEARING (BACK) HOUSING ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)
42	K281296 -467	MACHINE PULLEY WITH K414525 AND K414526
43	K281297 -467	MACHINE PULLEY
44	K414525	MACHINE PULLEY SET SCREW
45	K414526	MACHINE PULLEY POSITION SCREW
46	K281294	ARM SHAFT THRUST COLLAR WITH K272142 AND TWO K544209-005
47	K272142	ARM SHAFT BALL BEARING (BACK)
48	K281295 -001	ARM SHAFT THRUST COLLAR
49	K544209 -005	ARM SHAFT THRUST COLLAR SET SCREW (2)

FRONT ASSEMBLY SEWING ARM

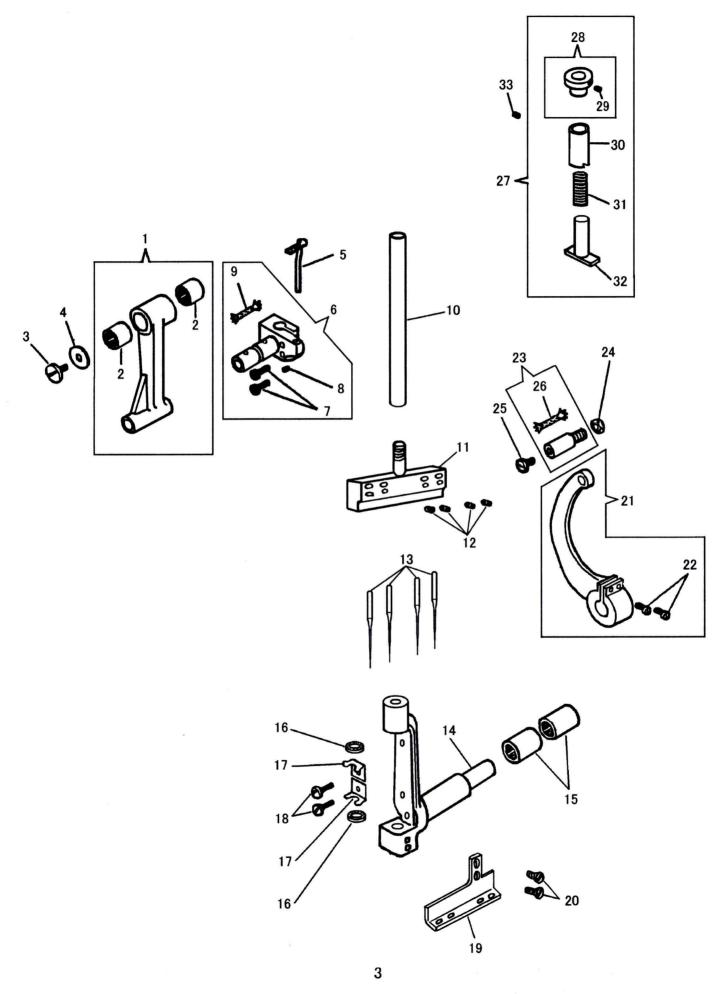


NO.	PART NO.	DESCRIPTION
1	K268056	NEEDLE BAR CONNECTING LINK WITH TWO K270266
2	K270266	NEEDLE BAR CONNECTING LINK NEEDLE BEARING (2)
3	K414517	NEEDLE BAR CONNECTING LINK CAP WASHER SCREW
4 5	K268139 K268512	NEEDLE BAR CONNECTING LINK CAP WASHER NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD)
6	K415053	NEEDLE BAR CONNECTING STUD WITH K202330, K414545 AND TWO K414511
7	K414511	NEEDLE BAR CONNECTING STUD PINCH SCREW (2)
8	K414545	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD) SET SCREW
9	K202330	NEEDLE BAR CONNECTING STUD OIL PACKING (WICK)
10	K415043	NEEDLE BAR
11 12	K269193 -506 K545181 -451	NEWDLE HOLDER WITH FOUR K545181-451 (1/4"-1"-1/4") NEEDLE SET SCREW (4)
13	KN3260-01 -22	NEEDLE (62X57) SIZE 22 (4)
14	K415393	NEEDLE BAR ROCK FRAME
15	K268029	NEEDLE BAR ROCK FRAME NEEDLE BEARING (2)
16	K268144	NEEDLE BAR OILING FELT (2)
17 18	K268278 K414522	NEEDLE BAR OILING FELT HOLDER (2) NEEDLE BAR OILING FELT HOLDER SCREW (2)
19	K269138 -512	NEEDLE BAR ROCK FRAME THREAD GUIDE $(1/4''-1''-1/4'')$
20	K414539	NEEDLE BAR ROCK FRAME THREAD GUIDE SCREW (2)
21	K415089 -451	NEEDLE BAR ROCK FRAME DRIVING ARM WITH TWO K414509
22	K414509	NEEDLE BAR ROCK FRAME DRIVING ARM PINCH SCREW (2)
23 24	K415091 K541197	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD WITH K268258 NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD NUT
24 25	K545297	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STOD NOT
26	K268258	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)
27	K415098	NEEDLE BAR ROCK FRAME REGULATING STUD COMPLETE, NOS. K214529, K415099, K268148 AND K268149
28	K415099	NEEDLE BAR ROCK FRAME REGULATING STUD CAP WITH K414528
29 30	K414528 K268149	NEEDLE BAR ROCK FRAME REGULATING STUD CAP SET SCREW NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE
30	K214529	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE
32	K268148	NEEDLE BAR ROCK FRAME REGULATING STUD
33	K414527	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE SET SCREW

EXTERNAL PARTS SEWING ARM

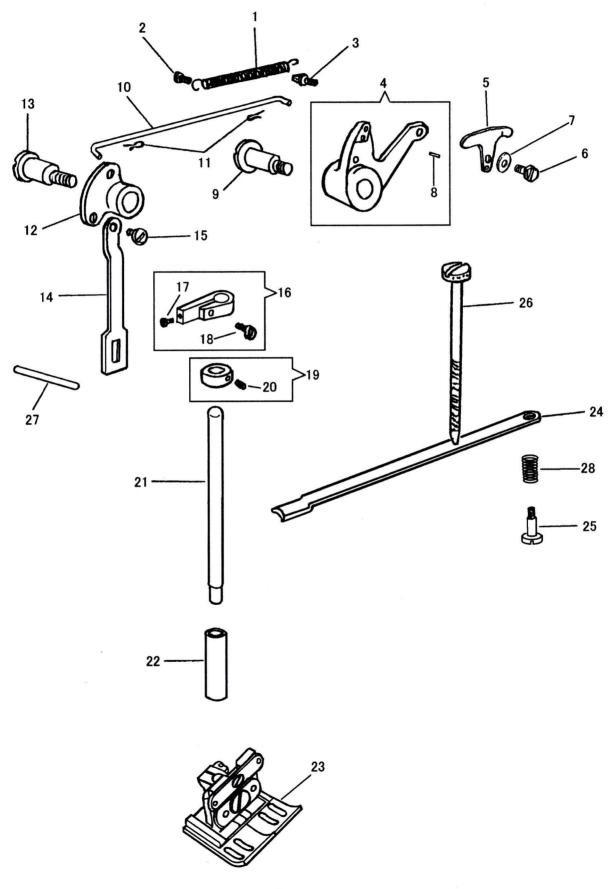

NO.	PART NO.	DESCRIPTION
1	K204348	FOOT LIFTER LEVER SPRING
2	K414555	FOOT LIFTER LEVER SPRING SCREW
3	K414570	FOOT LIFTER LEVER SPRING SCREW EYE
4	K415104 -451	FOOT LIFTER LEVER WITH K543850-001
5 6	K267707 K414531	NEEDLE THREAD TENSION RELEASING PLATE NEEDLE THREAD TENSION RELEASING PLATE SCREW
7	K543804 -004	NEEDLE THREAD TENSION RELEASING PLATE SCREW NEEDLE THREAD TENSION RELEASING PLATE SCREW WASHER
8	K543850 -001	NEEDLE THREAD TENSION RELEASING PLATE PIN
9	K201363	FOOT LIFTER LEVER HINGE SCREW
10	K268086	FOOT LIFTER LEVER ROD
11	K248423	FOOT LIFTER LEVER ROD COTTER PIN (2)
12	K415102 -451	FOOT LIFTER LEVER BELL CRANK
13	K414572	FOOT LIFTER LEVER BELL CRANK HINGE SCREW
14 15	K269616 K414568	FOOT LIFTER LIFTING LINK FOOT LIFTER LIFTING LINK HINGE SCREW
16	K415057	PRESSER BAR GUIDE BRACKET WITH K414513 AND K414535
17	K414535	PRESSER BAR GUIDE BRACKET ADJUSTING SCREW
18	K414513	PRESSER BAR GUIDE BRACKET PINCH SCREW
19	K415055	PRESSER BAR STOP COLLAR WITH K414529
20	K414529	PRESSER BAR STOP COLLAR SET SCREW
21	K268172	PRESSER BAR
22 23	K268173 K269240 -509	PRESSER BAR BUSHING PRESSER FOOT COMPLETE (1/4"-1"-1/4")
23 24	K269240 -509 K268176	PRESSER FOOT COMPLETE (1/4 -1 -1/4) PRESSER BAR SPRING
24	K414562	PRESSER BAR SPRING SUPPORT SCREW
26	K414574	PRESSER BAR SPRING ADJUSTING SCREW
27	K415360	FOOT LIFTER LIFTING LINK STOP PIN
28	KE0254	PRESSER BAR SPRING CUSHION SPRING
• • •		


LOWER SHAFT ASSEMBLY

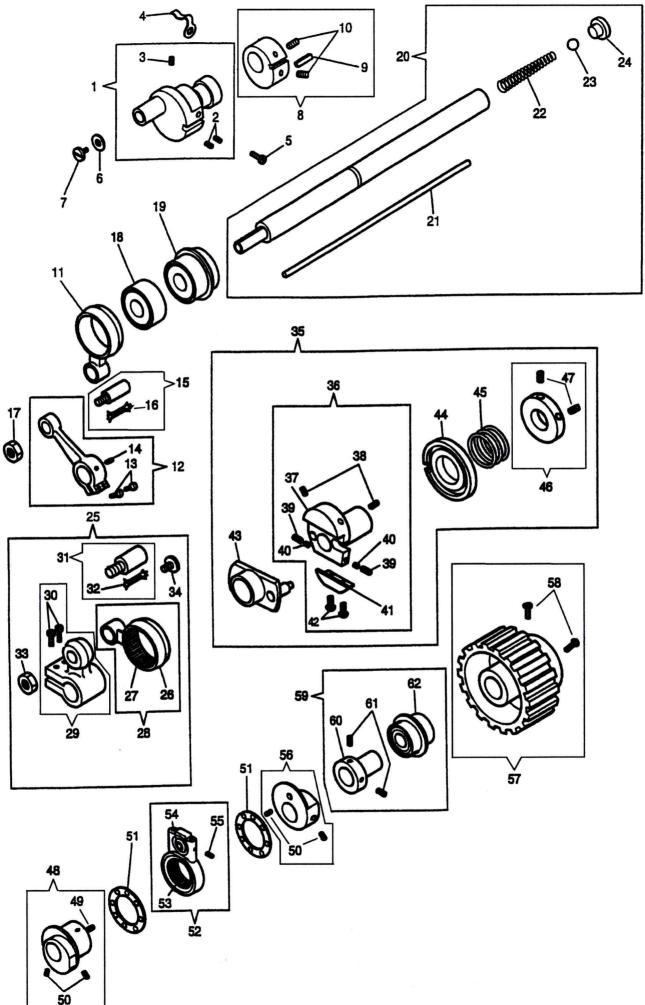


7

NO.	PART NO.	DESCRIPTION
1	K415176	LOOPER DRIVING CRANK WITH K500264-833 AND TWO K374099
2	K374099	LOOPER DRIVING CRANK POSITION SCREW (2)
3	K500264 -833	LOOPER DRIVING CRANK SET SCREW
4 5	K268102 K414563	LOOPER DRIVING CRANK OIL HOLE COVER LOOPER DRIVING CRANK OIL HOLE COVER SCREW
6	K268139	LOOPER DRIVING CONNECTION WASHER
7	K544213 -001	LOOPER DRIVING CONNECTION WASHER SCREW
8	K415210	FEED LIFTING ECCENTRIC WITH K268077 AND TWO K544208-005
9	K268077	FEED LIFTING ECCENTRIC LUBRICATING PAD (WOOD)
10	K544208 -005	FEED LIFTING ECCENTRIC SET SCREW (2)
11	K268074	FEED LIFTING CONNECTION
12 13	K415206 K414511	FEED LIFTING ROCK SHAFT CRANK WITH K414549 AND TWO K414511 FEED LIFTING ROCK SHAFT CRANK PINCH SCREW (2)
14	K414549	FEED LIFTING ROCK SHAFT CRANK POSITION SCREW
15	K415091	FEED LIFTING CONNECTION HINGE STUD WITH K268258
16	K268258	FEED LIFTING CONNECTION HINGE STUD OIL PACKING (WICK)
17	K541197	FEED LIFTING CONNECTION HINGE STUD NUT
18	K281216	BED SHAFT BALL BEARING
19 20	K281224 K281212	BED SHAFT BALL BEARING BED SHAFT WITH K268044, K268214, K268265 AND K414578
21	K268265	BED SHAFT OIL CONTROL ROD (WOOD)
22	K268044	BED SHAFT OIL STOP BALL SPRING
23	K268214	BED SHAFT OIL STOP BALL 5/32 IN. DIA.
24	K414578	BED SHAFT OIL STOP BALL SCREW
25	K415215	FEED DRIVING ROCK SHAFT CRANK K415213 WITH K267609, K415091, K541197 AND K545297
26 27	K267608 K271055	FEED DRIVING CONNECTION FEED DRIVING CONNECTION NEEDLE BEARING
27	K267609	FEED DRIVING CONNECTION NEEDLE BEAKING FEED DRIVING CONNECTION K267608 WITH K271055
29	K415213	FEED DRIVING ROCK SHAFT CRANK WITH TWO K414511
30	K414511	FEED DRIVING ROCK SHAFT CRANK PINCH SCREW (2)
31	K415091	FEED DRIVING CONNECTION HINGE STUD WITH K268258
32	K268258	FEED DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)
33 34	K541197 K545297	FEED DRIVING CONNECTION HINGE STUD NUT FEED DRIVING CONNECTION CAP SCREW
34	KE0003	FEED DRIVING COMINECTION CAP SCREW FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073
36	K415073	FEED DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND
		K374098
37	K415074	FEED DRIVING ECCENTRIC FLANGE
38	K414555	FEED DRIVING ECCENTRIC FLANGE SET SCREW (2)
39 40	K414557 K241763	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2) FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BRASS) (2)
40	K241703	FEED DRIVING ECCENTRIC FRICTION PLATE
42	K374098	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW (2)
43	KE0004	FEED DRIVING ECCENTRIC
44	K268065	FEED DRIVING ECCENTRIC ADJUSTING DISC
45	K268066	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325
46 47	K412011 K544325	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO R344323
48	K415187	SPREADER DRIVING ECCENTRIC WITH K543808-002 AND TWO K414528
49	K543808 -002	SPREADER DRIVING ECCENTRIC PIN
50	K414528	SPREADER DRIVING ECCENTRIC SET SCREW (2)
50	K414528	SPREADER DRIVING ECCENTRIC COUNTERBALANCE SET SCREW (2)
51 52	K268220 K281246	SPREADER DRIVING ECCENTRIC THRUST WASHER (2) SPREADER DRIVING CONNECTION WITH K415368, K281248 AND K544201–001
52 53	K415368	SPREADER DRIVING CONNECTION WITH R413308, R281248 AND R344201-001 SPREADER DRIVING CONNECTION NEEDLE BEARING
54	K281248	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER
55	K544203 -001	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER SET SCREW
56	K415190	SPREADER DRIVING ECCENTRIC COUNTERBALANCE WITH TWO K414528
57	K281292	BED SHAFT CONNECTION BELT PULLEY WITH TWO 414546
58 59	K414546 K281294	BED SHAFT CONNECTION BELT PULLEY SET SCREW (2) BED SHAFT THRUST COLLAR WITH K272142 AND TWO K544209-005
60	K281294 K281295 -001	BED SHAFT THRUST COLLAR WITT R272142 AND TWO R344209 005
61	K544209 -005	BED SHAFT THRUST COLLAR SET SCREW (2)
62	K272142	BED SHAFT THRUST COLLAR BALL BEARING
1		
1		

FRONT ASSEMBLY SEWING BED

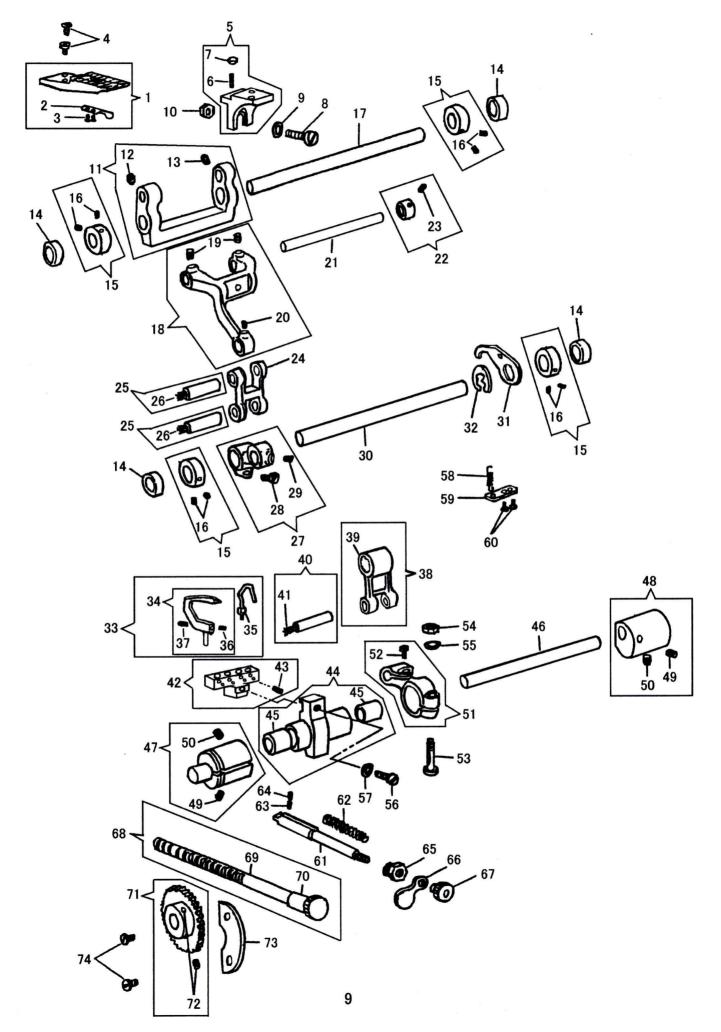


NO.	PART NO.	DESCRIPTION
1	K269006 -509	FEED DOG WITH FOUR K268318 AND EIGHT K229 (1/4"-1"-1/4")
2	K268318	LOOP DEFLECTOR (4)
3	K229	LOOP DEFLECTOR SCREW (8)
4	K414518	FEED DOG SCREW (2)
5	K415208	FEED DOG SHANK WITH K414559 AND K541200
6	K414559	FEED DOG SHANK ADJUSTING SCREW
7 8	K541200 K414520	FEED DOG SHANK ADJUSTING SCREW LOCK NUT FEED DOG SHANK SCREW
9	K543804 -004	FEED DOG SHANK SCREW WASHER
10	K541166 -003	FEED DOG SHANK SCREW LOCK NUT
11	K415200	FEED DRIVING ROCK FRAME WITH K500264-833 AND K549024
12	K549024	FEED DRIVING ROCK FRAME POSITION SCREW
13	K500264 -833	FEED DRIVING ROCK FRAME SET SCREW
14	K415297	FEED DRIVING ROCK SHAFT BUSHING (2)
14	K415297	FEED LIFTING ROCK SHAFT BUSHING (2)
15 15	K415065 K415065	FEED DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2) FEED LIFTING ROCK SHAFT COLLAR WITH TWO K504020 (2)
16	K504020	FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4)
16	K504020	FEED LIFTING ROCK SHAFT COLLAR SET SCREW (4)
17	K268070	FEED DRIVING ROCK SHAFT
18	K415198	FEED BAR WITH K545213 AND TWO K544204-001
19	K544204 -001	FEED BAR SET SCREW (2)
20	K545213	FEED LIFTING LINK HINGE PIN SET SCREW
21 22	K268035 K415202	FEED BAR HINGE PIN FEED BAR HINGE PIN COLLAR WITH K414529
22	K415202 K414529	FEED BAR HINGE PIN COLLAR WITH K414929 FEED BAR HINGE PIN COLLAR SET SCREW
23 24	K414529 K268078	FEED LIFTING LINK
25	K268079	FEED LIFTING LINK HINGE PIN WITH K268258 (2)
26	K268258	FEED LIFTING LINK HINGE PIN OIL PACKING (WICK) (2)
27	K415204	FEED LIFTING CRANK WITH K414501 AND K545213
28	K414501	FEED LIFTING CRANK PINCH SCREW
29	K545213	FEED LIFTING LINK HINGE PIN SET SCREW
30 31	K267933 K268131	FEED LIFTING ROCK SHAFT LOOPER THROW-OUT SAFETY LATCH
32	K543801 -012	LOOPER THROW OUT SAFETY LATCH RETAINING RING
33	K281208	LOOPER AND NEEDLE GUARD COMPLETE, NOS. K281207 AND K268380 (4)
34	K268380	LOOPER WITH K141478 AND K141494 (4)
35	K281207	NEEDLE GUARD (4)
36	K141494	NEEDLE GUARD SET SCREW (FRONT) (4)
37	K141478	NEEDLE GUARD SET SCREW (BACK) (4)
38	K281223	LOOPER DRIVING CONNECTION WITH K415500
39 40	K415500 K268208	LOOPER DRIVING CONNECTION BUSHING LOOPER CARRIER CRANK HINGE PIN WITH K268258
41	K268258	LOOPER CARRIER CRANK HINGE PIN OIL PACKING (WICK)
42	K281270 -511	LOOPER HOLDER WITH EIGHT K414558 (1/4"-1"-1/4")
43	K414558	LOOPER SET SCREW (8)
44	K281265	LOOPER CARRIER WITH TWO K415500
45	K415500	LOOPER CARRIER BUSHING (2)
46 47	K268093 K415168	LOOPER CARRIER SHAFT LOOPER CARRIER SHAFT BUSHING (LEFT) WITH K500264–833 AND K549024
47	K415108	LOOPER CARRIER SHAFT BUSHING (LEFT) WITH K500264-833 AND K549024
49	K549024	LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)
50	K500264 -833	LOOPER CARRIER SHAFT BUSHING SET SCREW (2)
51	K415174	LOOPER CARRIER CRANK WITH K414516
52	K414516	LOOPER CARRIER CRANK HINGE PIN PINCH SCREW
53	K415292	LOOPER CARRIER CRANK CLAMPING STUD
54 55	K541198 K548459	LOOPER CARRIER CRANK CLAMPING STUD NUT LOOPER CARRIER CRANK CLAMPING STUD WASHER
55 56	K414750 -002	LOOPER GARRIER GRANN GLAMPING STOD WASHER
57	K543804 -004	LOOPER HOLDER SCREW WASHER
58	K268132	LOOPER THROW-OUT SAFETY LATCH SPRING
59	K268133	LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET
60	K545205 -451	LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)
61	K415182	LOOPER THROW-OUT GEAR LOCKING PLUNGER
62 63	K250265 K414564	LOOPER THROW-OUT GEAR LOCKING PLUNGER SPRING LOOPER THROW-OUT GEAR LOCKING PLUNGER STOP SCREW
63 64	K414504 K414528	LOOPER THROW-OUT GEAR LOCKING PLUNGER STOP SCREW LOOPER THROW-OUT GEAR LOCKING PLUNGER STOP SCREW SET SCREW
65	K414528 K201477	LOOPER THROW-OUT GEAR LOCKING PLUNGER STOP SOREW SET SOREW
66	K268313	LOOPER THROW-OUT GEAR LOCKING PLUNGER HANDLE
67	K541453	LOOPER THROW-OUT GEAR LOCKING PLUNGER THUMB NUT
68	K415178	LOOPER THROW-OUT RACK ROD K415179 WITH K541451
69	K415179	LOOPER THROW-OUT RACK ROD
70	K541451	LOOPER THROW-OUT RACK ROD THUMB NUT
71 72	K415180 K500264 -833	LOOPER THROW-OUT GEAR WITH TWO K500264–833 LOOPER THROW-OUT GEAR SET SCREW (2)
72	K268096	LOOPER CARRIER SHAFT BUSHING (LEFT) POSITION PLATE
74	K414515	LOOPER CARRIER SHAFT BUSHING (LEFT) POSITION PLATE SCREW (2)
1		

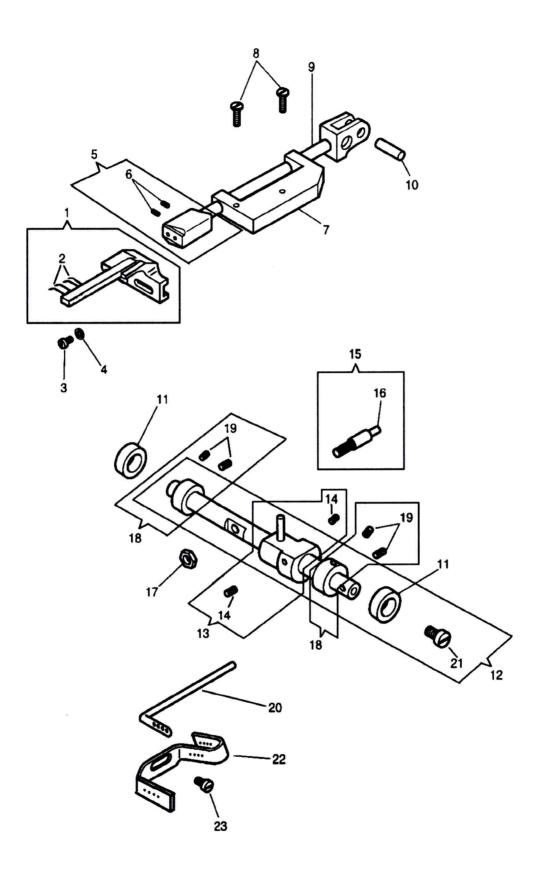


NO.	PART NO.	DESCRIPTION
1	K268374 -016	
2	K268162	SPREADER POINT (4)
3	K414552	SPREADER SCREW
4 5	K547670 K415196	SPREADER SCREW WASHER SPREADER HOLDER WITH TWO K414529
6	K415190 K414529	SPREADER HOLDER WITH TWO K414329 SPREADER HOLDER SET SCREW (2)
7	K268184	SPREADER BAR BRACKET
8	K414524	SPREADER BAR BRACKET SCREW (2)
9	K268499	SPREADER BAR
10 11	K268190 K415297	SPREADER DRIVING PIN SPREADER DRIVING ROCK SHAFT BUSHING (2)
12	K415389	SPREADER DRIVING ROCK SHAFT WITH K504019
13	K415194	SPREADER DRIVING CRANK WITH TWO K544204–001
14	K544204 -001	SPREADER DRIVING CRANK SET SCREW (2)
15 16	K281249 K32825	SPREADER DRIVING ROCK SHAFT SCREW STUD WITH K32825 SPREADER DRIVING ROCK SHAFT SCREW STUD OIL PACKING (WICK)
17	K545424	SPREADER DRIVING ROCK SHAFT SCREW STOD OLE FACKING (WICK)
18	K415065	SPREADER DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2)
19	K504020	SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)
20	K268052	LOOPER THREAD TAKE-UP ROD LOOPER THREAD TAKE-UP ROD SET SCREW
21 22	K504019 K268051	LOOPER THREAD TAKE-OP ROD SET SCREW LOOPER THREAD GUIDE (ON FRONT)
23	K414510	LOOPER THREAD GUIDE SCREW

EXTERNAL PARTS SEWING ARM

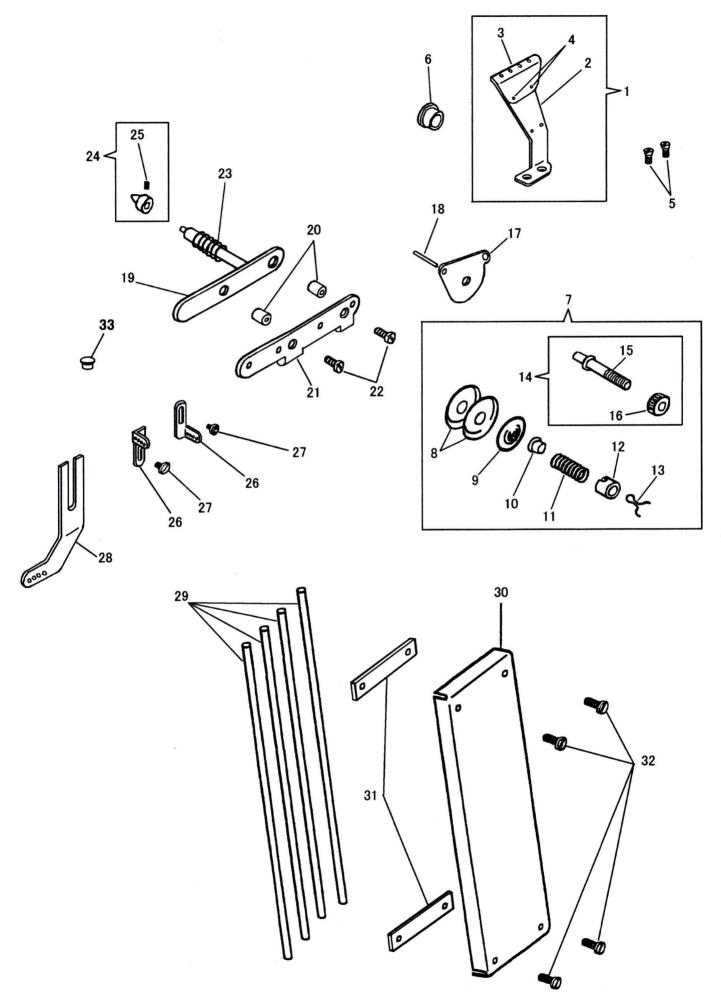


		PEOPOTAL'
NO.	PART NO.	DESCRIPTION
1	K268506	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET K268111 WITH K268505 AND TWO K50169
2	K268111	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET
3	K268505	LOOPER THREAD GUIDE (TOP OF ARM)
4	K50169	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)
5	K414537	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)
6	K544875	ARM PLUG
7	K267971	NEEDLE THREAD TENSION COMPLETE, NOS. K32572, K59538, K59539, K131741, K143657, K143658 AND TWO K2102 (4)
8	K2102	NEEDLE THREAD TENSION DISC (8)
9	K32572	NEEDLE THREAD TENSION RELEASING DISC (4)
10	K59538	NEEDLE THREAD TENSION NEELASING DISO (4) NEEDLE THREAD TENSION SPRING BUSHING (BACK) (4)
11	K131741	NEEDLE THREAD TENSION SPRING (BACK) (4)
12	K143657	NEEDLE THREAD TENSION SPRING (4) NEEDLE THREAD TENSION SPRING BUSHING (FRONT) (4)
12		
	K143658	NEEDLE THREAD TENSION THUMB NUT LOCKING SPRING (4)
14	K59539	NEEDLE THREAD TENSION STUD K50326 WITH K51570 (4)
15	K50326	NEEDLE THREAD TENSION STUD (4)
16	K51570	NEEDLE THREAD TENSION THUMB NUT (4)
17	K54279	NEEDLE THREAD TENSION THREAD GUIDE (DOUBLE) (4)
18	K226206	NEEDLE THREAD TENSION RELEASING PIN (4)
19	K415336	NEEDLE THREAD TENSION RELEASER
20	K543853 -003	NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)
21	K415224	NEEDLE THREAD TENSION BRACKET
22	K544336	NEEDLE THREAD TENSION BRACKET SCREW (2)
23	K204365	NEEDLE THREAD TENSION RELEASER SPRING
24	K415252	NEEDLE THREAD TENSION RELEASER CAP WITH K504048
25	K504048	NEEDLE THREAD TENSION RELEASER CAP SET SCREW
26	K268513	NEEDLE THREAD GUIDE (ON SIDE OF ARM) (2)
20	K414514	NEEDLE THREAD GUIDE SCREW (2)
27	K268312	NEEDLE THREAD GUIDE (ON ARM HEAD)
28 29	K268312 K268123	LOOPER THREAD TUBE (4)
<u>30</u> 31	K415342 -451 K268500	LOOPER THREAD TUBE COVER LOOPER THREAD TUBE COVER CUSHION (2)
31	K414639	LOOPER THREAD TUBE COVER CUSHION (2) LOOPER THREAD TUBE COVER SCREW (4)
33	K502986	ARM PLUG (3)
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		

EXTERNAL PARTS SEWING ARM

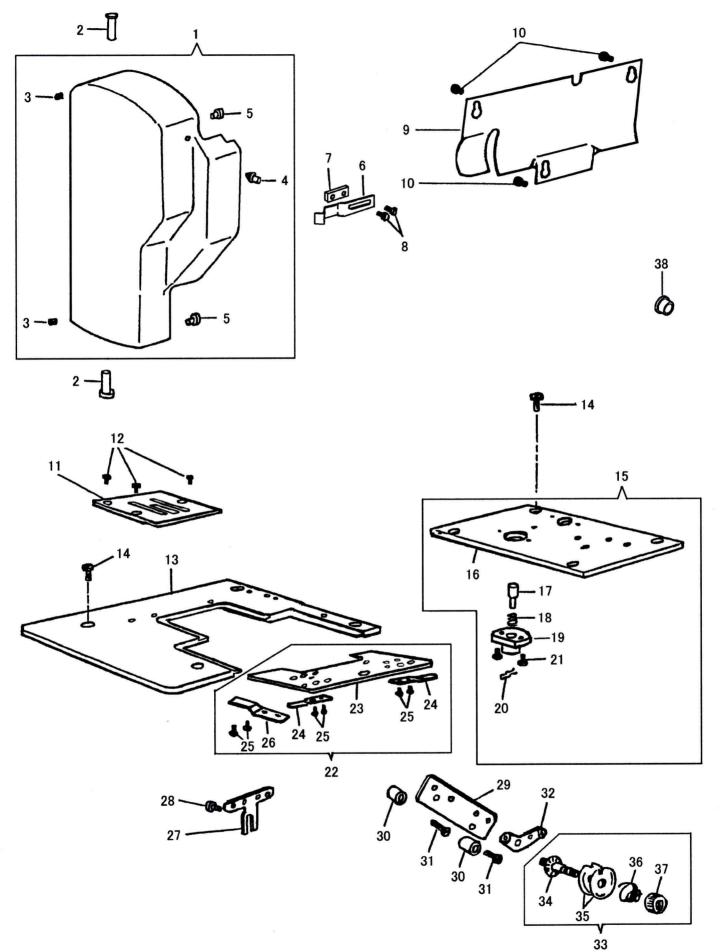

NO.	PART NO.	DESCRIPTION
1	K415012 -451	FACE PLATE WITH K268033 AND TWO EACH K228661 AND K545174-452
2	K268330	FACE PLATE HINGE STUD (2)
3	K545174 -452	FACE PLATE HINGE STUD SET SCREW (2)
4	K268033	FACE PLATE LOCK STUD
5	K228661	FACE PLATE CUSHION (NEOPRENE) (2)
6	K268032	FACE PLATE LOCK SPRING
7	K415016	FACE PLATE LOCK SPRING PLATE
8	K414534	FACE PLATE LOCK SPRING SCREW (2)
9	K268010 -451	ARM SIDE COVER
10	K545246 -452	ARM SIDE COVER SCREW (3)
11	K269379 -509	THROAT PLATE (1/4"-1"-1/4")
12	K414518	THROAT PLATE SCREW (3)
13	K415022 -451	BED PLATE (LEFT)
14	K414508	BED PLATE SCREW (8)
15	K415034 -451	BED PLATE (RIGHT) COMPLETE
16	K415035 -451	BED PLATE (RIGHT)
17	K268081	FEED REGULATING STUD
18	K270026	FEED REGULATING STUD SPRING
19	KE0075	FEED REGULATING STUD SOCKET
20	K240245	FEED REGULATING STUD RETAINING SPRING
21	K545249 -452	FEED REGULATING STUD SOCKET SCREW (2)
22	K415020	BED PLATE SLIDE COMPLETE, NOS. K415021, K267970 WITH TWO K268022 AND SIX K545086
22		
	K415021	BED PLATE SLIDE
24	K268022	BED PLATE SLIDE SPRING (2)
25	K545086	BED PLATE SLIDE SPRING SCREW (6)
26	K267970	BED PLATE SLIDE SPRING (LEFT UPPER)
27	K268373	LOOPER THREAD GUIDE (ON BED AT LOOPER)
28	K414556	LOOPER THREAD GUIDE (ON BED AT LOOPER) SCREW
20	K415255	LOOPER THREAD TENSION BRACKET
30	K543853 -003	LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)
31	K414532	LOOPER THREAD TENSION BRACKET SCREW (2)
32	K268333	LOOPER THREAD TENSION THREAD GUIDE (4)
33	K415294	LOOPER THREAD TENSION COMPLETE, NOS. K10148, K415291,K541452 AND TWO K412203 (4)
34	K415291	LOOPER THREAD TENSION STUD (4)
35	K412203	LOOPER THREAD TENSION DISC (8)
36		
	K10148	LOOPER THREAD TENSION SPRING (4)
37	K541452	LOOPER THREAD TENSION THUMB NUT (4)
38	KE0357	ARM PLUG
1		
1		
1		
1		
1		
1		

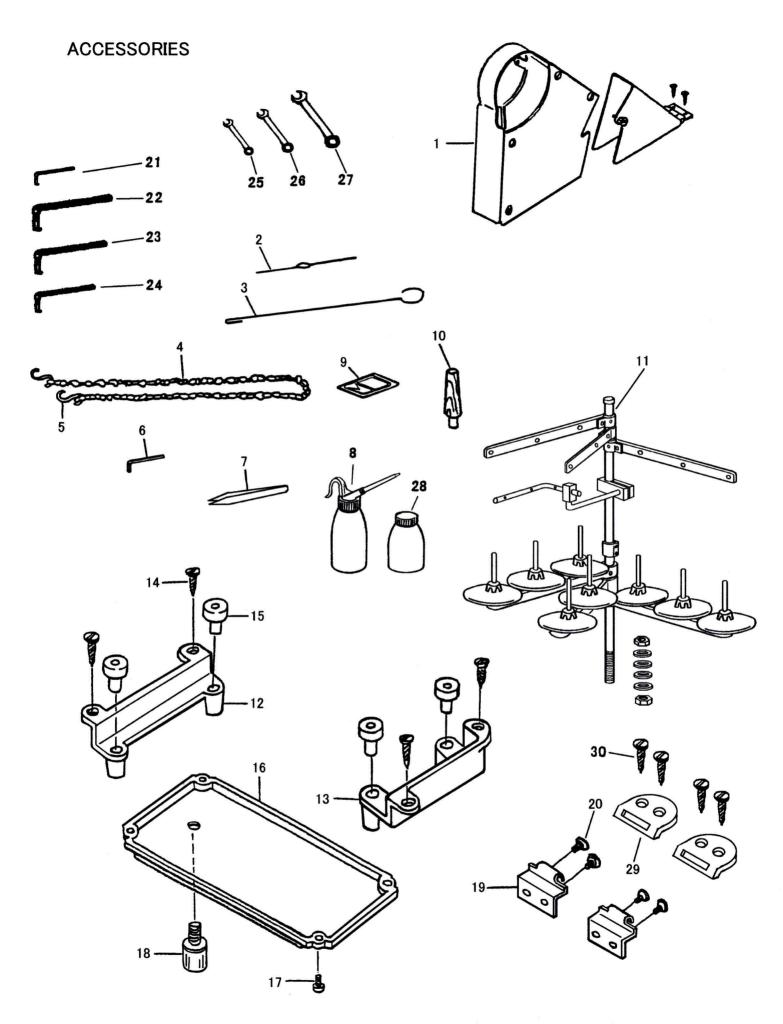

NO	PART NO.	DESCRIPTION
NO.		
1	K415433 -452	BELT GUARD COMPLETE
2	K268340	LOOPER THREADING WIRE
3	K415377	THREAD WIRE
4	K232365	FOOT LIFTER TREADLE CHAIN (41–1/2 INCHES LONG)
5	K202784	FOOT LIFTER TREADLE CHAIN HOOK (2)
6	K21887	WRENCH
7	K543162	TWEEZERS
8	KE0053	OILER
9	KN3260-01 -22	NEEDLE (62X57) SIZE 22 (5)
10	K410186	MACHINE REST PIN
11	K554471 -453	THREAD UNWINDER COMPLETE
12	K228733 -451	MACHINE REST (LEFT)
13	K228734 -451	MACHINE REST (RIGHT)
14	K414583	WOOD SCREW (FOR MACHINE REST) (4)
15	K228444	MACHINE CUSHION (NEOPRENE) (4)
16	K228731 -451	DRIP PAN
17	K545302	DRIP PAN SCREW (4)
18	K167448	OIL DRAIN JAR
19	K265307	BED HINGE CONNECTION (2)
20	K544381	BED HINGE CONNECTION (2) BED HINGE CONNECTION SCREW (4)
		WRENCH 3mm
21	KE0091	
22	KE0092	
23	KE0093	WRENCH 3/16"
24	KE0094	WRENCH 3/32"
25	KE0095	SPANNER 8mm
26	KE0096	SPANNER 9mm
27	KE0097	SPANNER 12mm
28	KE0117	BOTTLE WITH OIL (100cc)
29	KE0081	BED HINGE PLATE (2)
30	K414583	WOOD SCREW (FOR BED HINGE PLATE) (4)
1		
1		
1		
<u>ا</u>		

GAUGE PARTS (AVAILABLE AT EXTRA CHARGE)

* STANDARD GAUGE

U	NEEDLE BAR ROCK FRAME THREAD GUIDE	NEEDLE HOLDER	PRESSER FOOT	SPREADER	THROAT PLATE	FEED DOG	LOOPER HOLDER
* 1/4″-1″-1/4″	269138-512	269193-506	269240-509	269342-502	269379-509	269006-509	281270-511
1/4″-1/4″-1/4″	269138-503	269191-501	269237-505	269342-501	269379-501	269006-501	269065-501
3/8″-3/8″-3/8″	269138-542	269192-513	269237-515	269342-504	269379-517	269006-521	269065-550

Ĺ	PART NO.	DESCRIPTION	PAGE	NO.
	K229	LOOP DEFLECTOR SCREW (8)	10	3
	K2102	NEEDLE THREAD TENSION DISC (8)	14	8
	K10148	LOOPER THREAD TENSION SPRING (4)	16	36
	K21887	WRENCH	18	6
	K32572	NEEDLE THREAD TENSION RELEASING DISC (4)	14	9
	K32825	SPREADER DRIVING ROCK SHAFT SCREW STUD OIL PACKING (WICK)	12	16
	K32848	ARM SHAFT BALL BEARING (FRONT)	2	2
	K50169	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)	14	4
	K50326	NEEDLE THREAD TENSION STUD (4)	14	15
	K51570	NEEDLE THREAD TENSION THUMB NUT (4)	14	16
Γ	K54279	NEEDLE THREAD TENSION THREAD GUIDE (DOUBLE) (4)	14	17
L	K59538	NEEDLE THREAD TENSION SPRING BUSHING (BACK) (4)	14	10
L	K59539	NEEDLE THREAD TENSION STUD K50326 WITH K51570 (4)	14	14
L	K131741	NEEDLE THREAD TENSION SPRING (4)	14	11
L	K141478	NEEDLE GUARD SET SCREW (BACK) (4)	10	37
L	K141494	NEEDLE GUARD SET SCREW (FRONT) (4)	10	36
	K143657	NEEDLE THREAD TENSION SPRING BUSHING (FRONT) (4)	14	12
	K143658	NEEDLE THREAD TENSION THUMB NUT LOCKING SPRING (4)	14	13
	K167448	OIL DRAIN JAR	18	18
	K201363	FOOT LIFTER LEVER HINGE SCREW	6	9
	K201477	LOOPER THROW-OUT GEAR LOCKING PLUNGER SCREW BUSHING	10	65
	K202253	ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE (2)	2	38
l	K202330	NEEDLE BAR CONNECTING STUD OIL PACKING (WICK)	4	9
l	K202784	FOOT LIFTER TREADLE CHAIN HOOK (2)	18	5
l	K204348	FOOT LIFTER LEVER SPRING	6	1
L	K204365	NEEDLE THREAD TENSION RELEASER SPRING	14	23
l	K214529	NEEDLE BAR ROCK FRAME REGULATING STUD SPRING	4	31
l	K226206	NEEDLE THREAD TENSION RELEASING PIN (4)	14	18
L	K228444	MACHINE CUSHION (NEOPRENE) (4)	18	15
L	K228661	FACE PLATE CUSHION (NEOPRENE) (2)	16	5
-	K228731 -451	DRIP PAN	18	16
L		MACHINE REST (LEFT)	18	12
L		MACHINE REST (RIGHT)	18	13
L	K232365	FOOT LIFTER TREADLE CHAIN (41–1/2 INCHES LONG)	18	4
L	K240245	FEED REGULATING STUD RETAINING SPRING	16	20
L	K240243	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BRASS) (2)		20
L	K241763	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BRASS) (2)	2	20 40
L		FOOT LIFTER LEVER ROD COTTER PIN (2)	8 6	
	K248423	· · · · · <u></u> ,	-	11
L	K250265	LOOPER THROW-OUT GEAR LOCKING PLUNGER SPRING	10	62
ŀ	K265307	BED HINGE CONNECTION (2)	18	19
L	K267608	NEEDLE BAR ROCK FRAME DRIVING CONNECTION	2	18
L	K267608		8	26
L	K267609	NEEDLE BAR ROCK FRAME DRIVING CONNECTION K267608 WITH K271055	2	20
L	K267609	FEED DRIVING CONNECTION K267608 WITH K271055	8	28
L	K267623	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE	2	25
L	K267623	FEED DRIVING ECCENTRIC FRICTION PLATE	8	41
L	K267707	NEEDLE THREAD TENSION RELEASING PLATE	6	5
	K267933	FEED LIFTING ROCK SHAFT	10	30
	K267970	BED PLATE SLIDE SPRING (LEFT UPPER)	16	26
l	K267971	NEEDLE THREAD TENSION COMPLETE, NOS. K32572, K59538, K59539, K131741, K143657, K143658 AND TWO	14	7
ļ.			<u>-</u>	
I		ARM SHAFT BALL BEARING (BACK) HOUSING	2	40
l	K268009	ARM SHAFT OIL STOP BALL SPRING (FRONT)	2	12
l	K268010 -451	ARM SIDE COVER	16	9
l	K268022	BED PLATE SLIDE SPRING (2)	16	24
l	K268029	NEEDLE BAR ROCK FRAME NEEDLE BEARING (2)	4	15
l	K268032	FACE PLATE LOCK SPRING	16	6
l	K268033	FACE PLATE LOCK STUD	16	4
L	K268035	FEED BAR HINGE PIN	10	21
l	K268044	ARM SHAFT OIL STOP BALL SPRING (REAR)	2	15
.	K268044	BED SHAFT OIL STOP BALL SPRING	8	22
l	K268051	LOOPER THREAD GUIDE (ON FRONT)	12	22
l	K268052	LOOPER THREAD TAKE-UP ROD	12	20
l	K268056	NEEDLE BAR CONNECTING LINK WITH TWO K270266	4	1
l	K268065	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC	2	29
l	K268065	FEED DRIVING ECCENTRIC ADJUSTING DISC	8	44
l	K268066	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING	2	30
l	K268066	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING	8	45
l	K268070	FEED DRIVING ROCK SHAFT	10	17
l	K268074	FEED LIFTING CONNECTION	8	11
l	K268077	FEED LIFTING ECCENTRIC LUBRICATING PAD (WOOD)	8	9
ſ	K268078	FEED LIFTING LINK	10	24
		FEED LIFTING LINK HINGE PIN WITH K268258 (2)	10	25
	K268079		10	25
	K268079 K268081	FEED REGULATING STUD	16	17


PART NO.	DESCRIPTION	PAGE	
K268093		10	46
K268096	LOOPER CARRIER SHAFT BUSHING (LEFT) POSITION PLATE	10	73
K268102	LOOPER DRIVING CRANK OIL HOLE COVER	8	4
K268111	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET	14	2
K268123	LOOPER THREAD TUBE (4)	14	29
K268131	LOOPER THROW-OUT SAFETY LATCH	10	31
K268132	LOOPER THROW-OUT SAFETY LATCH SPRING	10	58
K268133	LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET	10	59
K268139	NEEDLE BAR CONNECTING LINK CAP WASHER	4	4
K268139	LOOPER DRIVING CONNECTION WASHER	8	6
K268144	NEEDLE BAR OILING FELT (2)	4	16
K268148	NEEDLE BAR ROCK FRAME REGULATING STUD	4	32
K268149	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE	4	30
K268162	SPREADER POINT (4)	12	2
K268172	PRESSER BAR	6	21
K268173	PRESSER BAR BUSHING	6	22
K268176	PRESSER BAR SPRING	6	24
K268184	SPREADER BAR BRACKET	12	7
K268190	SPREADER DRIVING PIN	12	10
K268208	LOOPER CARRIER CRANK HINGE PIN WITH K268258	10	40
K268214	ARM SHAFT OIL STOP BALL 5/32 IN. DIA. (2)	2	13
K268214	BED SHAFT OIL STOP BALL 5/32 IN. DIA.	8	23
K268220	SPREADER DRIVING ECCENTRIC THRUST WASHER (2)	8	51
K268258	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)	4	26
K268258	FEED LIFTING CONNECTION HINGE STUD OIL PACKING (WICK)	8	16
K268258	FEED DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)	8	32
K268258	FEED LIFTING LINK HINGE PIN OIL PACKING (WICK) (2)	10	26
K268258	LOOPER CARRIER CRANK HINGE PIN OIL PACKING (WICK)	10	41
K268264	ARM SHAFT OIL CONTROL ROD (WOOD)	2	11
K268265	BED SHAFT OIL CONTROL ROD (WOOD)	8	21
K268270	ARM SHAFT CONNECTION BELT (REINFORCED NEOPRENE)	2	36
K268278	NEEDLE BAR OILING FELT HOLDER (2)	4	17
K268312	NEEDLE THREAD GUIDE (ON ARM HEAD)	14	28
K268313	LOOPER THROW-OUT GEAR LOCKING PLUNGER HANDLE	10	66
K268318	LOOP DEFLECTOR (4)	10	2
K268330	FACE PLATE HINGE STUD (2)	16	2
K268333	LOOPER THREAD TENSION THREAD GUIDE (4)	16	32
K268340	LOOPER THREADING WIRE	18	2
K268373	LOOPER THREAD GUIDE (ON BED AT LOOPER)	16	27
K268380	LOOPER WITH K141478 AND K141494 (4)	10	34
K268499	SPREADER BAR	12	9
K268500	LOOPER THREAD TUBE COVER CUSHION (2)	14	31
K268505	LOOPER THREAD GUIDE (TOP OF ARM)	14	3
K268506	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET K268111 WITH K268505 AND TWO K50169	14	1
K268512	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD)	4	5
K268513	NEEDLE THREAD GUIDE (ON SIDE OF ARM) (2)	14	26
K269006 -509	FEED DOG WITH FOUR K268318 AND EIGHT K229 (1/4"-1"-1/4")	10	1
	NEEDLE BAR ROCK FRAME THREAD GUIDE (1/4"-1"-1/4")	4	19
	NEWDLE HOLDER WITH FOUR K545181-451(1/4"-1"-1/4")	4	11
	PRESSER FOOT COMPLETE (1/4"-1"-1/4")	6	23
	SPREADER WITH FOUR K268162 (1/4"-1"-1/4")	12	1
K269379 -509	THROAT PLATE (1/4"-1"-1/4")	16	11
K269616	FOOT LIFTER LIFTING LINK	6	14
K270026	FEED REGULATING STUD SPRING	16	18
K270266	NEEDLE BAR CONNECTING LINK NEEDLE BEARING (2)	4	2
K271055	NEEDLE BAR ROCK FRAME DRIVING CONNECTION NEEDLE BEARING	2	19
K271055	FEED DRIVING CONNECTION NEEDLE BEARING	8	27
K272142	ARM SHAFT BALL BEARING (BACK)	2	47
K272142	BED SHAFT THRUST COLLAR BEARING	8	62
K281207	NEEDLE GUARD (4)	10	35
K281208	LOOPER AND NEEDLE GUARD COMPLETE, NOS. K281207 AND K268380 (4)	10	33
K281209	NEEDLE BAR CRANK COMPLETE, NOS. K415133, K32848, K281258, KE0099 AND TWO K545205-451	2	3
K281212	BED SHAFT WITH K268044, K268214, K268265 AND K414578	8	20
K281216	BED SHAFT BALL BEARING	8	18
K281223	LOOPER DRIVING CONNECTION WITH K415500	10	38
K281224	BED SHAFT BALL BEARING	8	19
K281246	SPREADER DRIVING CONNECTION WITH K415368, K281248 AND K544201-001	8	52
K281248	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER	8	54
K281249	SPREADER DRIVING ROCK SHAFT SCREW STUD WITH K32825	12	15
K281256	COUNTERBALANCE WITH TWO K544208-005	2	34
K281258	NEEDLE BAR CRANK OIL PACKING (WICK)	2	9
K281265	LOOPER CARRIER WITH TWO K415500	10	44
K281270 -511	LOOPER HOLDER WITH EIGHT K414558 (1/4"-1"-1/4")	10	42
K281290	ARM SHAFT CONNECTION BELT PULLEY WITH TWO EACH K414546 AND K202253	2	37
K281292	BED SHAFT CONNECTION BELT PULLEY WITH TWO 414546	8	57
K281294	ARM SHAFT THRUST COLLAR WITH K272142 AND TWO K544209–005	2	46

PART NO.	DESCRIPTION	PAGE	
K281294	BED SHAFT THRUST COLLAR WITH K272142 AND TWO K544209-005	8	59
	ARM SHAFT THRUST COLLAR	2	48
K281295 -001	BED SHAFT THRUST COLLAR	8	60
K281296 -467	MACHINE PULLEY WITH K414525 AND K414526	2	42
	MACHINE PULLEY	2	43
K374098	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW (2)	2	26
K374098	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW (2)	8 8	42
K374099	LOOPER DRIVING CRANK POSITION SCREW (2) MACHINE REST PIN	-	2
K410186		18	10
K412011	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325	2	31
K412011	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325 LOOPER THREAD TENSION DISC (8)	8 16	46
K412203	FEED LIFTING CRANK PINCH SCREW		35
K414501 K414508	BED PLATE SCREW (8)	10 16	28 14
K414509	NEEDLE BAR ROCK FRAME DRIVING ARM PINCH SCREW (2)	4	22
K414510	LOOPER THREAD GUIDE SCREW	12	22
K414511	NEEDLE BAR CONNECTING STUD PINCH SCREW (2)	4	7
K414511	FEED LIFTING ROCK SHAFT CRANK PINCH SCREW (2)	8	13
K414511	FEED DRIVING ROCK SHAFT CRANK PINCH SCREW (2)	8	30
K414513	PRESSER BAR GUIDE BRACKET PINCH SCREW	6	18
K414514	NEEDLE THREAD GUIDE SCREW (2)	14	27
K414515	LOOPER CARRIER SHAFT BUSHING (LEFT) POSITION PLATE SCREW (2)	10	74
K414516	LOOPER CARRIER CRANK HINGE PIN PINCH SCREW	10	52
K414517	NEEDLE BAR CONNECTING LINK CAP WASHER SCREW	4	3
K414518	FEED DOG SCREW (2)	10	4
K414518	THROAT PLATE SCREW (3)	16	12
K414520	FEED DOG SHANK SCREW	10	8
K414522	NEEDLE BAR OILING FELT HOLDER SCREW (2)	4	18
K414524	SPREADER BAR BRACKET SCREW (2)	12	8
K414525	MACHINE PULLEY SET SCREW	2	44
K414526	MACHINE PULLEY POSITION SCREW	2	45
K414527	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE SET SCREW	4	33
K414528	NEEDLE BAR ROCK FRAME REGULATING STUD CAP SET SCREW	4	29
K414528	SPREADER DRIVING ECCENTRIC SET SCREW (2)	8	50
K414528	SPREADER DRIVING ECCENTRIC COUNTERBALANCE SET SCREW (2)	8	50
K414528	LOOPER THROW-OUT GEAR LOCKING PLUNGER STOP SCREW SET SCREW	10	64
K414529	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC SPACING COLLAR SET SCREW (2)	2	17
K414529	PRESSER BAR STOP COLLAR SET SCREW	6	20
K414529	FEED BAR HINGE PIN COLLAR SET SCREW	10	23
K414529	SPREADER HOLDER SET SCREW (2)	12	6
K414531	NEEDLE THREAD TENSION RELEASING PLATE SCREW	6	6
K414532	LOOPER THREAD TENSION BRACKET SCREW (2)	16	31
K414534	FACE PLATE LOCK SPRING SCREW (2)	16	8
K414535	PRESSER BAR GUIDE BRACKET ADJUSTING SCREW	6	17
K414537	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)	14	5
K414539	NEEDLE BAR ROCK FRAME THREAD GUIDE SCREW (2)	4	20
K414545	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD) SET SCREW	4	8
K414546	ARM SHAFT CONNECTION BELT PULLEY SET SCREW (2)	2	39
K414546	BED SHAFT CONNECTION BELT PULLEY SET SCREW (2)	8	58
K414549	FEED LIFTING ROCK SHAFT CRANK POSITION SCREW	8	14
K414552	SPREADER SCREW	12	3
K414555	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE SET SCREW (2)	2	24
K414555	FOOT LIFTER LEVER SPRING SCREW	6	2
K414555	FEED DRIVING ECCENTRIC FLANGE SET SCREW (2)	8	38
K414556	LOOPER THREAD GUIDE (ON BED AT LOOPER) SCREW	16	28
K414557	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)	2	27
K414557	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)	8	39
K414558	LOOPER SET SCREW (8)	10	43
K414559	FEED DOG SHANK ADJUSTING SCREW	10	6
K414562	PRESSER BAR SPRING SUPPORT SCREW	6	25
K414563	LOOPER DRIVING CRANK OIL HOLE COVER SCREW	8	5
K414564	LOOPER THROW-OUT GEAR LOCKING PLUNGER STOP SCREW	10	63
K414568	FOOT LIFTER LIFTING LINK HINGE SCREW	6	15
K414570	FOOT LIFTER LEVER SPRING SCREW EYE	6	3
K414572	FOOT LIFTER LEVER BELL CRANK HINGE SCREW	6	13
K414574	PRESSER BAR SPRING ADJUSTING SCREW	6	26
K414578	ARM SHAFT OIL STOP BALL SCREW (2)	2	14
K414578	BED SHAFT OIL STOP BALL SCREW	8	24
K414583	WOOD SCREW (FOR MACHINE REST) (4)	18	14
K414583	WOOD SCREW (FOR BED HINGE PLATE) (4)	18	30
K414639	LOOPER THREAD TUBE COVER SCREW (4)	14	32
K414750 -002	LOOPER HOLDER SCREW	10	56
K415012 -451	FACE PLATE WITH K268033 AND TWO EACH K228661 AND K545174-452	16	1
K415016	FACE PLATE LOCK SPRING PLATE	16	7
K415020	BED PLATE SLIDE COMPLETE, NOS. K415021, K267970 WITH TWO K268022 AND SIX K545086 BED PLATE SLIDE	16	22
K415021		16	23

PART NO.	DESCRIPTION	PAGE	NO.
K415022 -451	BED PLATE (LEFT)	16	13
K415034 -451	BED PLATE (RIGHT) COMPLETE	16	15
K415035 -451	BED PLATE (RIGHT)	16	16
K415043	NEEDLE BAR	4	10
K415053	NEEDLE BAR CONNECTING STUD WITH K202330, K414545 AND TWO K414511	4	6
K415055	PRESSER BAR STOP COLLAR WITH K414529	6	19
K415057	PRESSER BAR GUIDE BRACKET WITH K414513 AND K414535	6	16
K415065	FEED DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2)	10	15
K415065 K415065	FEED LIFTING ROCK SHAFT COLLAR WITH TWO K504020 (2) SPREADER DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2)	10 12	15 18
K415005 K415073	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND K374098	2	22
K415073	FEED DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND K374098	8	36
K415074 K415074	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE FEED DRIVING ECCENTRIC FLANGE	2 8	23 37
K415089 -451	NEEDLE BAR ROCK FRAME DRIVING ARM WITH TWO K414509	4	21
K415091	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD WITH K268258	4	23
K415091	FEED LIFTING CONNECTION HINGE STUD WITH K268258	8	15
K415091	FEED DRIVING CONNECTION HINGE STUD WITH K268258	8	31
K415098	NEEDLE BAR ROCK FRAME REGULATING STUD COMPLETE, NOS. K214529, K415099, K268148 AND K268149	4	27
K415099	NEEDLE BAR ROCK FRAME REGULATING STUD CAP WITH K414528	4	28
	FOOT LIFTER LEVER BELL CRANK	6	12
K415104 -451 K415128	FOOT LIFTER LEVER WITH K543850-001 ARM SHAFT WITH K268009, K268044, K268264, TWO EACH K268214 AND K414578	6 2	4 10
K415128	NEEDLE BAR CRANK WITH K500272–833. K544358 AND K549024	2	1
K415168	LOOPER CARRIER SHAFT BUSHING (LEFT) WITH K500264-833 AND K549024	10	47
K415170	LOOPER CARRIER SHAFT BUSHING (RIGHT) WITH K500264-833 AND K549024	10	48
K415174	LOOPER CARRIER CRANK WITH K414516	10	51
K415176	LOOPER DRIVING CRANK WITH K500264–833 AND TWO K374099	8	1
K415178	LOOPER THROW-OUT RACK ROD K415179 WITH K541451	10	68
K415179	LOOPER THROW-OUT RACK ROD	10	69
K415180	LOOPER THROW-OUT GEAR WITH TWO K500264–833	10	71
K415182	LOOPER THROW-OUT GEAR LOCKING PLUNGER	10	61
K415187	SPREADER DRIVING ECCENTRIC WITH K543808-002 AND TWO K414528	8	48
K415190	SPREADER DRIVING ECCENTRIC COUNTERBALANCE WITH TWO K414528	8	56
K415194	SPREADER DRIVING CRANK WITH TWO K544204-001	12	13
K415196 K415198	SPREADER HOLDER WITH TWO K414529 FEED BAR WITH K545213 AND TWO K544204–001	12 10	5 18
K415198	FEED DRIVING ROCK FRAME WITH K500264–833 AND K549024	10	10
K415202	FEED BAR HINGE PIN COLLAR WITH K414529	10	22
K415204	FEED LIFTING CRANK WITH K414501 AND K545213	10	27
K415206	FEED LIFTING ROCK SHAFT CRANK WITH K414549 AND TWO K414511	8	12
K415208	FEED DOG SHANK WITH K414559 AND K541200	10	5
K415210	FEED LIFTING ECCENTRIC WITH K268077 AND TWO K544208–005	8	8
K415213	FEED DRIVING ROCK SHAFT CRANK WITH TWO K414511	8	29
K415215	FEED DRIVING ROCK SHAFT CRANK K415213 WITH K267609, K415091, K541197 AND K545297	8	25
K415252	NEEDLE THREAD TENSION RELEASER CAP WITH K504048	14	24
K415254	NEEDLE THREAD TENSION BRACKET	14	21
K415255	LOOPER THREAD TENSION BRACKET	16	29
K415291 K415292	LOOPER THREAD TENSION STUD (4) LOOPER CARRIER CRANK CLAMPING STUD	16 10	34 53
K415292 K415294	LOOPER CARRIER CRAINE CLAMPING STOD LOOPER THREAD TENSION COMPLETE, NOS. K10148, K415291,K541452 AND TWO K412203 (4)	10	53 33
K415297	FEED DRIVING ROCK SHAFT BUSHING (2)	10	14
K415297	FEED LIFTING ROCK SHAFT BUSHING (2)	10	14
K415297	SPREADER DRIVING ROCK SHAFT BUSHING (2)	12	11
K415308	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC SPACING COLLAR WITH TWO K414529	2	16
K415336	NEEDLE THREAD TENSION RELEASER	14	19
	LOOPER THREAD TUBE COVER	14	30
K415360	FOOT LIFTER LIFTING LINK STOP PIN	6	27
K415368	SPREADER DRIVING CONNECTION NEEDLE BEARING	8	53
K415377	THREAD WIRE	18	3
K415389 K415393	SPREADER DRIVING ROCK SHAFT WITH K504019 NEEDLE BAR ROCK FRAME	12 4	12 14
	BELT GUARD COMPLETE	4 18	14
K415433 -452 K415500	LOOPER DRIVING CONNECTION BUSHING	18	۱ 39
K415500	LOOPER CARRIER BUSHING (2)	10	45
	LOOPER DRIVING CRANK SET SCREW	8	3
	FEED DRIVING ROCK FRAME SET SCREW	10	13
	LOOPER CARRIER SHAFT BUSHING SET SCREW (2)	10	50
	LOOPER THROW-OUT GEAR SET SCREW (2)	10	72
K500272 -833	NEEDLE BAR CRANK SET SCREW	2	6
K502986	ARM PLUG (3)	14	33
K504019	LOOPER THREAD TAKE-UP ROD SET SCREW	12	21
K504020	FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4)	10	16
K504020	FEED LIFTING ROCK SHAFT COLLAR SET SCREW (4)	10	16

	PART NO.	DESCRIPTION	PAGE	NO.
	K504020	SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)	12	19
	K504048	NEEDLE THREAD TENSION RELEASER CAP SET SCREW	14	25
	K541166 -003	FEED DOG SHANK SCREW LOCK NUT	10	10
	K541197	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD NUT	4	24
	K541197		8	17
	K541197	FEED DRIVING CONNECTION HINGE STUD NUT	8	33
	K541198 K541200	LOOPER CARRIER CRANK CLAMPING STUD NUT FEED DOG SHANK ADJUSTING SCREW LOCK NUT	10 10	54 7
	K541200 K541451	LOOPER THROW-OUT RACK ROD THUMB NUT	10	70
	K541452	LOOPER THREAD TENSION THUMB NUT (4)	16	37
	K541453	LOOPER THROW-OUT GEAR LOCKING PLUNGER THUMB NUT	10	67
	K543162	TWEEZERS	18	7
	K543801 -012	LOOPER THROW-OUT SAFETY LATCH RETAINING RING	10	32
	K543804 -004	NEEDLE THREAD TENSION RELEASING PLATE SCREW WASHER	6	7
	K543804 -004	FEED DOG SHANK SCREW WASHER	10	9
		LOOPER HOLDER SCREW WASHER	10	57
		SPREADER DRIVING ECCENTRIC PIN	8	49
	K543850 -001	NEEDLE THREAD TENSION RELEASING PLATE PIN	6	8
		NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)	14	20
		LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)	16	30
		SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER SET SCREW FEED BAR SET SCREW (2)	8 10	55 19
		SPREADER DRIVING CRANK SET SCREW (2)	12	14
		COUNTERBALANCE SET SCREW (2)	2	35
	K544208 -005	FEED LIFTING ECCENTRIC SET SCREW (2)	8	10
	K544209 -005	ARM SHAFT THRUST COLLAR SET SCREW (2)	2	49
	K544209 -005	BED SHAFT THRUST COLLAR SET SCREW (2)	8	61
	K544213 -001	LOOPER DRIVING CONNECTION WASHER SCREW	8	7
	K544325	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)	2	32
	K544325	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)	8	47
	K544336	ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)	2	41
	K544336	NEEDLE THREAD TENSION BRACKET SCREW (2)	14	22
	K544358	NEEDLE BAR CRANK POSITION SCREW CHECK SCREW	2	5
	K544381	BED HINGE CONNECTION SCREW (4)	18	20
	K544875 K545086	ARM PLUG BED PLATE SLIDE SPRING SCREW (6)	14 16	6 25
		FACE PLATE HINGE STUD SET SCREW (2)	16	3
	K545181 -451	NEEDLE SET SCREW (4)	4	12
	K545205 -451	NEEDLE BAR CRANK COVER SCREW (2)	2	8
	K545205 -451	LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)	10	60
	K545213	FEED LIFTING LINK HINGE PIN SET SCREW	10	20
	K545213	FEED LIFTING LINK HINGE PIN SET SCREW	10	29
		ARM SIDE COVER SCREW (3)	16	10
		FEED REGULATING STUD SOCKET SCREW (2)	16	21
	K545297	NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW	4	25
	K545297	FEED DRIVING CONNECTION CAP SCREW	8	34
	K545302 K545424	DRIP PAN SCREW (4) SPREADER DRIVING ROCK SHAFT SCREW STUD NUT	18 12	17
	K545424 K547670	SPREADER SCREW WASHER	12	17 4
	K548459	LOOPER CARRIER CRANK CLAMPING STUD WASHER	10	55
	K549024	NEEDLE BAR CRANK POSITION SCREW	2	4
	K549024	FEED DRIVING ROCK FRAME POSITION SCREW	10	12
	K549024	LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)	10	49
	K554471 -453	THREAD UNWINDER COMPLETE	18	11
	KE0003	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND	2	33
		K415073		
	KE0003	FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073	8	35
	KE0004	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC	2	21
	KE0004		8	43
	KE0053 KE0075	OILER FEED REGULATING STUD SOCKET	18 16	8 19
	KE0075 KE0081	BED HINGE PLATE (2)	16	29
	KE0081 KE0091	WRENCH 3mm	18	29
	KE0091	WRENCH 4mm	18	21
	KE0093	WRENCH 3/16"	18	23
	KE0094	WRENCH 3/32"	18	24
	KE0095	SPANNER 8mm	18	25
	KE0096	SPANNER 9mm	18	26
	KE0097	SPANNER 12mm	18	27
	KE0099	NEEDLE BAR CRANK COVER	2	7
	KE0117	BOTTLE WITH OIL (100cc)	18	28
	KE0254	PRESSER BAR SPRING CUSHION SPRING	6	28
1				
	KE0357	ARM PLUG	16	38
		ARM PLUG NEEDLE (62X57) SIZE 22 (4) NEEDLE (62X57) SIZE 22 (5)	16 4 18	38 13 9

Threading from Thread Unwinder to Machine Head

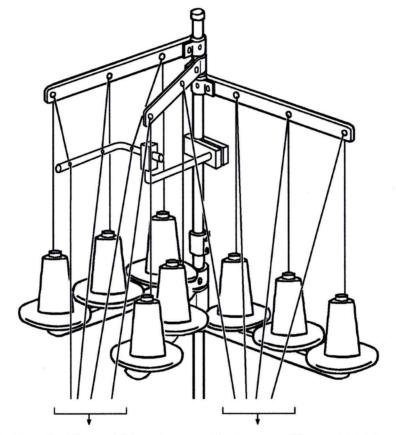

To Needle Thread Tension

To Looper Thread Guide

KAMBARA Engineering Co., Ltd.

Yoshida Soko 1F, 1508-4 Shimohiraide Utsunomiya, Tochigi 321-0903, Japan TEL: 81-28-683-6636 FAX: 81-28-683-6638 https://kambara-engineering.jp Printed in Japan