


ILLUSTRATED PARTS LIST

FOR


300SD MACHINE

UPPER SHAFT ASSEMBLY

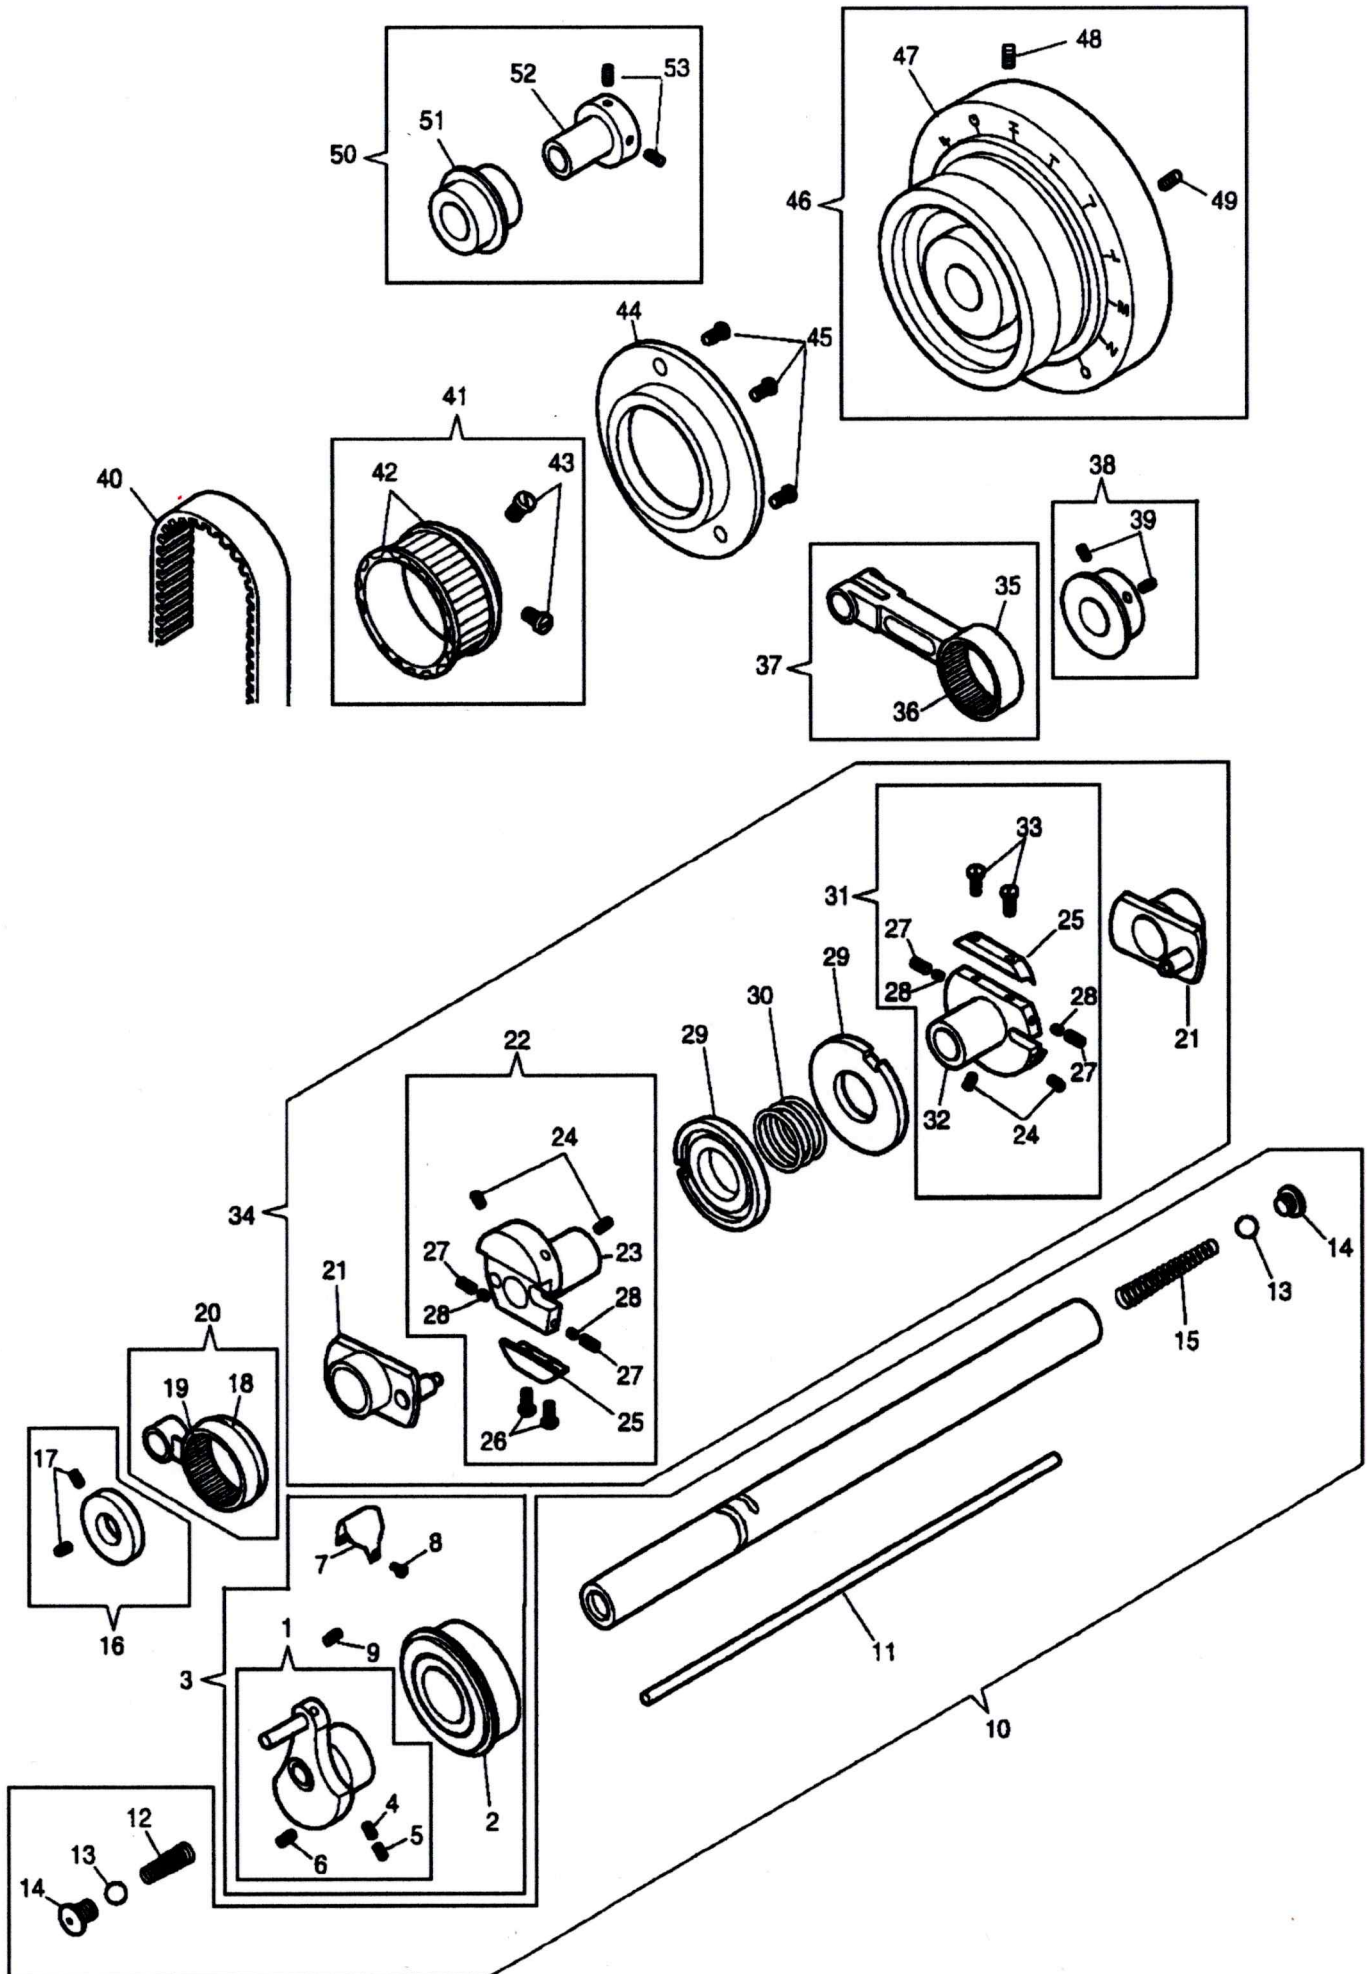


NO.	PART NO.	DESCRIPTION
1	K415138	NEEDLE BAR CRANK WITH K500272-833, K544358 AND K549024
2	K32848	ARM SHAFT BALL BEARING (FRONT)
3	K281239	NEEDLE BAR CRANK COMPLETE, NOS. K415138, K32848, K281258, KE0099 AND TWO K545205-451
4	K549024	NEEDLE BAR CRANK POSITION SCREW
5	K544358	NEEDLE BAR CRANK POSITION SCREW CHECK SCREW
6	K500272 -833	NEEDLE BAR CRANK SET SCREW
7	KE0099	NEEDLE BAR CRANK COVER
8	K545205 -451	NEEDLE BAR CRANK COVER SCREW (2)
9	K281258	NEEDLE BAR CRANK OIL PACKING (WICK)
10	KE0391	ARM SHAFT WITH K268009, K268044, K268264, TWO EACH K268214 AND K414578
11	K268264	ARM SHAFT OIL CONTROL ROD (WOOD)
12	K268009	ARM SHAFT OIL STOP BALL SPRING (FRONT)
13	K268214	ARM SHAFT OIL STOP BALL 5/32 IN. DIA. (2)
14	K414578	ARM SHAFT OIL STOP BALL SCREW (2)
15	K268044	ARM SHAFT OIL STOP BALL SPRING (REAR)
16	K415308	LIFTING ECCENTRIC SPACING COLLAR WITH TWO K414529
17	K414529	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC SPACING COLLAR SET SCREW (2)
18	K267608	NEEDLE BAR ROCK FRAME DRIVING CONNECTION
19	K271055	NEEDLE BAR ROCK FRAME DRIVING CONNECTION NEEDLE BEARING
20	K267609	NEEDLE BAR ROCK FRAME DRIVING CONNECTION K267608 WITH K271055
21	K267610	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC
21	K267610	LIFTING ECCENTRIC
22	K415078	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE K415079 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND K374098
23	K415079	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE
24	K414555	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE SET SCREW (2)
24	K414555	LIFTING ECCENTRIC FLANGE SET SCREW (2)
25	K267623	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE
25	K267623	LIFTING ECCENTRIC FRICTION PLATE
26	K374098	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW (2)
27	K414557	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)
27	K414557	LIFTING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)
28	K241763	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BACK) (2)
28	K241763	LIFTING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING
29	K268065	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC
29	K268065	LIFTING ECCENTRIC ADJUSTING DISC
30	K267618	LIFTING ECCENTRIC ADJUSTING DISC SPRING
31	K415076	LIFTING ECCENTRIC FLANGE K415077 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND K374098
32	K415077	LIFTING ECCENTRIC FLANGE
33	K374098	LIFTING ECCENTRIC FLANGE FRICTION PLATE SCREW (2)
34	K415081	LIFTING ECCENTRIC AND NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. K267618, K415076, K415078 AND TWO EACH K267610, K268065
35	K268490	LIFTING ECCENTRIC CONNECTION
36	K271055	LIFTING ECCENTRIC CONNECTION NEEDLE BEARING
37	K268491	LIFTING ECCENTRIC CONNECTION WITH K271055
38	K415086	LIFTING ECCENTRIC SPACING COLLAR WITH TWO K414529
39	K414529	LIFTING ECCENTRIC SPACING COLLAR SET SCREW (2)
40	K268270	ARM SHAFT CONNECTION BELT (REINFORCED NEOPRENE)
41	K281290	ARM SHAFT CONNECTION BELT PULLEY WITH TWO EACH K414546 AND K202253
42	K202253	ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE (2)
43	K414546	ARM SHAFT CONNECTION BELT PULLEY SET SCREW (2)
44	K268004 -451	ARM SHAFT BALL BEARING (BACK) HOUSING
45	K544336	ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)
46	K281296 -467	MACHINE PULLEY WITH K414525 AND K414526
47	K281297 -467	MACHINE PULLEY
48	K414525	MACHINE PULLEY SET SCREW
49	K414526	MACHINE PULLEY POSITION SCREW
50	K281294	ARM SHAFT THRUST COLLAR WITH K272142, K281295-001 AND TWO K544209-005
51	K272142	ARM SHAFT BALL BEARING (BACK)
52	K281295 -001	ARM SHAFT THRUST COLLAR
53	K544209 -005	ARM SHAFT THRUST COLLAR SET SCREW (2)

FRONT ASSEMBLY SEWING ARM

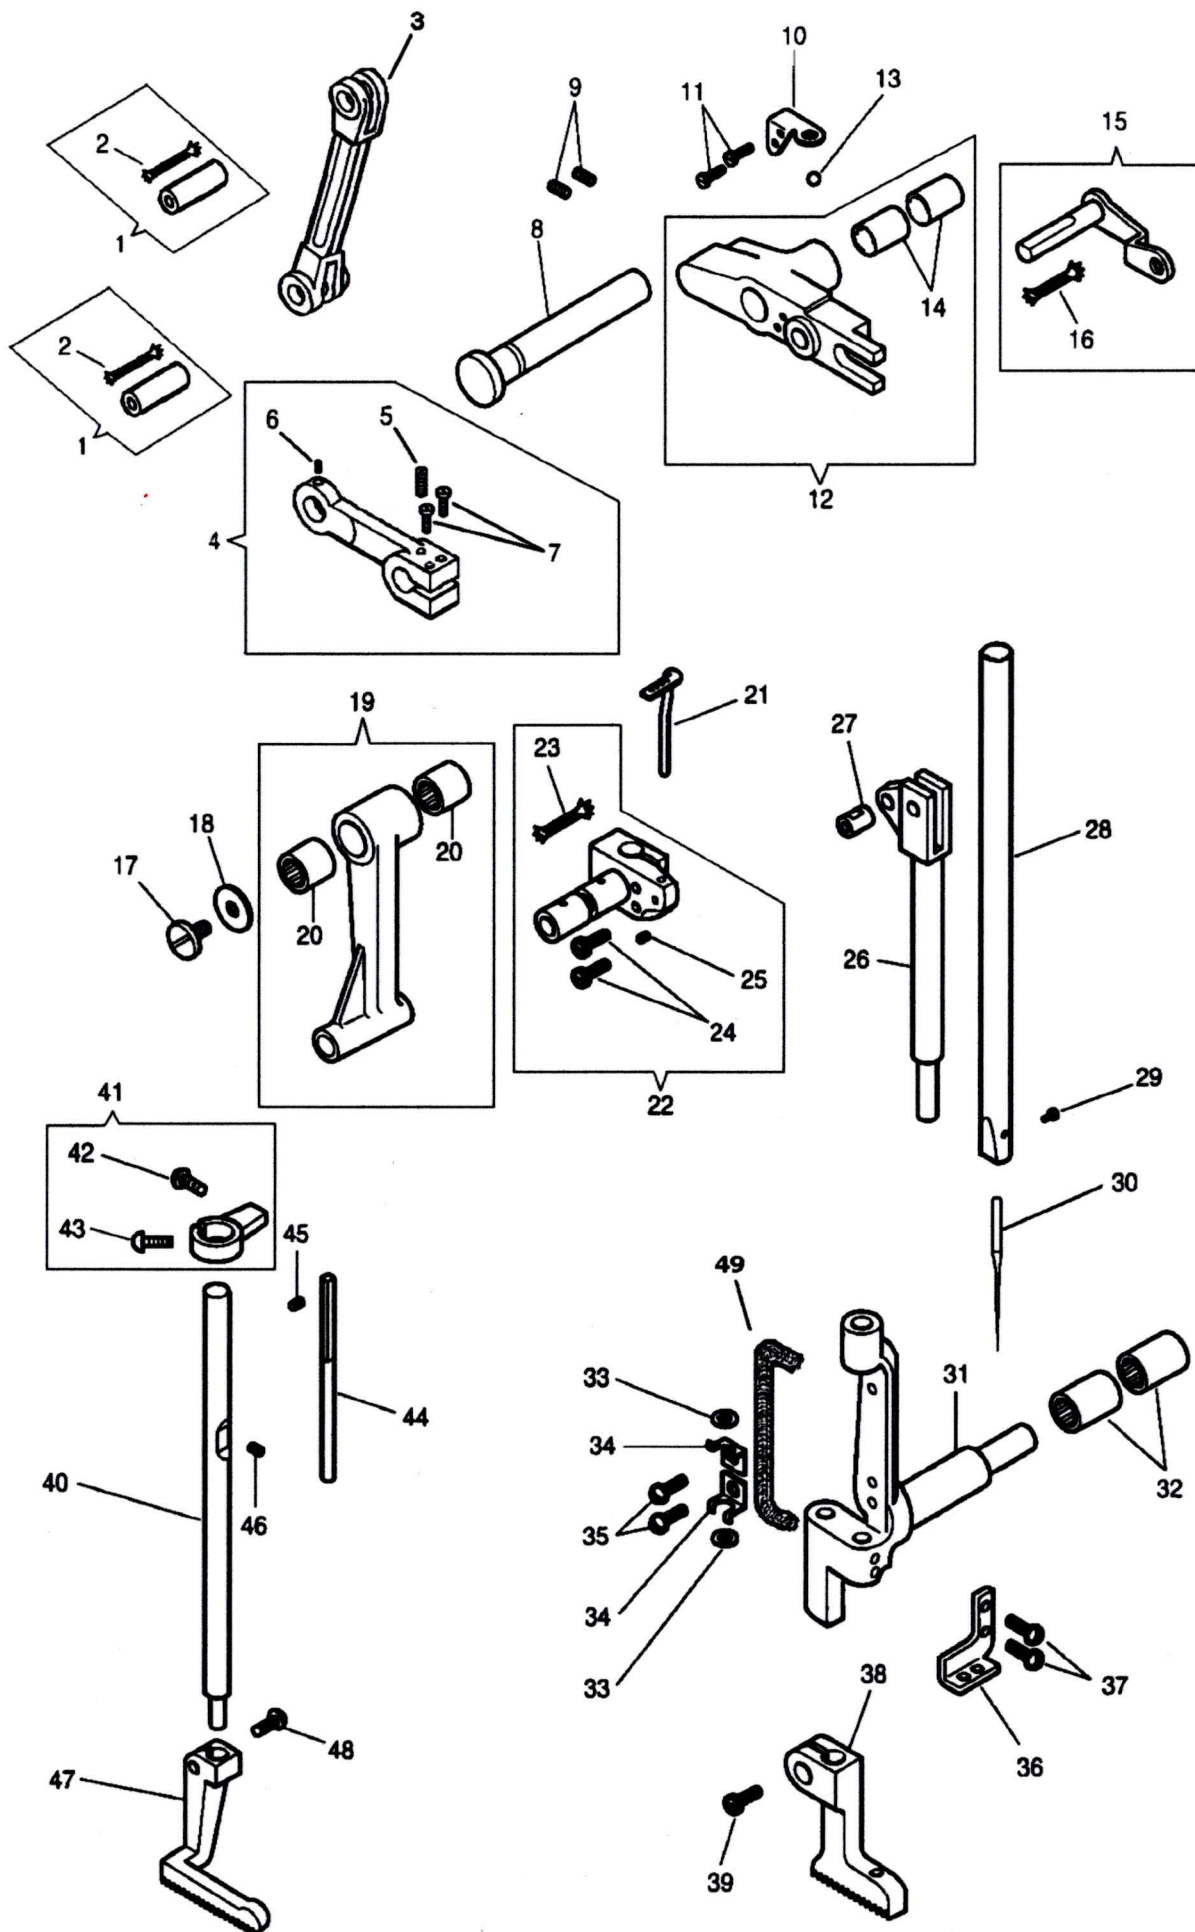


NO.	PART NO.	DESCRIPTION
1	K267617	LIFTING LINK HINGE PIN WITH K268258
1	K267617	LIFTING LINK HINGE PIN WITH K268258
2	K268258	LIFTING ECCENTRIC CONNECTION HINGE PIN OIL PACKING (WICK)
2	K268258	LIFTING LINK HINGE PIN OIL PACKING (WICK)
3	K267627	LIFTING LINK
4	K415061	LIFTING CRANK WITH K141424, K141338 AND TWO K414511
5	K141338	LIFTING CRANK SET SCREW
6	K141424	LIFTING LINK HINGE PIN SET SCREW
7	K414511	LIFTING CRANK PINCH SCREW (2)
8	K267626	LIFTING LEVER HINGE STUD
9	K544322	LIFTING LEVER HINGE STUD SET SCREW (2)
10	K267718	PRESSER BAR SPRING ARM BALL RETAINER
11	K414548	PRESSER BAR SPRING ARM BALL RETAINER SCREW (2)
12	K415067	LIFTING LEVER WITH TWO KE0008
13	K276025	PRESSER BAR SPRING ARM BALL
14	KE0008	LIFTING LEVER NEEDLE BUSHING (2)
15	K267631	LIFTING PRESSER BAR LIFTING CRANK WITH K268258
16	K268258	LIFTING PRESSER BAR LIFTING CRANK OIL PACKING (WICK)
17	K414517	NEEDLE BAR CONNECTING LINK CAP WASHER SCREW
18	K268139	NEEDLE BAR CONNECTING LINK CAP WASHER
19	K281916	NEEDLE BAR CONNECTING LINK WITH TWO K270266
20	K270266	NEEDLE BAR CONNECTING LINK NEEDLE BEARING (2)
21	K268512	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD)
22	K281914	NEEDLE BAR CONNECTING STUD WITH K202330, K414545 AND TWO K414511
23	K202330	NEEDLE BAR CONNECTING STUD OIL PACKING (WICK)
24	K414511	NEEDLE BAR CONNECTING STUD PINCH SCREW (2)
25	K414545	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD) SET SCREW
26	K267657	VIBRATING PRESSER BAR
27	K267658	VIBRATING PRESSER BAR HINGE STUD
28	K281912	NEEDLE BAR
29	K414519	NEEDLE SET SCREW
30	62x59	NEEDLE (SIZE 160/23)
31	KE0360	NEEDLE BAR ROCK FRAME
32	K268029	NEEDLE BAR ROCK FRAME NEEDLE BEARING (2)
33	K268144	NEEDLE BAR OILING FELT (2)
34	K268278	NEEDLE BAR OILING FELT HOLDER (2)
35	K414522	NEEDLE BAR OILING FELT HOLDER SCREW (2)
36	K268219	NEEDLE BAR ROCK FRAME THREAD GUIDE
37	K414539	NEEDLE BAR ROCK FRAME THREAD GUIDE SCREW (2)
38	K559057	VIBRATING PRESSER FOOT
39	K414638	VIBRATING PRESSER FOOT PINCH SCREW
40	K267628	LIFTING PRESSER BAR
41	K415059	LIFTING PRESSER BAR GUIDE BLOCK WITH K414512 AND K414516
42	K414516	LIFTING PRESSER BAR GUIDE BLOCK ADJUSTING SCREW
43	K414512	LIFTING PRESSER BAR GUIDE BLOCK PINCH SCREW
44	K267907	LIFTING PRESSER BAR GUIDE ROD
45	K544301	LIFTING PRESSER BAR GUIDE ROD SET SCREW (UPPER)
46	K544301	LIFTING PRESSER BAR GUIDE ROD SET SCREW (LOWER)
47	KE0070	LIFTING PRESSER FOOT
48	K414638	LIFTING PRESSER PINCH SCREW
49	KE0341 -006	NEEDLE BAR OILING FELT CONNECTION WICK

EXTERNAL PARTS SEWING ARM

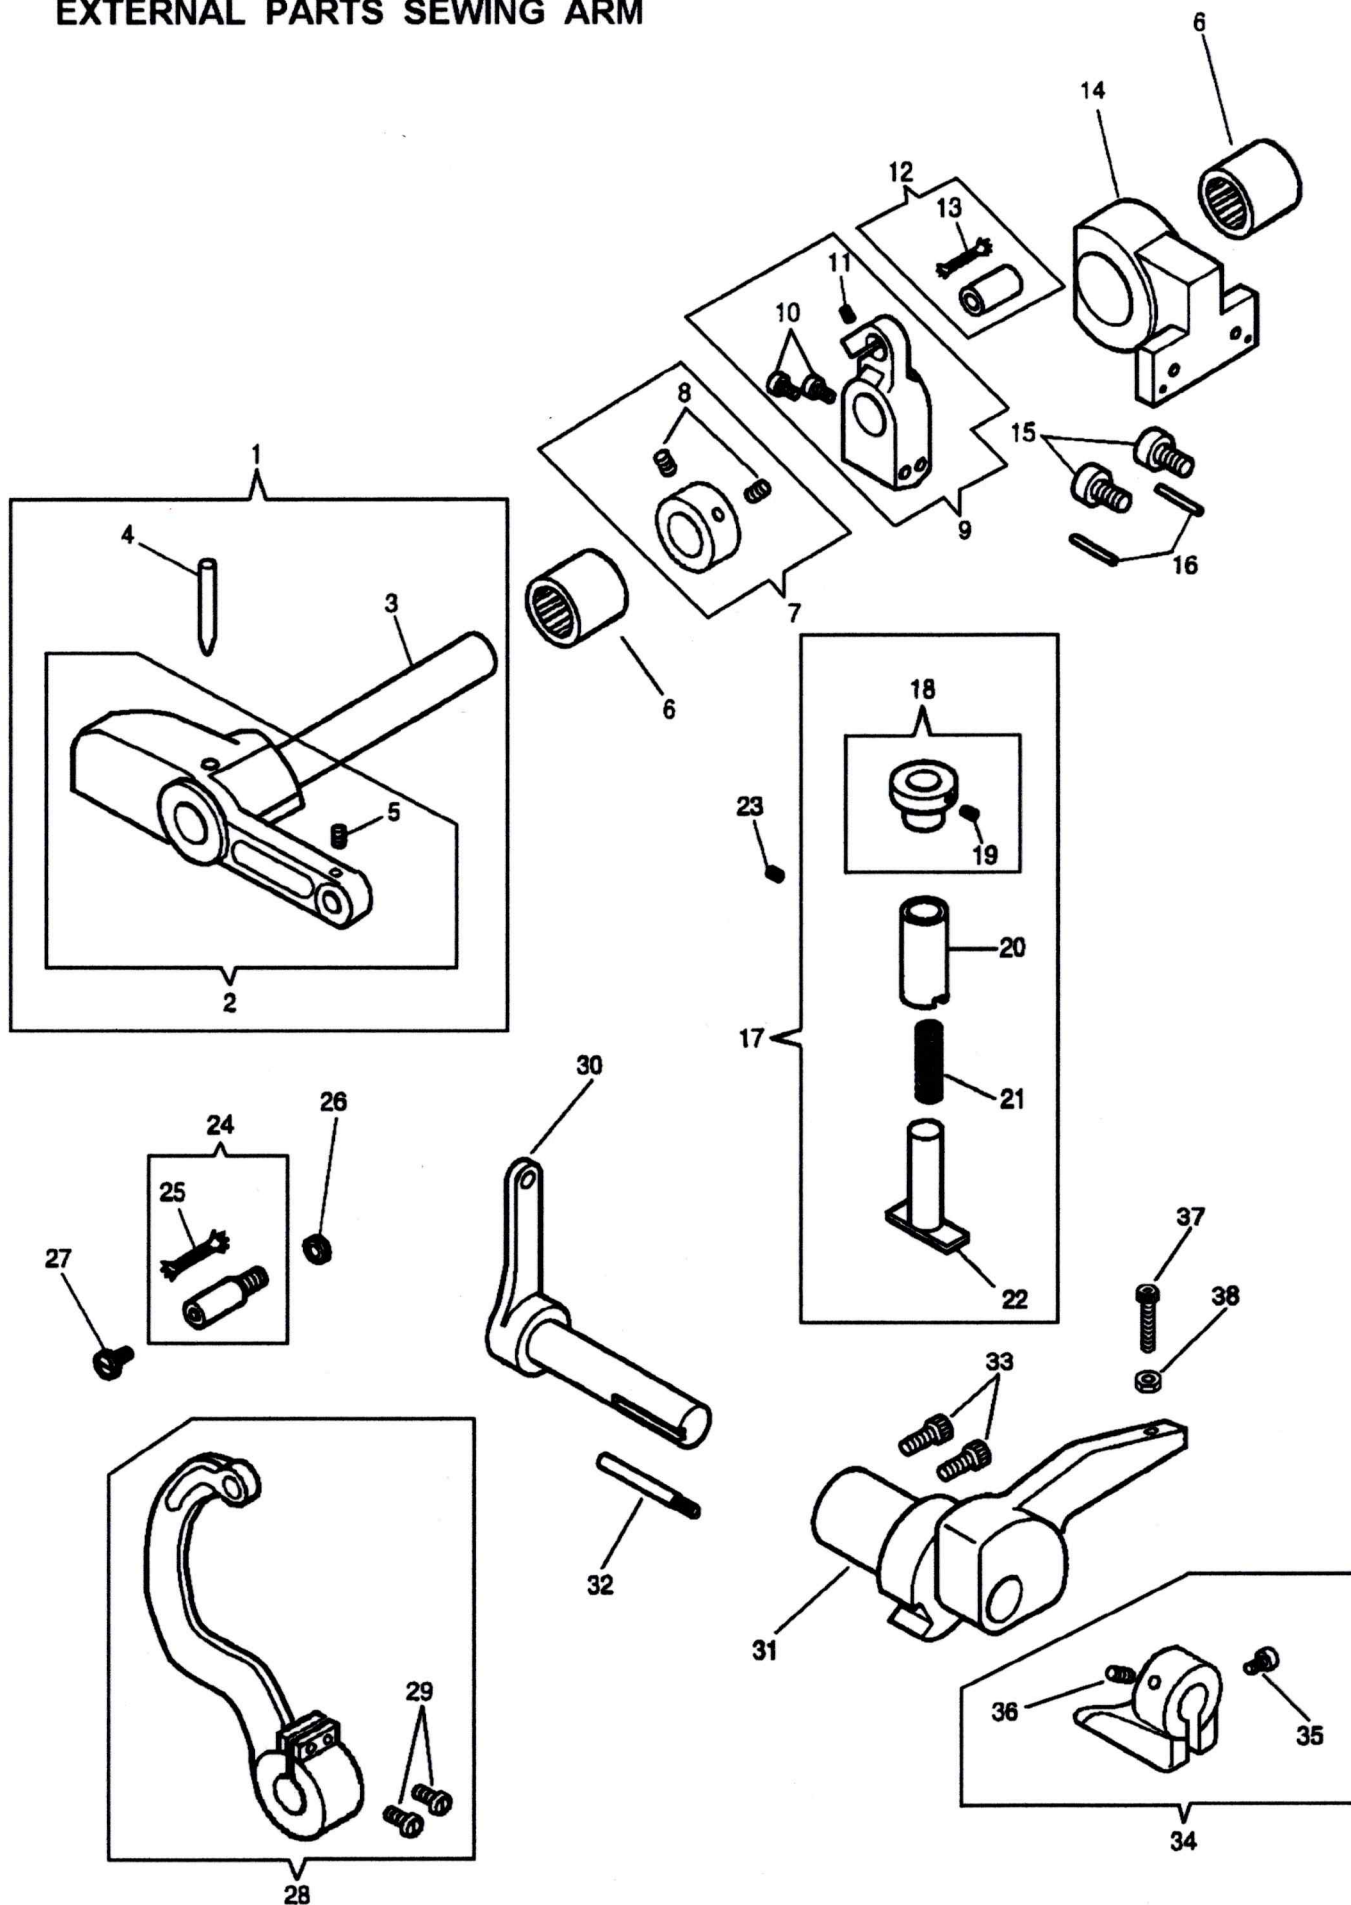


NO.	PART NO.	DESCRIPTION
1	K32789	LIFTING ROCK SHAFT K267633 WITH K32788 AND K548035
2	K32788	LIFTING ROCK SHAFT CRANK WITH K141424
3	K267633	LIFTING ROCK SHAFT
4	K548035	LIFTING ROCK SHAFT CRANK PIN
5	K141424	LIFTING LINK HINGE PIN SET SCREW
6	K267110	LIFTING ROCK SHAFT NEEDLE BEARING (2)
7	K415065	LIFTING ROCK SHAFT COLLAR WITH TWO K504020
8	K504020	LIFTING ROCK SHAFT COLLAR SET SCREW (2)
9	K415069	LIFTING ECCENTRIC CONNECTION CRANK WITH K414543 AND TWO K414509
10	K414509	LIFTING ECCENTRIC CONNECTION CRANK PINCH SCREW (2)
11	K414543	LIFTING ECCENTRIC CONNECTION HINGE PIN PINCH SCREW
12	K267617	LIFTING ECCENTRIC CONNECTION HINGE PIN WITH K268258
13	K268258	LIFTING ECCENTRIC CONNECTION HINGE PIN OIL PACKING (WICK)
14	K415071 -451	LIFTING ROCK SHAFT BRACKET
15	K414504	LIFTING ROCK SHAFT BRACKET SCREW (2)
16	K543841 -001	LIFTING ROCK SHAFT BRACKET POSITION PIN (2)
17	K415098	NEEDLE BAR ROCK FRAME REGULATING STUD COMPLETE, NOS. K214529, K415099, K268148 AND K268149
18	K415099	NEEDLE BAR ROCK FRAME REGULATING STUD CAP WITH K414528
19	K414528	NEEDLE BAR ROCK FRAME REGULATING STUD CAP SET SCREW
20	K268149	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE
21	K214529	NEEDLE BAR ROCK FRAME REGULATING STUD SPRING
22	K268148	NEEDLE BAR ROCK FRAME REGULATING STUD
23	K414527	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE SET SCREW
24	K415091	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD WITH 268258
25	K268258	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD OIL PACKING
26	K541197	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD NUT
27	K545297	NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW
28	K415094 -451	NEEDLE BAR ROCK FRAME DRIVING ARM WITH TWO K414790
29	K414790	NEEDLE BAR ROCK FRAME DRIVING ARM PINCH SCREW (2)
30	K267612	FOOT LIFTER CRANK
31	K281927	PRESSER BAR SPRING ARM FULCRUM
32	K414566	FOOT LIFTER CRANK STOP SCREW STUD
33	K350604	PRESSER BAR SPRING ARM FULCRUM SET SCREW (2)
34	K415122	FOOT LIFTER ARM WITH K414509 AND K545213
35	K414509	FOOT LIFTER ARM PINCH SCREW
36	K545213	FOOT LIFTER ARM SET SCREW
37	K414750 -004	PRESSER BAR SPRING ARM FULCRUM SCREW
38	K541166 -001	PRESSER BAR SPRING ARM FULCRUM NUT

LOWER SHAFT ASSEMBLY

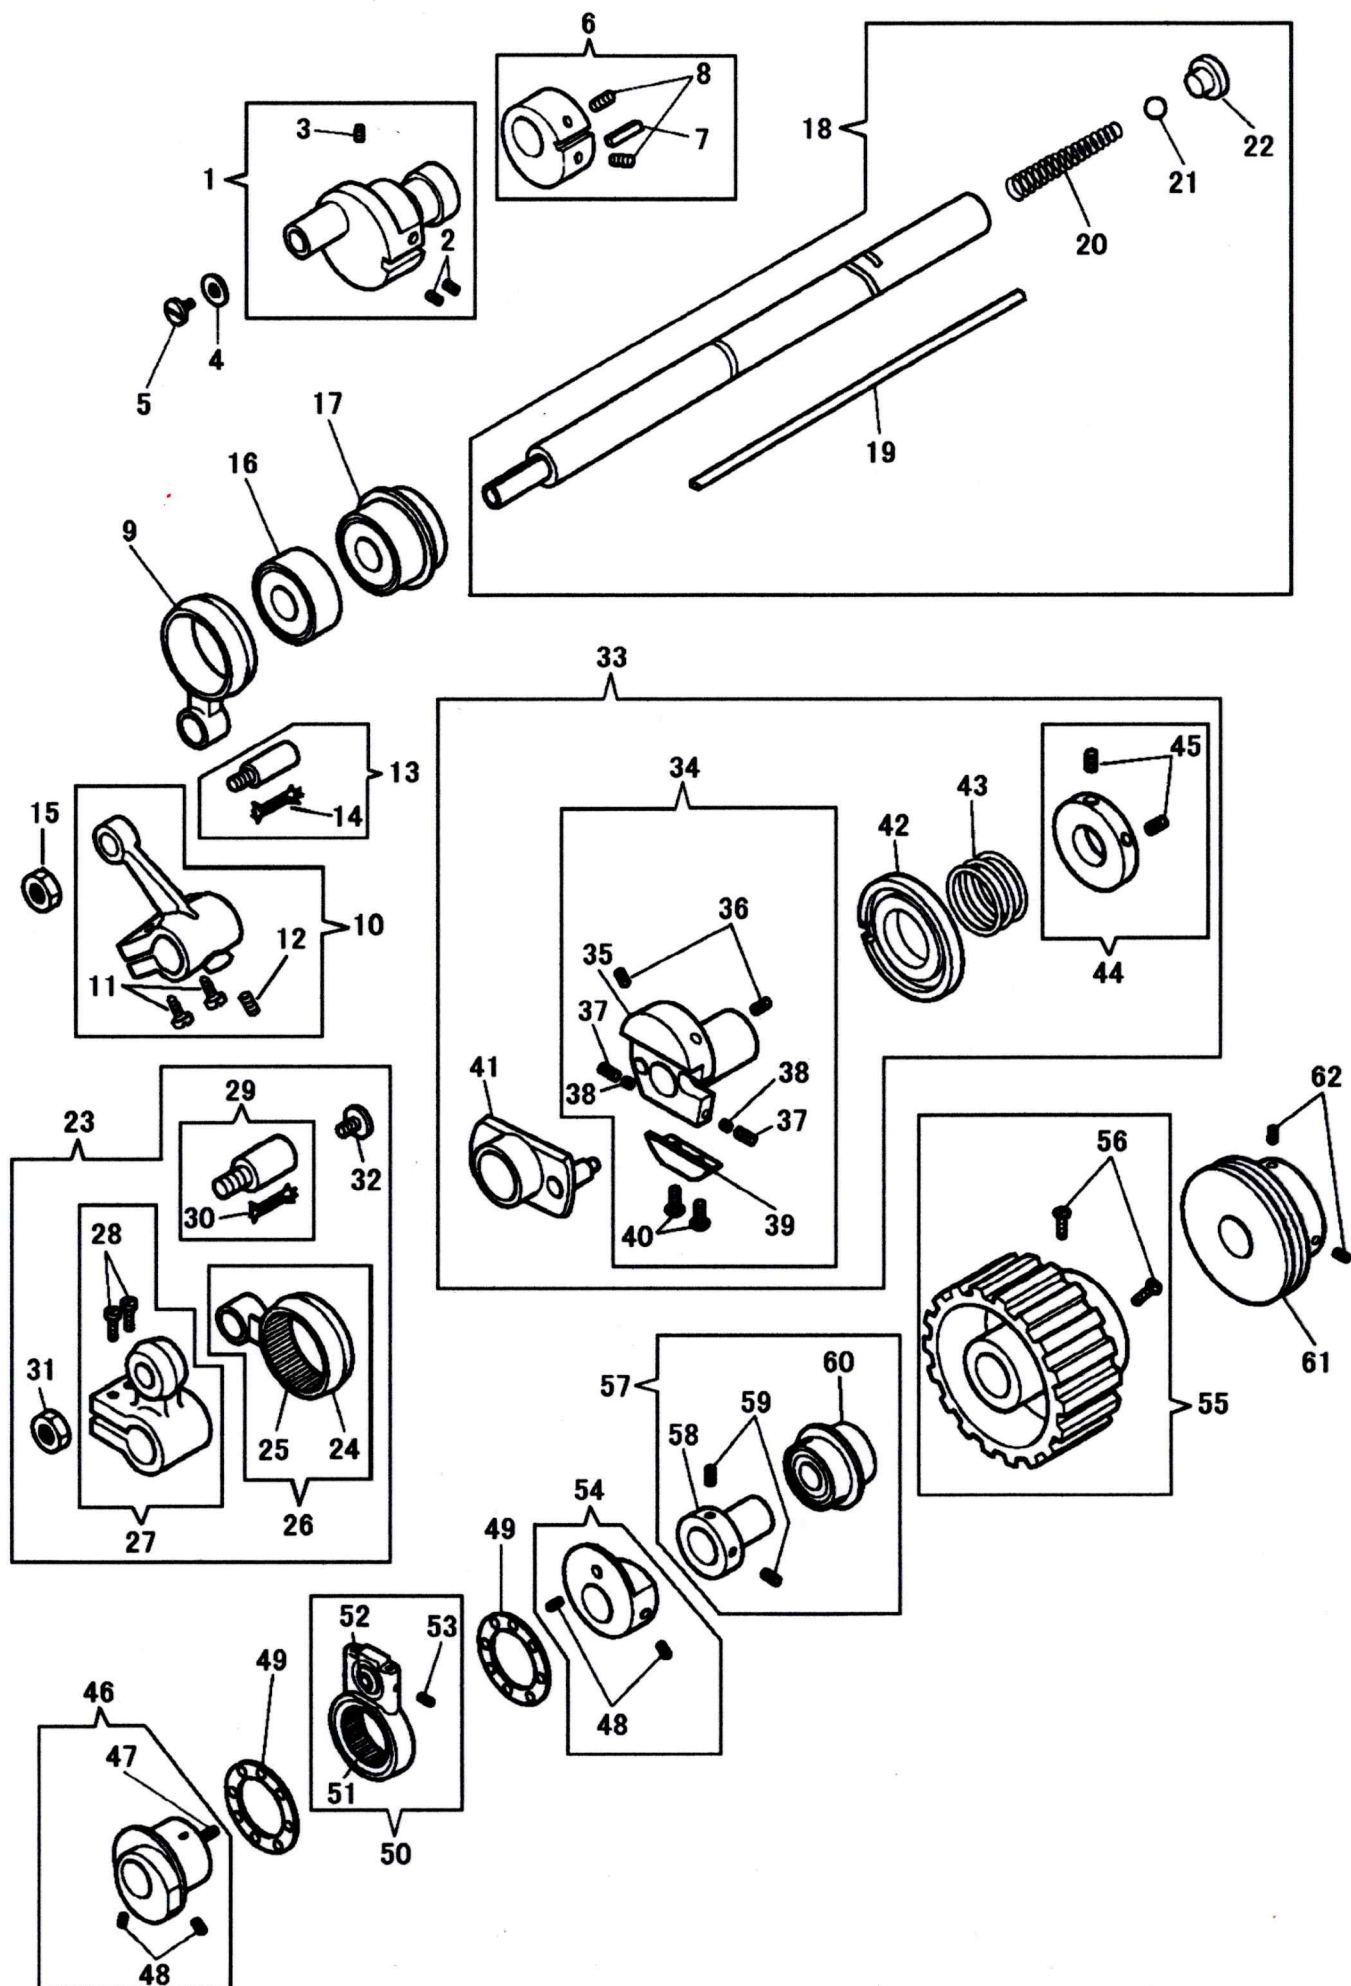


NO.	PART NO.	DESCRIPTION
1	KE0349	LOOPER DRIVING CRANK WITH K500264-833 AND TWO K374099
2	K374099	LOOPER DRIVING CRANK POSITION SCREW (2)
3	K500264 -833	LOOPER DRIVING CRANK SET SCREW
4	K268139	LOOPER DRIVING CONNECTION WASHER
5	K414518	LOOPER DRIVING CONNECTION WASHER SCREW
6	K415210	FEED LIFTING ECCENTRIC WITH K268077 AND TWO K544208-005
7	K268077	FEED LIFTING ECCENTRIC LUBRICATING PAD (WOOD)
8	K544208 -005	FEED LIFTING ECCENTRIC SET SCREW (2)
9	K268074	FEED LIFTING CONNECTION
10	K415206	FEED LIFTING ROCK SHAFT CRANK WITH K414549 AND TWO K414511
11	K414511	FEED LIFTING ROCK SHAFT CRANK PINCH SCREW (2)
12	K414549	FEED LIFTING ROCK SHAFT CRANK POSITION SCREW
13	K415091	FEED LIFTING CONNECTION HINGE STUD WITH K268258
14	K268258	FEED LIFTING CONNECTION HINGE STUD OIL PACKING (WICK)
15	K541197	FEED LIFTING CONNECTION HINGE STUD NUT
16	K281216	BED SHAFT BALL BEARING
17	K281224	BED SHAFT BALL BEARING
18	KE0358	BED SHAFT WITH K268044, K268214, K268265, K414578 AND WICK (Y-10681)
19	K268265	BED SHAFT OIL CONTROL ROD (WOOD)
20	K268044	BED SHAFT OIL STOP BALL SPRING
21	K268214	BED SHAFT OIL STOP BALL 5/32 IN. DIA.
22	K414578	BED SHAFT OIL STOP BALL SCREW
23	K415215	FEED DRIVING ROCK SHAFT CRANK K415213 WITH K267609, K415091, K541197 AND K545297
24	K267608	FEED DRIVING CONNECTION
25	K271055	FEED DRIVING CONNECTION NEEDLE BEARING
26	K267609	FEED DRIVING CONNECTION K267608 WITH K271055
27	K415213	FEED DRIVING ROCK SHAFT CRANK WITH TWO K414511
28	K414511	FEED DRIVING ROCK SHAFT CRANK PINCH SCREW (2)
29	K415091	FEED DRIVING CONNECTION HINGE STUD WITH K268258
30	K268258	FEED DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)
31	K541197	FEED DRIVING CONNECTION HINGE STUD NUT
32	K545297	FEED DRIVING CONNECTION CAP SCREW
33	K415082	FEED DRIVING ECCENTRIC COMPLETE, NOS. K267610, K268065, K268066, K412011 AND K415073
34	K415073	FEED DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND K374098
35	K415074	FEED DRIVING ECCENTRIC FLANGE
36	K414555	FEED DRIVING ECCENTRIC FLANGE SET SCREW (2)
37	K414557	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)
38	K241763	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BRASS) (2)
39	K267623	FEED DRIVING ECCENTRIC FRICTION PLATE
40	K374098	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW (2)
41	K267610	FEED DRIVING ECCENTRIC
42	K268065	FEED DRIVING ECCENTRIC ADJUSTING DISC
43	K268066	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING
44	K412011	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325
45	K544325	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)
46	K415187	SPREADER DRIVING ECCENTRIC WITH K543808-002 AND TWO K414528
47	K543808 -002	SPREADER DRIVING ECCENTRIC PIN
48	K414528	SPREADER DRIVING ECCENTRIC SET SCREW (2)
48	K414528	SPREADER DRIVING ECCENTRIC COUNTERBALANCE SET SCREW (2)
49	K268220	SPREADER DRIVING ECCENTRIC THRUST WASHER (2)
50	K281246	SPREADER DRIVING CONNECTION WITH K415368, K281248 AND K544203-001
51	K415368	SPREADER DRIVING CONNECTION NEEDLE BEARING
52	K281248	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER
53	K544203 -001	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER SET SCREW
54	K415190	SPREADER DRIVING ECCENTRIC COUNTERBALANCE WITH TWO K414528
55	K281292	BED SHAFT CONNECTION BELT PULLEY WITH TWO K414546
56	K414546	BED SHAFT CONNECTION BELT PULLEY SET SCREW (2)
57	K281294	BED SHAFT THRUST COLLAR WITH K281295-001, K272142 AND TWO K544209-005
58	K281295 -001	BED SHAFT THRUST COLLAR
59	K544209 -005	BED SHAFT THRUST COLLAR SET SCREW (2)
60	K272142	BED SHAFT THRUST COLLAR BEARING
61	K559040	BED SHAFT PULLEY
62	K544209 -005	BED SHAFT PULLEY SET SCREW (2)

FRONT ASSEMBLY SEWING BED

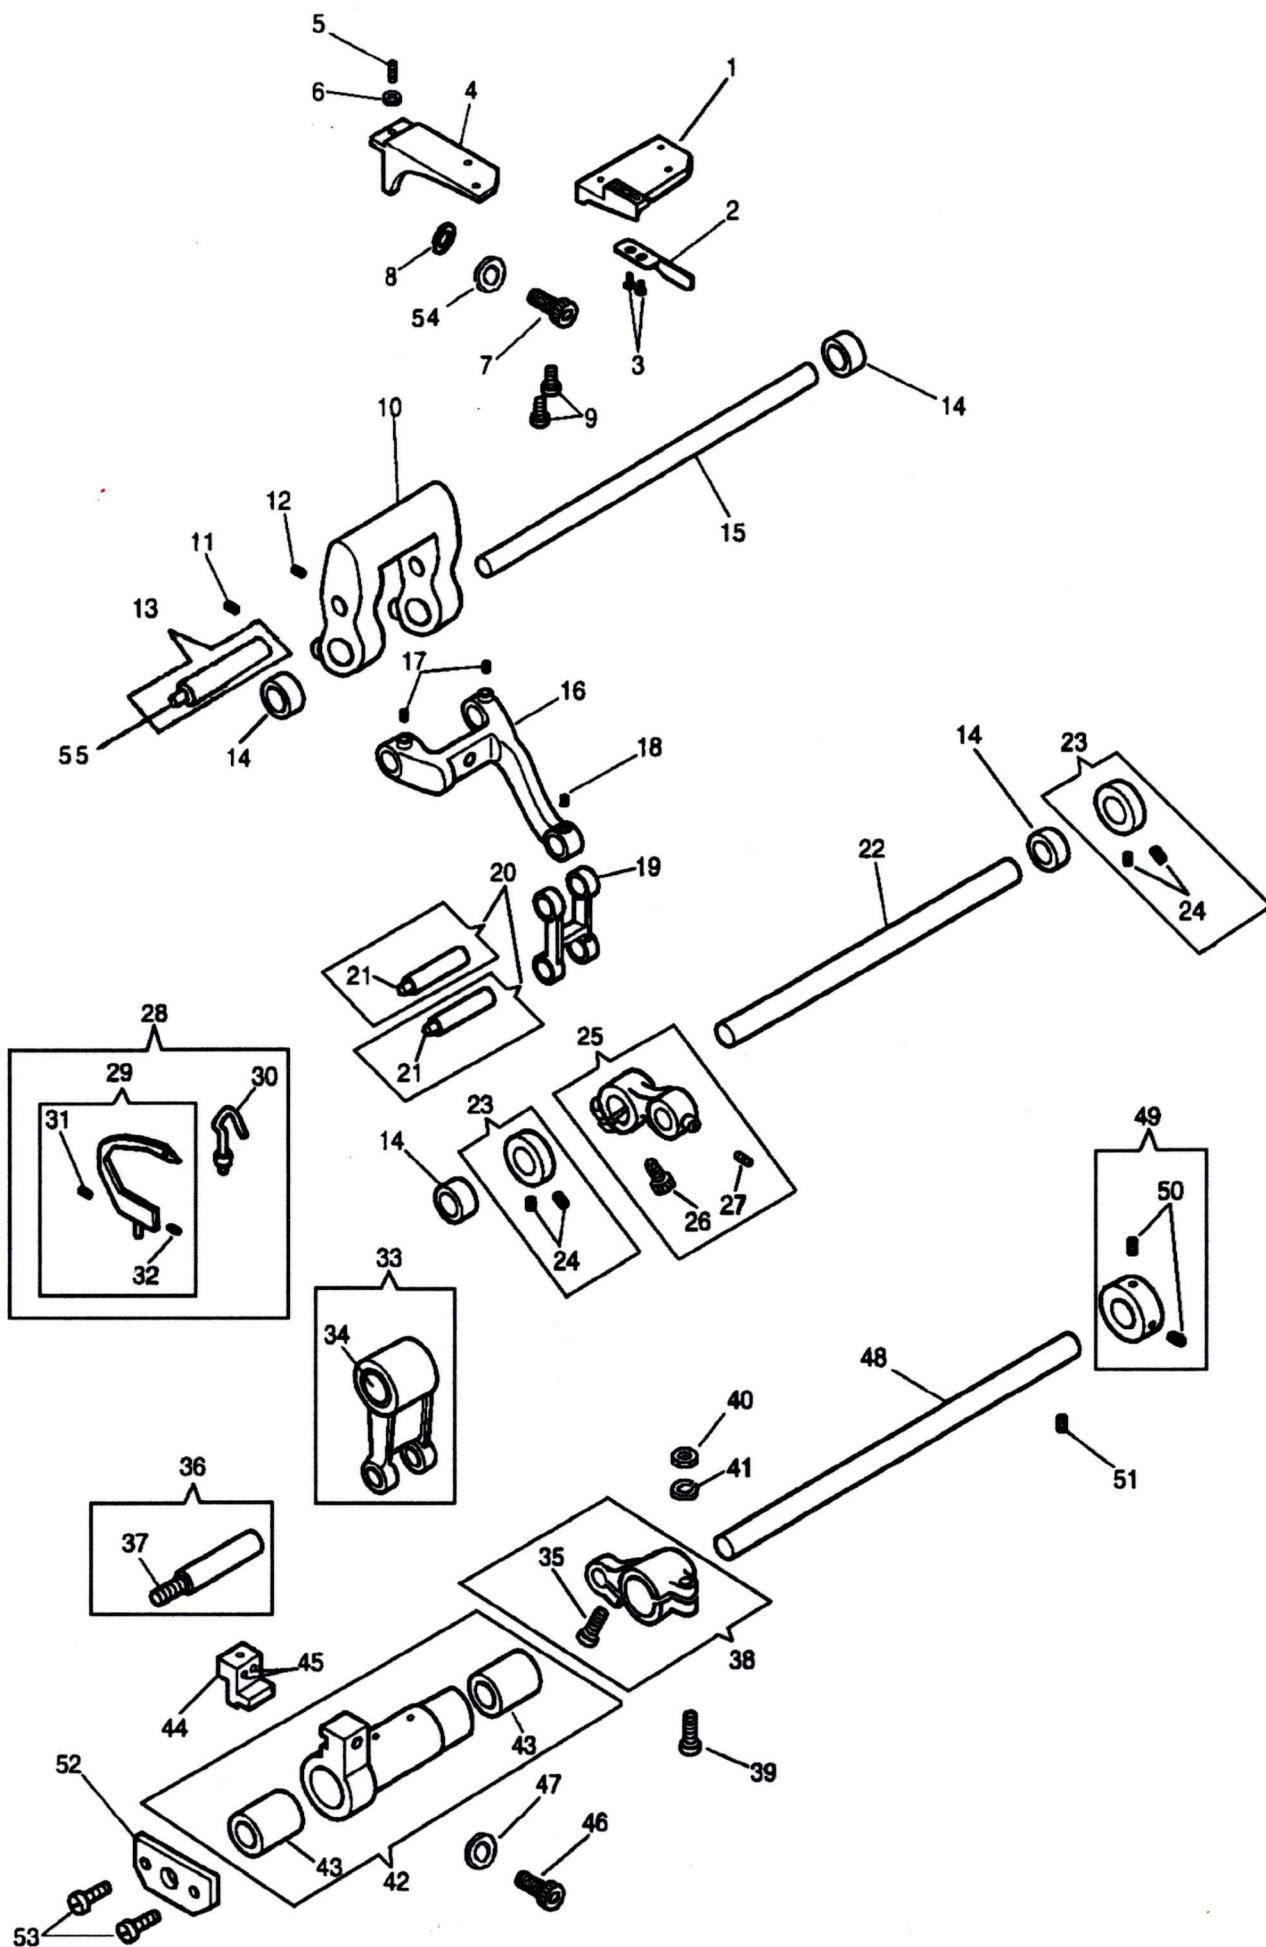


NO.	PART NO.	DESCRIPTION
1	K559061	FEED DOG
2	K267665	LOOP DEFLECTOR
3	K229	LOOP DEFLECTOR SCREW (2)
4	K559064	FEED DOG SHANK
5	K414559	FEED DOG SHANK ADJUSTING SCREW
6	K541200	FEED DOG SHANK ADJUSTING SCREW LOCK NUT
7	K414750 -002	FEED DOG SHANK SCREW
8	K543804 -004	FEED DOG SHANK SCREW WASHER
9	K374107 -003	FEED DOG SCREW (2)
10	K559049	FEED DRIVING ROCK FRAME
11	K549024	FEED DRIVING ROCK FRAME POSITION SCREW
12	K500264 -833	FEED DRIVING ROCK FRAME SET SCREW
13	K559051	FEED BAR HINGE PIN
14	K415297	FEED DRIVING ROCK SHAFT BUSHING (2)
14	K415297	FEED LIFTING ROCK SHAFT BUSHING (2)
15	K268070	FEED DRIVING ROCK SHAFT
16	K559046	FEED BAR
17	K544204 -001	FEED BAR SET SCREW (2)
18	K545213	FEED LIFTING LINK HINGE PIN SET SCREW
19	K268078	FEED LIFTING LINK
20	K268079	FEED LIFTING LINK HINGE PIN WITH K268258 (2)
21	K268258	FEED LIFTING LINK HINGE PIN OIL PACKING (WICK) (2)
22	K559052	FEED LIFTING ROCK SHAFT
23	K415065	FEED LIFTING ROCK SHAFT COLLAR WITH TWO K504020 (2)
24	K504020	FEED LIFTING ROCK SHAFT COLLAR SET SCREW (4)
25	K415204	FEED LIFTING CRANK WITH K350604 AND K545213
26	K350604	FEED LIFTING CRANK PINCH SCREW
27	K545213	FEED LIFTING LINK HINGE PIN SET SCREW
28	K281208	LOOPER AND NEEDLE GUARD COMPLETE, NOS. K268380 AND 281207
29	K268380	LOOPER WITH K141478 AND K141494
30	K281207	NEEDLE GUARD
31	K141478	NEEDLE GUARD SET SCREW (BACK)
32	K141494	NEEDLE GUARD SET SCREW (FRONT)
33	K281223	LOOPER DRIVING CONNECTION WITH K415500
34	K415500	LOOPER DRIVING CONNECTION BUSHING
35	K414516	LOOPER CARRIER CRANK HINGE PIN PINCH SCREW
36	K268208	LOOPER CARRIER CRANK HINGE PIN WITH K268258
37	K268258	LOOPER CARRIER CRANK HINGE PIN OIL PACKING (WICK)
38	K415174	LOOPER CARRIER CRANK WITH K414516
39	K415292	LOOPER CARRIER CRANK CLAMPING STUD
40	K541198	LOOPER CARRIER CRANK CLAMPING STUD NUT
41	K548459	LOOPER CARRIER CRANK CLAMPING STUD WASHER
42	K559041	LOOPER CARRIER WITH TWO K415500
43	K415500	LOOPER CARRIER BUSHING (2)
44	K559055	LOOPER HOLDER
45	K414558	LOOPER SET SCREW (2)
46	K414750 -002	LOOPER HOLDER SCREW
47	K543804 -004	LOOPER HOLDER SCREW WASHER
48	K269617	LOOPER CARRIER SHAFT
49	K415172	LOOPER CARRIER SHAFT COLLAR WITH TWO 544204-001
50	K544204 -001	LOOPER CARRIER SHAFT COLLAR SET SCREW (2)
51	K544209 -003	LOOPER CARRIER SHAFT SET SCREW
52	K559044	LOOPER CARRIER SHAFT SUPPORTING PLATE
53	K414518	LOOPER CARRIER SHAFT SUPPORTING PLATE SCREW (2)
54	K543805 -004	FEED DOG SHANK SCREW SPRING WASHER
55	K202330	FEED BAR HINGE PIN OIL WICK

CROSS SHAFT IN SEWING BED

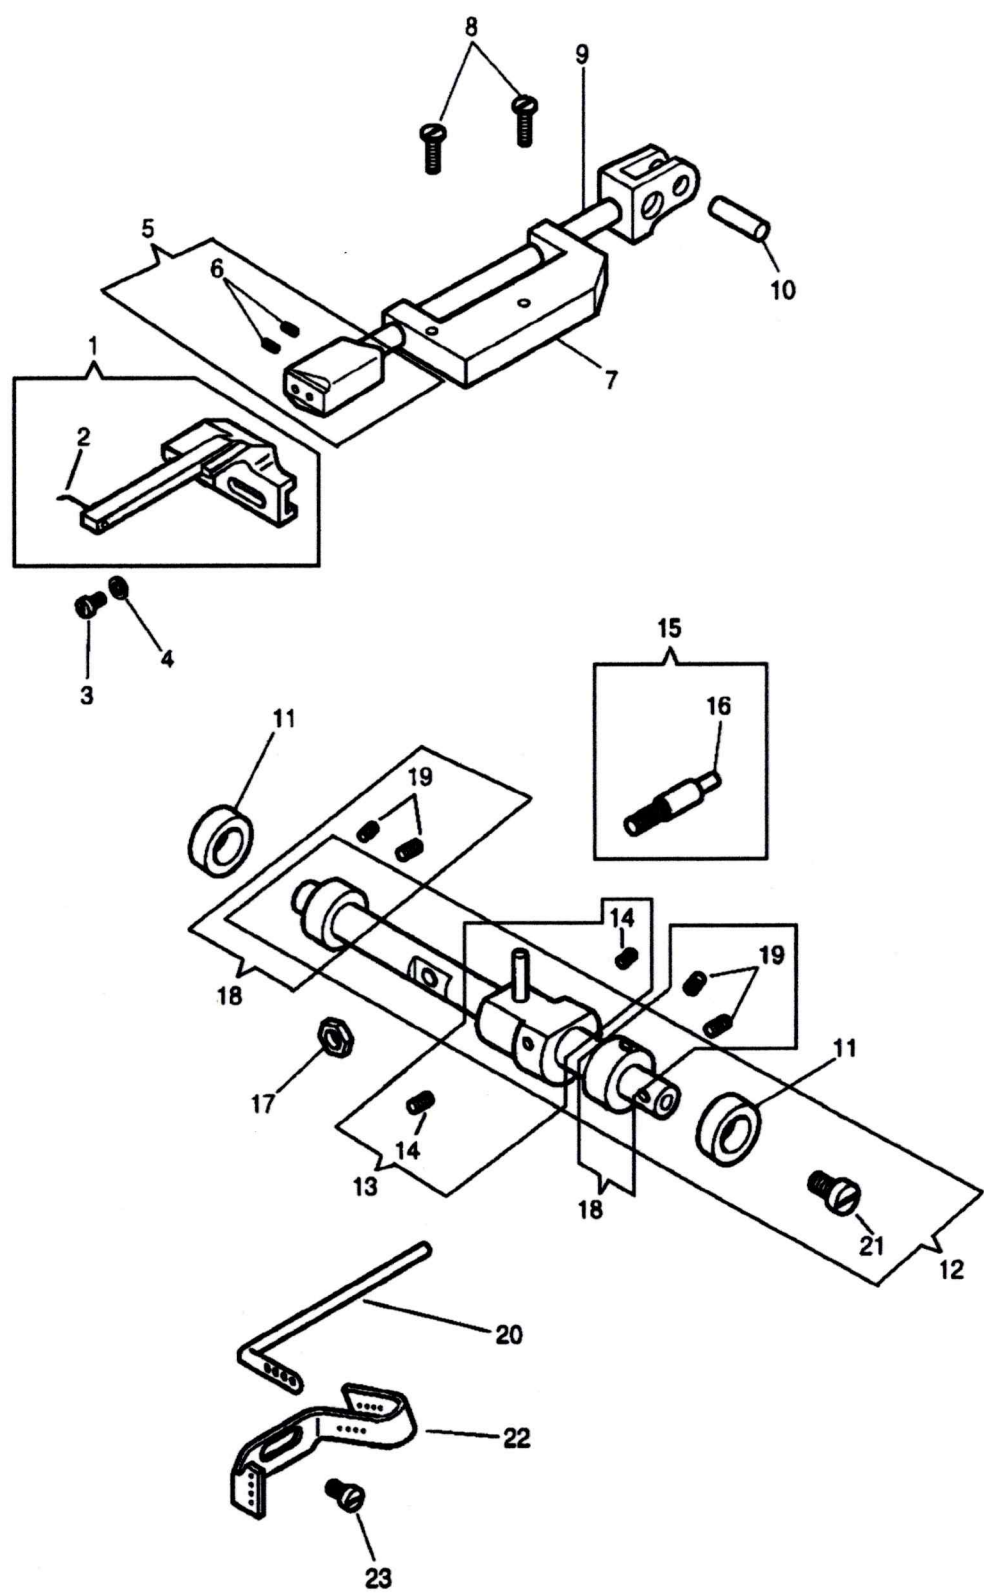


NO.	PART NO.	DESCRIPTION
1	K281975	SPREADER WITH K268162
2	K268162	SPREADER POINT
3	K414552	SPREADER SCREW
4	K547670	SPREADER SCREW WASHER
5	K415196	SPREADER HOLDER WITH TWO K414529
6	K414529	SPREADER HOLDER SET SCREW (2)
7	K268184	SPREADER BAR BRACKET
8	K414524	SPREADER BAR BRACKET SCREW (2)
9	K559065	SPREADER BAR
10	K268190	SPREADER DRIVING PIN
11	K415297	SPREADER DRIVING ROCK SHAFT BUSHING (2)
12	K415389	SPREADER DRIVING ROCK SHAFT WITH K504019
13	K415194	SPREADER DRIVING CRANK WITH TWO K544204-001
14	K544204 -001	SPREADER DRIVING CRANK SET SCREW (2)
15	K281249	SPREADER DRIVING ROCK SHAFT SCREW STUD WITH K32825
16	K32825	SPREADER DRIVING ROCK SHAFT SCREW STUD OIL PACKING (WICK)
17	K545424	SPREADER DRIVING ROCK SHAFT SCREW STUD NUT
18	K415065	SPREADER DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2)
19	K504020	SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)
20	K268052	LOOPER THREAD TAKE-UP ROD
21	K504019	LOOPER THREAD TAKE-UP ROD SET SCREW
22	K269619	LOOPER THREAD GUIDE (ON FRONT)
23	K414510	LOOPER THREAD GUIDE SCREW

EXTERNAL PARTS SEWING ARM

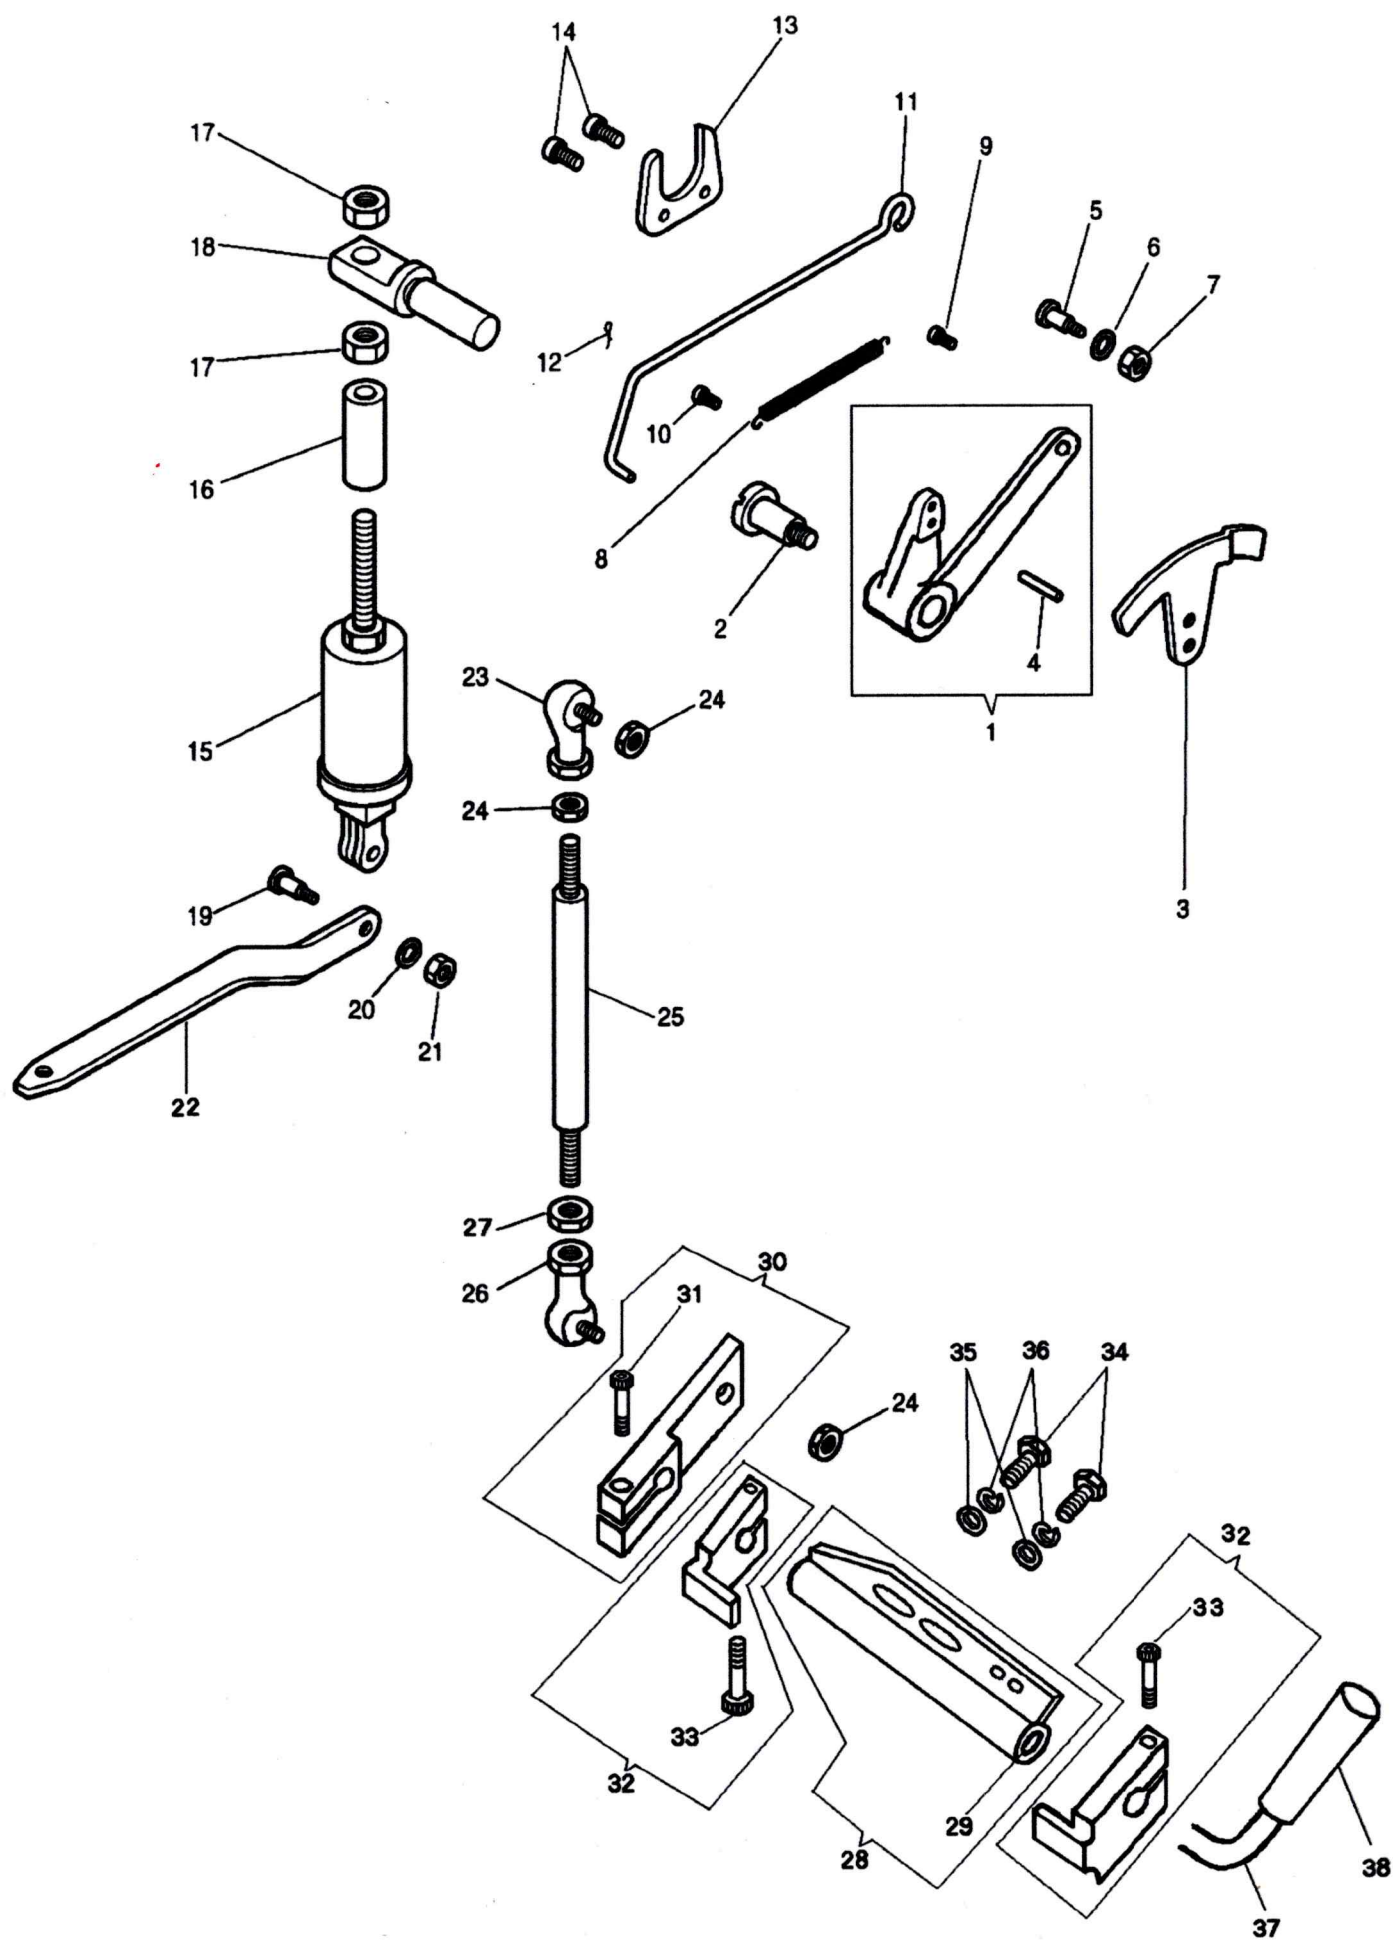


NO.	PART NO.	DESCRIPTION
1	KE0085	FOOT LIFTER LEVER WITH K543850-001
2	K201363	FOOT LIFTER LEVER HINGE SCREW
3	K267707	NEEDLE THREAD TENSION RELEASING PLATE
4	K543850 -001	NEEDLE THREAD TENSION RELEASING PLATE PIN
5	K414577	FOOT LIFTER LEVER ROD HINGE SCREW
6	K543804 -004	FOOT LIFTER LEVER ROD HINGE SCREW WASHER
7	K541166 -003	FOOT LIFTER LEVER ROD HINGE SCREW NUT
8	K204348	FOOT LIFTER LEVER SPRING
9	K414570	FOOT LIFTER LEVER SPRING SCREW EYE
10	K544336	FOOT LIFTER LEVER SPRING SCREW
11	K267704	FOOT LIFTER LEVER ROD
12	K248423	FOOT LIFTER LEVER ROD COTTER PIN
13	K267650	PRESSER BAR SPRING HOUSING SUPPORT RETAINER
14	K545205 -451	PRESSER BAR SPRING HOUSING SUPPORT RETAINER SCREW (2)
15	K415106	PRESSER BAR SPRING HOUSING COMPLETE
16	K559077	PRESSER BAR SPRING HOUSING COLLAR
17	K541198	PRESSER BAR SPRING HOUSING NUT (2)
18	K267714	PRESSER BAR SPRING HOUSING SUPPORT
19	K414567	PRESSER BAR SPRING ARM HINGE SCREW
20	K543874 -005	PRESSER BAR SPRING ARM HINGE SCREW WASHER
21	K545405	PRESSER BAR SPRING ARM HINGE SCREW NUT
22	K267738	PRESSER BAR SPRING ARM
23	K412373	LIFTING ROD CONNECTION (UPPER)
24	K541166 -001	LIFTING ROD CONNECTION NUT (3)
25	K559068	LIFTING ROD
26	K559067	LIFTING ROD CONNECTION (LOWER)
27	K414774	LIFTING LEVER
28	KE0026	FOOT LIFT PIVOT WITH TWO KE0030
29	KE0030	BUSHING (2)
30	KE0083	FOOT LIFT LEVER WITH K414753-004
31	K414753 -004	FOOT LIFT LEVER SCREW
32	KE0084	STOP COLLAR WITH K414750-004 (2)
33	K414750 -004	STOP COLLAR SCREW (2)
34	K414753 -004	FOOT LIFT PIVOT SCREW (2)
35	K543803 -005	FOOT LIFT PIVOT SCREW WASHER (2)
36	K543805 -005	FOOT LIFT PIVOT SCREW SPRING WASHER (2)
37	KE0034	PIVOT ARM
38	KE0035	HANDLE

EXTERNAL PARTS SEWING ARM

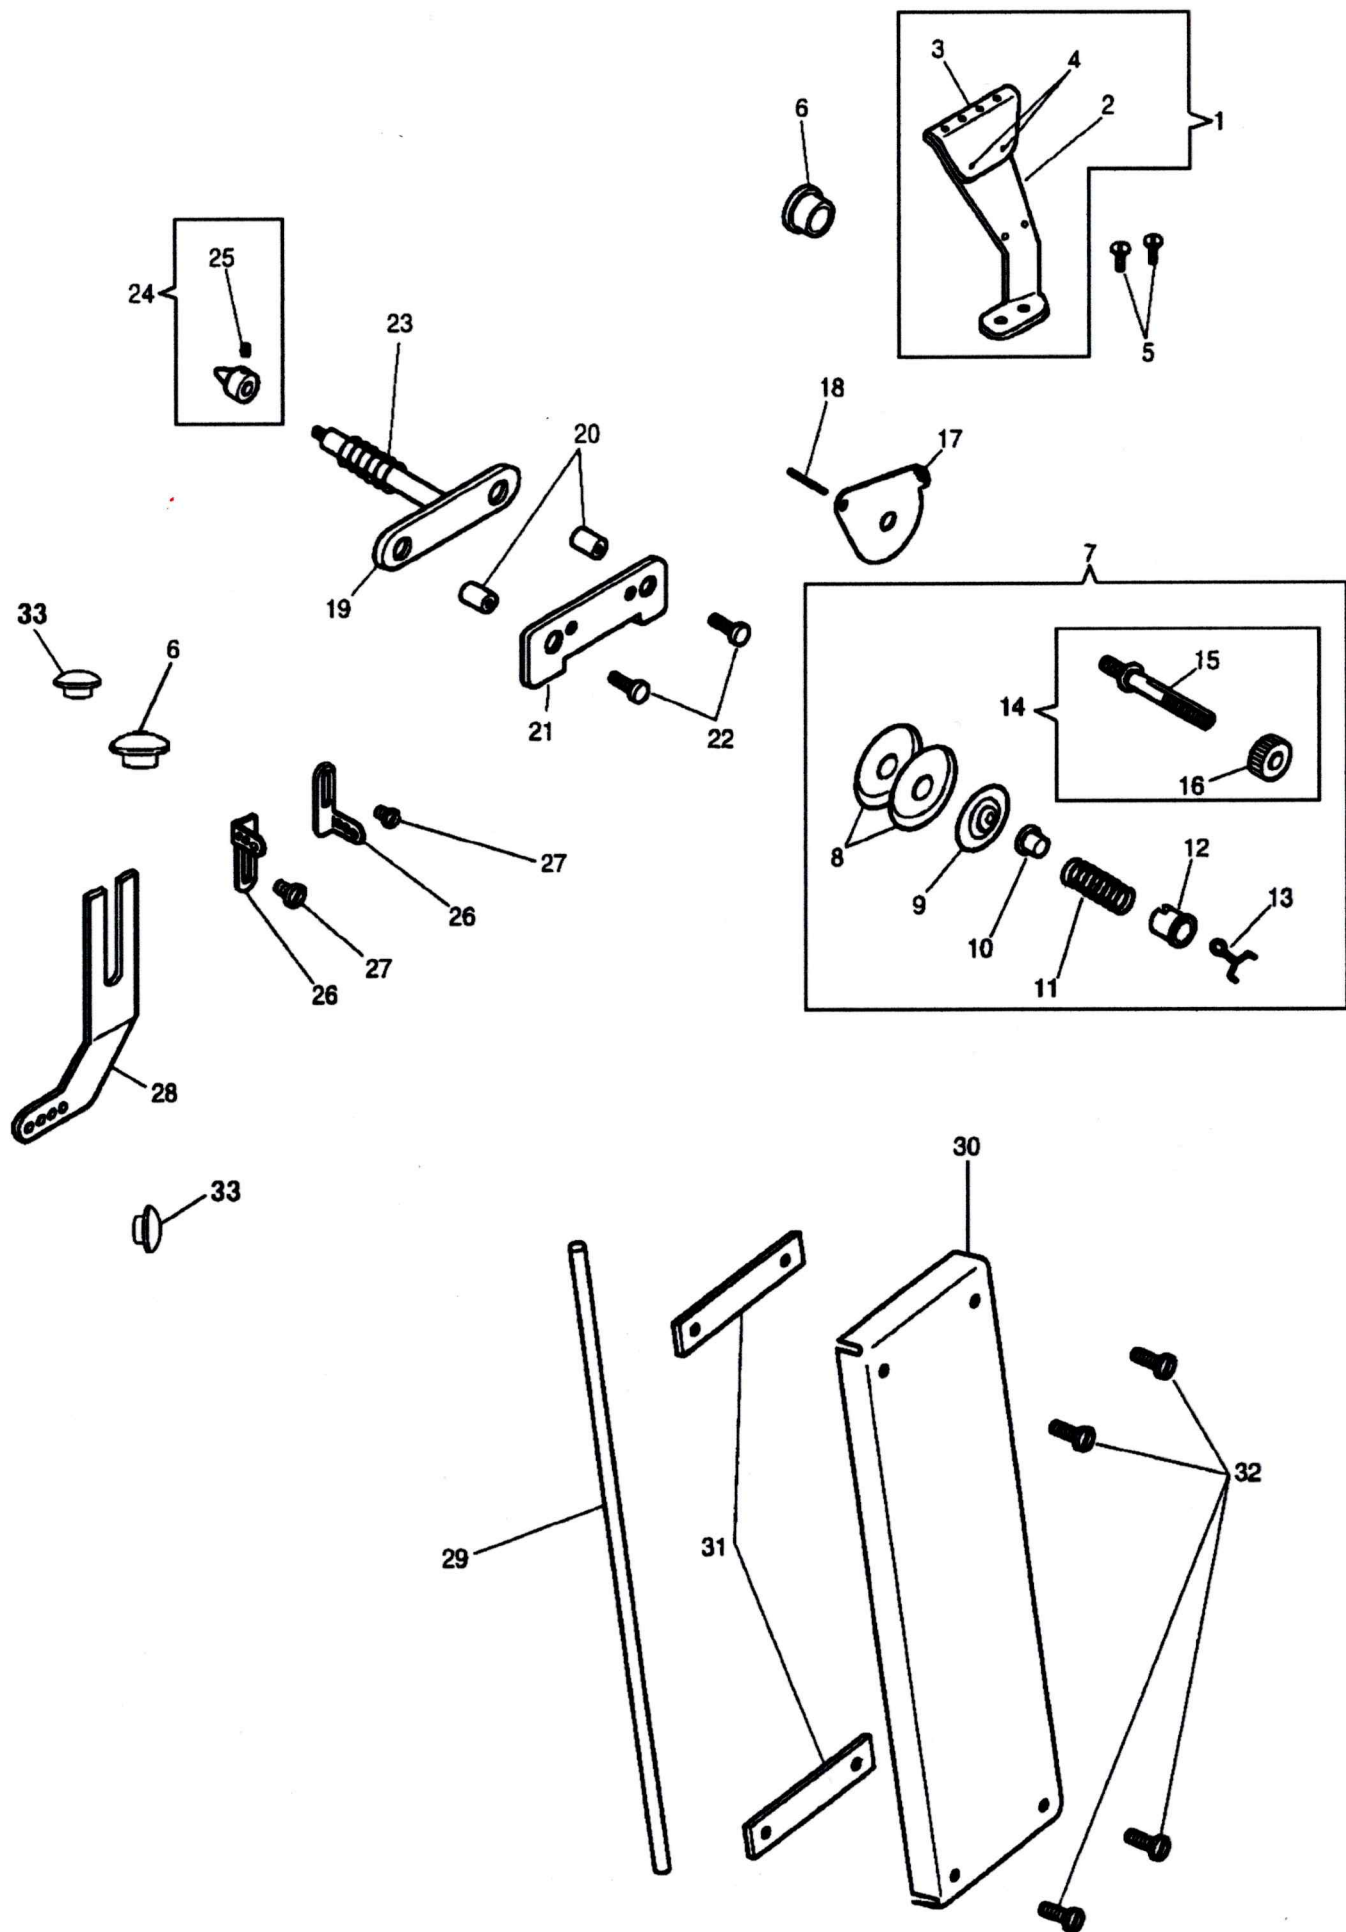


NO.	PART NO.	DESCRIPTION
1	K268506	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET K268111 WITH K268505 AND TWO K50169
2	K268111	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET
3	K268505	LOOPER THREAD GUIDE (TOP OF ARM)
4	K50169	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)
5	K414537	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)
6	K544875	ARM PLUG (LARGE) (2)
7	K267971	NEEDLE THREAD TENSION COMPLETE, NOS. K32572, K59538, K59539, K131741, K143657, K143658 AND TWO K2102
8	K2102	NEEDLE THREAD TENSION DISC (2)
9	K32572	NEEDLE THREAD TENSION RELEASING DISC
10	K59538	NEEDLE THREAD TENSION SPRING BUSHING (BACK)
11	K131741	NEEDLE THREAD TENSION SPRING
12	K143657	NEEDLE THREAD TENSION SPRING BUSHING (FRONT)
13	K143658	NEEDLE THREAD TENSION THUMB NUT LOCKING SPRING
14	K59539	NEEDLE THREAD TENSION STUD K50326 WITH K51570
15	K50326	NEEDLE THREAD TENSION STUD
16	K51570	NEEDLE THREAD TENSION THUMB NUT
17	K54279	NEEDLE THREAD TENSION THREAD GUIDE (DOUBLE)
18	K226206	NEEDLE THREAD TENSION RELEASING PIN
19	K415357	NEEDLE THREAD TENSION RELEASER
20	K543853 -003	NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)
21	K268167	NEEDLE THREAD TENSION BRACKET
22	K544336	NEEDLE THREAD TENSION BRACKET SCREW (2)
23	K204365	NEEDLE THREAD TENSION RELEASER SPRING
24	K415252	NEEDLE THREAD TENSION RELEASER CAP WITH K504048
25	K504048	NEEDLE THREAD TENSION RELEASER CAP SET SCREW
26	K268513	NEEDLE THREAD GUIDE (ON SIDE OF ARM) (2)
27	K414514	NEEDLE THREAD GUIDE SCREW (2)
28	K268312	NEEDLE THREAD GUIDE (ON ARM HEAD)
29	K268123	LOOPER THREAD TUBE
30	K415342 -451	LOOPER THREAD TUBE COVER
31	K268500	LOOPER THREAD TUBE COVER CUSHION (2)
32	K414639	LOOPER THREAD TUBE COVER SCREW (4)
33	K502986	ARM PLUG (SMALL) (2)

EXTERNAL PARTS SEWING ARM

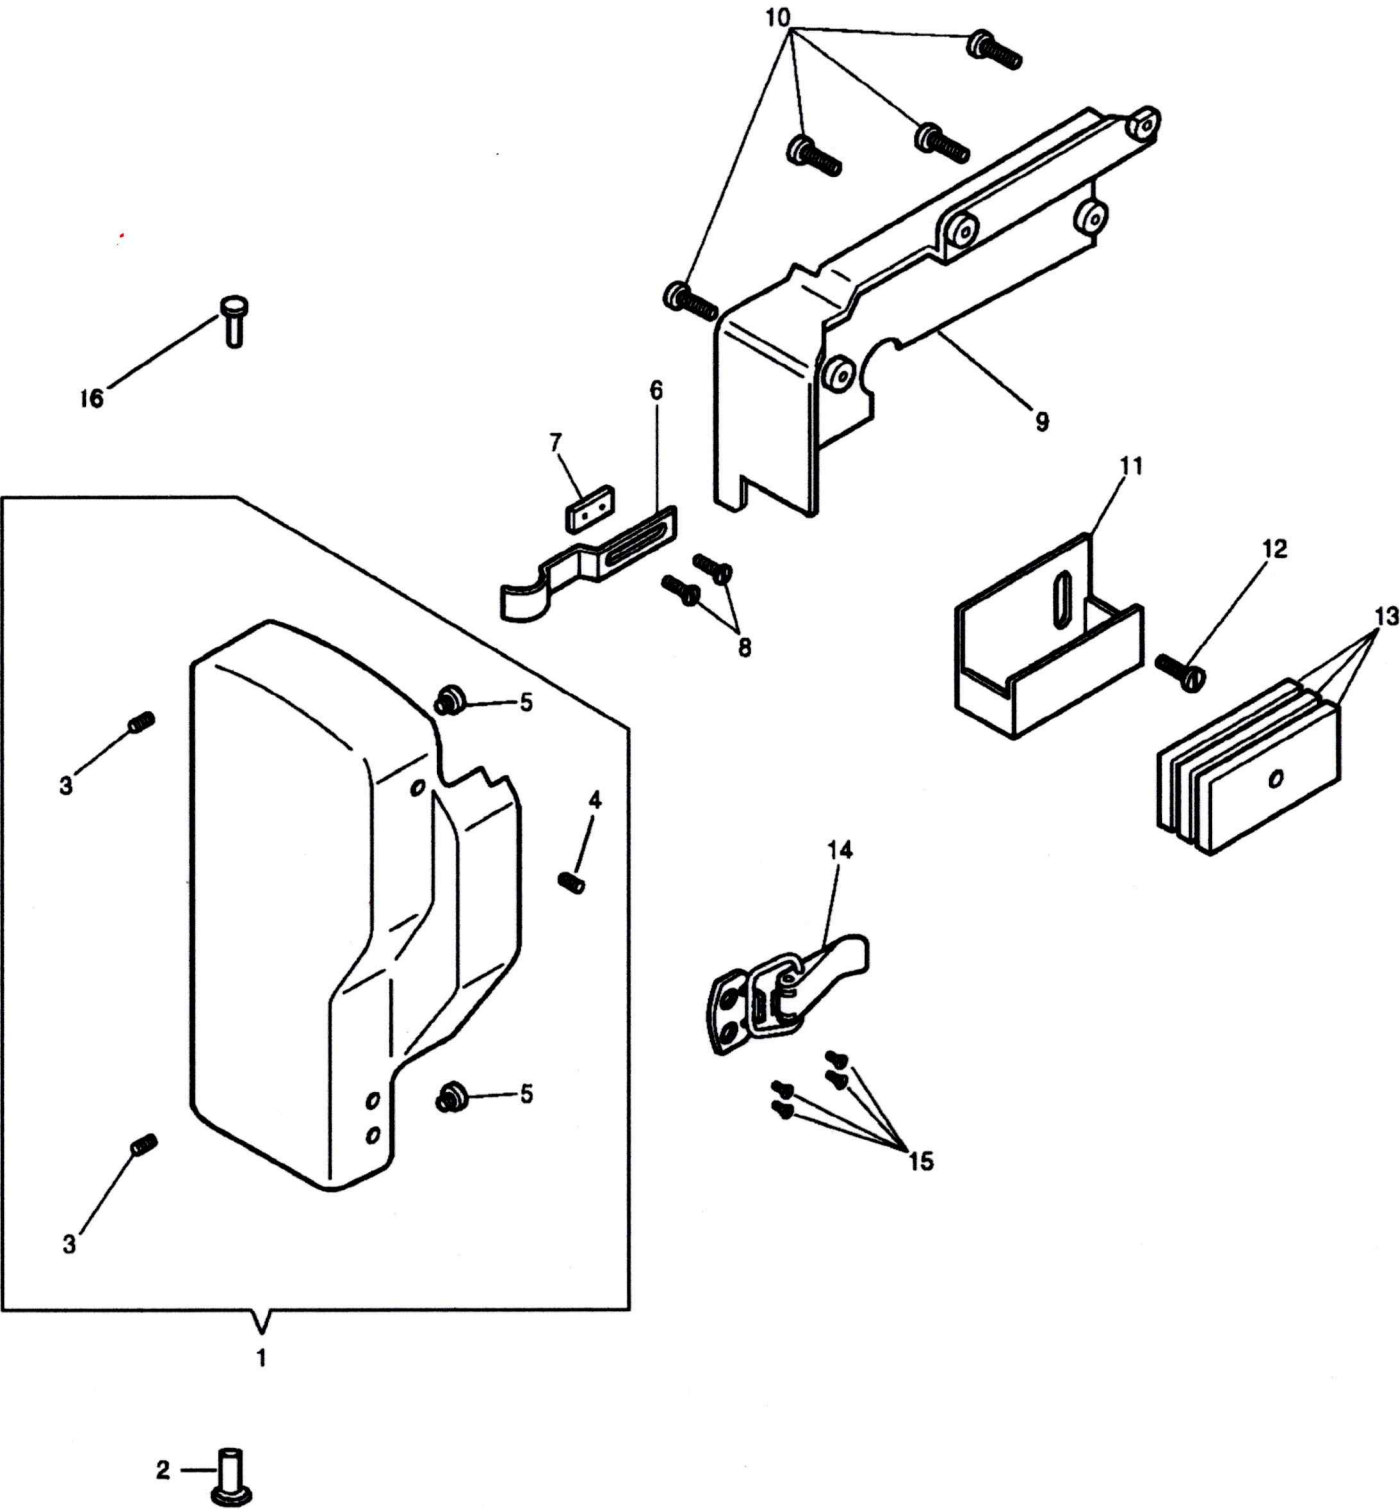


NO.	PART NO.	DESCRIPTION
1	KE0021	FACE PLATE WITH K268033 AND TWO EACH K228661 AND K545174-452
2	K268330	FACE PLATE HINGE STUD
3	K545174 -452	FACE PLATE HINGE STUD SET SCREW (2)
4	K268033	FACE PLATE LOCK STUD
5	K228661	FACE PLATE CUSHION (NEOPRENE) (2)
6	K268032	FACE PLATE LOCK SPRING
7	K415016	FACE PLATE LOCK SPRING PLATE
8	K414534	FACE PLATE LOCK SPRING SCREW (2)
9	KE0072	ARM SIDE COVER
10	K545246 -452	ARM SIDE COVER SCREW (4)
11	K267656 -452	THREAD LUBRICATOR
12	K504019	THREAD LUBRICATOR SCREW
13	K236957	THREAD LUBRICATOR OIL PAD (FELT) (3)
14	K559032	FACE PLATE LOCKER
15	K374397 -002	FACE PLATE LOCKER SCREW (4)
16	KE0007	FACE PLATE HINGE STUD

EXTERNAL PARTS SEWING ARM

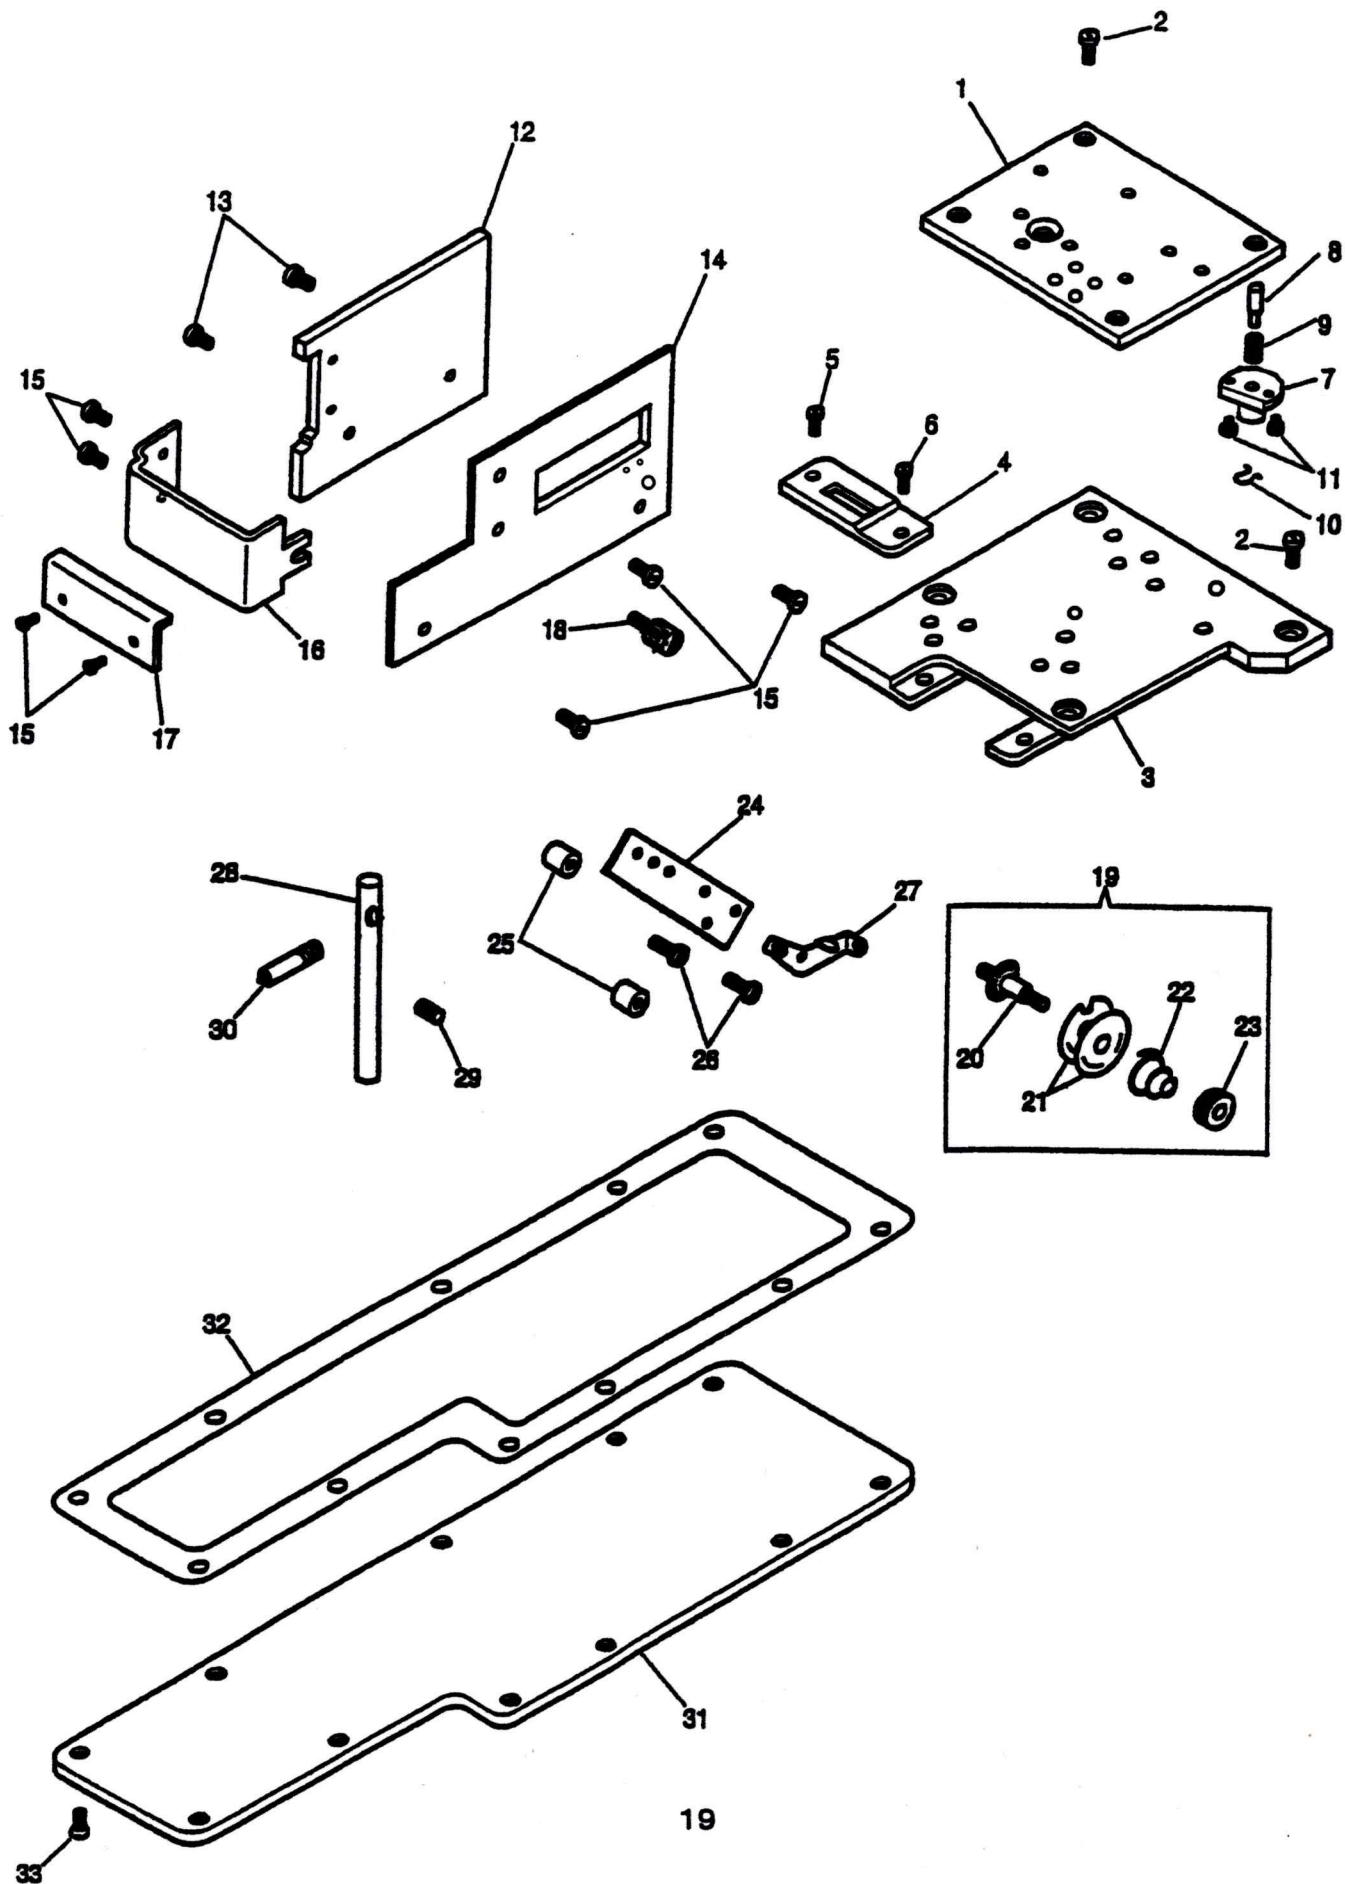


NO.	PART NO.	DESCRIPTION
1	KE0073	BED PLATE (RIGHT)
2	K414508	BED PLATE SCREW (8)
3	KE0037	BED PLATE (LEFT)
4	KE0071	THROAT PLATE
5	K374107 -001	THROAT PLATE SCREW (BACK)
6	K414518	THROAT PLATE SCREW (FRONT)
7	KE0075	FEED REGULATING STUD SOCKET
8	K268081	FEED REGULATING STUD
9	K270026	FEED REGULATING STUD SPRING
10	K240245	FEED REGULATING STUD RETAINING SPRING
11	K545249 -452	FEED REGULATING STUD SOCKET SCREW (2)
12	K559075	BED COVER (BACK)
13	K414520	BED COVER (BACK) SCREW (2)
14	KE0068	BED COVER (FRONT)
15	K544217 -052	BED COVER SCREW (7)
16	KE0255	LOOPER COVER
17	KE0257	BED COVER (LEFT)
18	K559073	LOOPER COVER THUMB SCREW
19	K415294	LOOPER THREAD TENSION COMPLETE, NOS. K10148, K415291, K541452 AND TWO K412203
20	K415291	LOOPER THREAD TENSION STUD
21	K412203	LOOPER THREAD TENSION DISC (2)
22	K10148	LOOPER THREAD TENSION SPRING
23	K541452	LOOPER THREAD TENSION THUMB NUT
24	K415255	LOOPER THREAD TENSION BRACKET
25	K543853 -003	LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)
26	K414532	LOOPER THREAD TENSION BRACKET SCREW (2)
27	K268333	LOOPER THREAD TENSION THREAD GUIDE
28	K52239	LOOPER THREAD GUIDE
29	K544211 -052	LOOPER THREAD GUIDE SET SCREW
30	K559078	LOOPER THREAD GUIDE (PIPE)
31	K559033	BOTTOM PLATE
32	K559034	BOTTOM PLATE GASKET
33	K414533	BOTTOM PLATE SCREW (6)

OIL & LUBRICATION MECHANISM

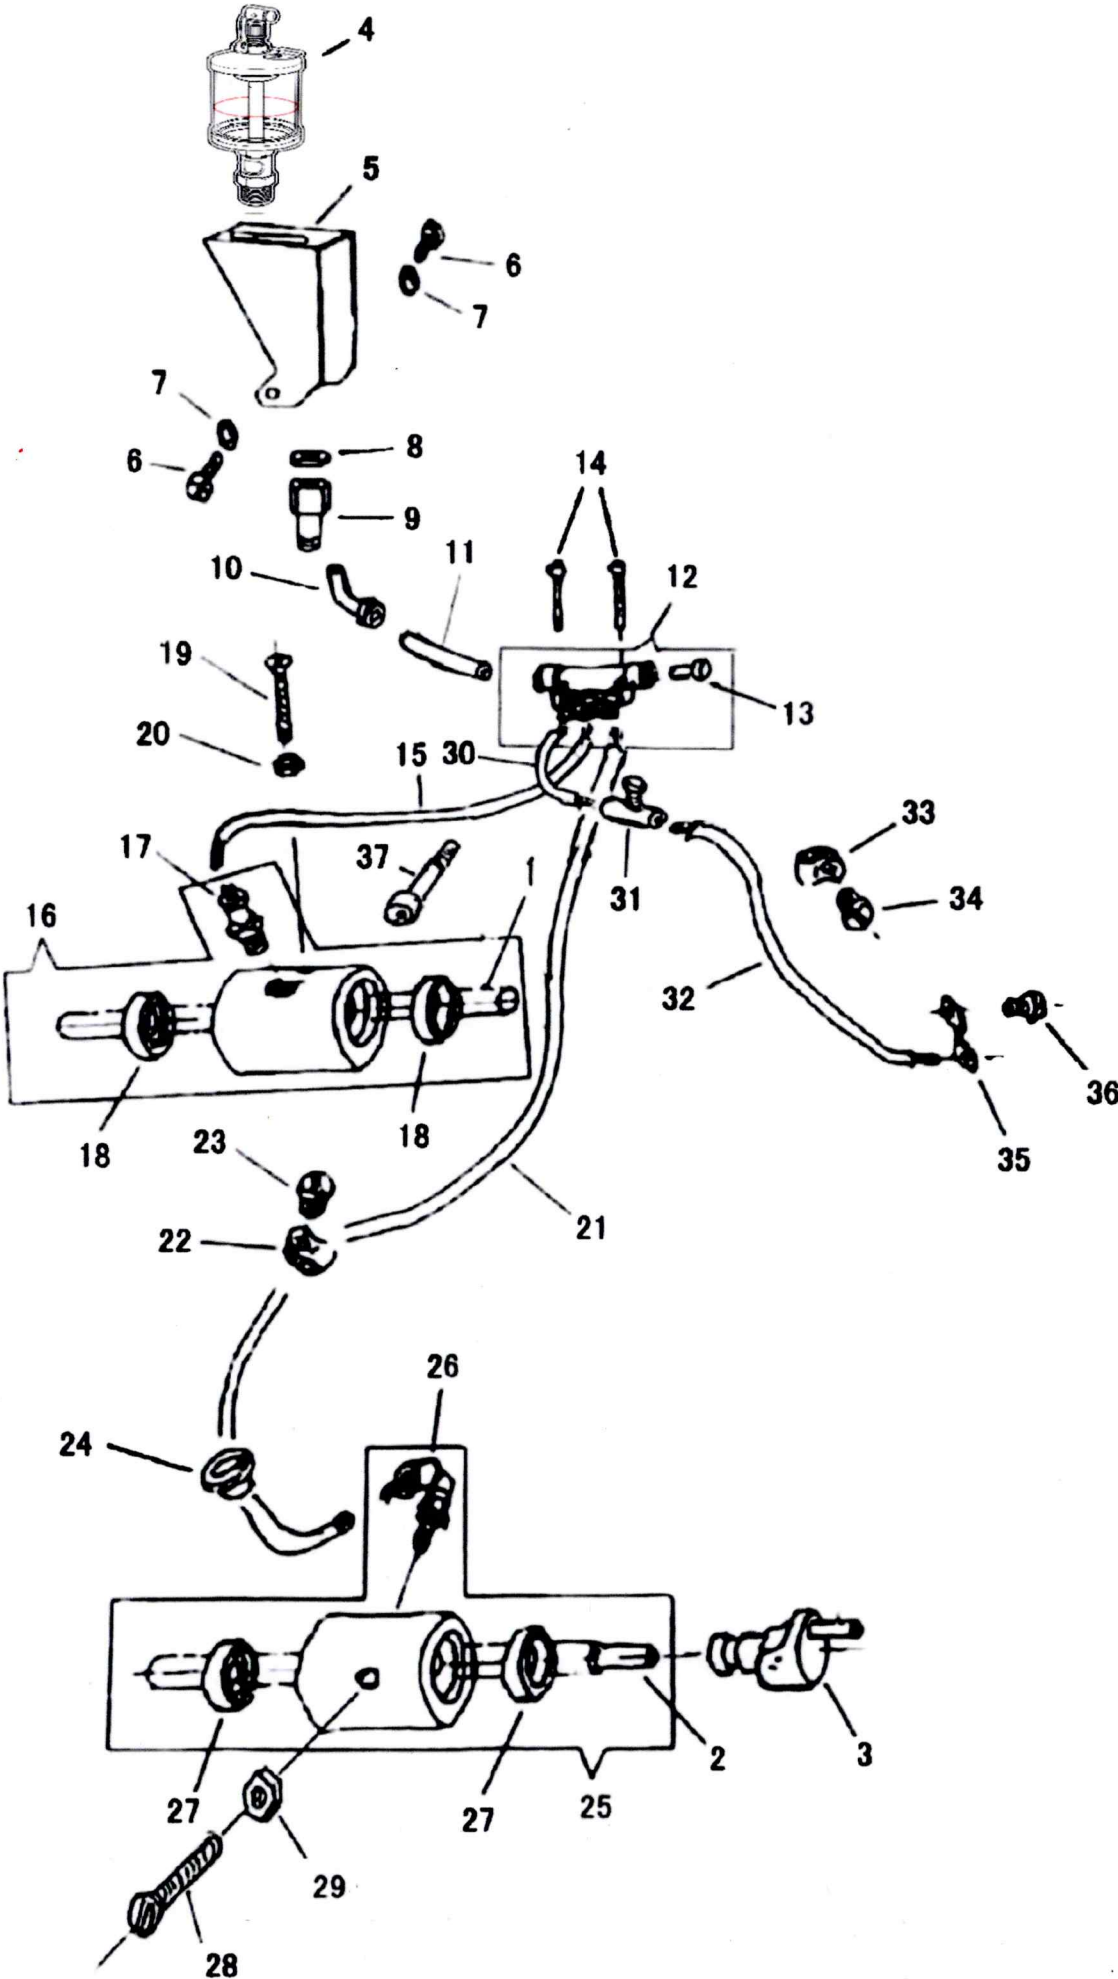

NO.	PART NO.	DESCRIPTION
1	KE0391	ARM SHAFT CPL. (SEE PAGE 2 #10)
2	KE0358	BED SHAFT CPL. (SEE PAGE 8 #18)
3	KE0349	LOOPER DRIVING CRANK CPL. (SEE PAGE 8 #1)
4	KE0320	GLASS OILER
5	KE0372	OILER BRACKET
6	K374107 -003	OILER BRACKET SCREW (2)
7	K543805 -005	OILER BRACKET SCREW SPRING WASHER (2)
8	KE0323	OILER FIX NUT
9	KE0321	OILER OIL TUBE COUPLER
10	KE0359	OILER OIL TUBE COUPLER SOCKET (45° ELBOW)
11	KE0339	OIL TUBE (OILER-DISTRIBUTOR)
12	KE0387	OIL DISTRIBUTOR WITH FELT AND KE0326
13	KE0326	OIL DISTRIBUTOR PLUG
14	KE0327	OIL DISTRIBUTOR SCREW (2)
15	KE0388	OIL TUBE WITH WICK (DISTRIBUTOR TO ARM SHAFT BUSH)
16	KE0328	ARM SHAFT OIL SUPPLY BUSH WITH KE0329 AND KE0330 (2)
17	KE0329	ARM SHAFT OIL SUPPLY BUSH OIL TUBE COUPLER
18	KE0330	OIL SUPPLY BUSH OIL SEAL (2)
19	KE0331	ARM SHAFT OIL SUPPLY BUSH STABILISER
20	K201746	ARM SHAFT OIL SUPPLY BUSH STABILISER LOCK NUT
21	KE0346	OIL TUBE WITH WICK (DISTRIBUTOR TO BED SHAFT)
22	KE0342	OIL TUBE (TO BED SHAFGT) CLAMP
23	K544217 -052	OIL TUBE (TO BED SHAFT) CLAMP SCREW
24	KE0354	OIL TUBE (TO BED SHAFT) GUIDE BUSH
25	KE0333	BED SHAFT OIL SUPPLY BUSH WITH KE0334 AND KE0330 (2)
26	KE0334	BED SHAFT OIL SUPPLY BUSH OIL TUBE COUPLER
27	KE0330	OIL SUPPLY BUSH OIL SEAL (2)
28	K350579	BED SHAFT OIL SUPPLY BUSH STABILISER
29	K201746	BED SHAFT OIL SUPPLY BUSH STABILISER LOCK NUT
30	KE0390	OIL TUBE WITH WICK (DISTRIBUTOR TO VALVE)
31	KE0337	OIL FLOW VALVE
32	KE0395	OIL TUBE WITH WICK (VALVE TO N. B. ROCK FRAME)
33	KE0342	OIL TUBE (TO N/B ROCK FRAME) CLAMP
34	K544217 -052	OIL TUBE (TO N/B ROCK FRAME) CLAMP SCREW
35	KE0338	OIL TUBE (TO N/B ROCK FRAME) SUPPORT
36	K544211 -052	OIL TUBE (TO N/B ROCK FRAME) SUPPORT SCREW
37	KE0282	OIL TUBE SUPPORT SCREW

ACCESSORIES

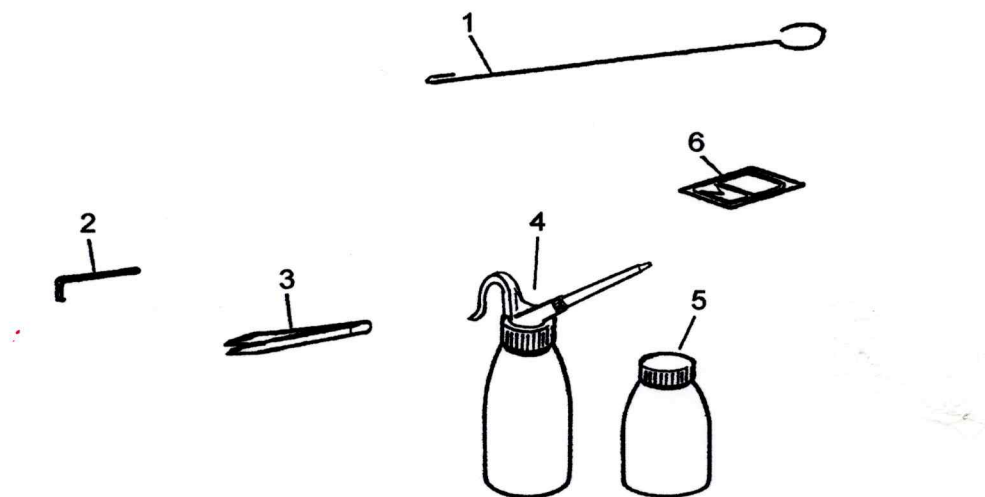

NO.	PART NO.	DESCRIPTION
1	K415377	THREAD WIRE
2	K21887	WRENCH
3	K543162	TWEEZERS
4	KE0053	OILER
5	KE0117	BOTTLE WITH OIL (100cc)
6	62x59	NEEDLE (SIZE 160/23) (5)

NUMERICAL PARTS LIST

300SD

PART NO.	DESCRIPTION	PAGE	NO.
K 229	LOOP DEFLECTOR SCREW (2)	10	3
K 2102	NEEDLE THREAD TENSION DISC (2)	16	8
K 10148	LOOPER THREAD TENSION SPRING	20	22
K 21887	WRENCH	23	2
K 32572	NEEDLE THREAD TENSION RELEASING DISC	16	9
K 32788	LIFTING ROCK SHAFT CRANK WITH K141424	6	2
K 32789	LIFTING ROCK SHAFT K267633 WITH K32788 AND K548035	6	1
K 32825	SPREADER DRIVING ROCK SHAFT SCREW STUD OIL PACKING (WICK)	12	16
K 32848	ARM SHAFT BALL BEARING (FRONT)	2	2
K 50169	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)	16	4
K 50326	NEEDLE THREAD TENSION STUD	16	15
K 51570	NEEDLE THREAD TENSION THUMB NUT	16	16
K 52239	LOOPER THREAD GUIDE	20	28
K 54279	NEEDLE THREAD TENSION THREAD GUIDE (DOUBLE)	16	17
K 59538	NEEDLE THREAD TENSION SPRING BUSHING (BACK)	16	10
K 59539	NEEDLE THREAD TENSION STUD K50326 WITH K51570	16	14
K 131741	NEEDLE THREAD TENSION SPRING	16	11
K 141338	LIFTING CRANK SET SCREW	4	5
K 141424	LIFTING LINK HINGE PIN SET SCREW	4	6
K 141424	LIFTING LINK HINGE PIN SET SCREW	6	5
K 141478	NEEDLE GUARD SET SCREW (BACK)	10	31
K 141494	NEEDLE GUARD SET SCREW (FRONT)	10	32
K 143657	NEEDLE THREAD TENSION SPRING BUSHING (FRONT)	16	12
K 143658	NEEDLE THREAD TENSION THUMB NUT LOCKING SPRING	16	13
K 201363	FOOT LIFTER LEVER HINGE SCREW	14	2
K 201746	ARM SHAFT OIL SUPPLY BUSH STABILISER LOCK NUT	22	20
K 201746	BED SHAFT OIL SUPPLY BUSH STABILISER LOCK NUT	22	29
K 202253	ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE (2)	2	42
K 202330	NEEDLE BAR CONNECTING STUD OIL PACKING (WICK)	4	23
K 202330	FEED BAR HINGE PIN OIL WICK	10	56
K 204348	FOOT LIFTER LEVER SPRING	14	8
K 204365	NEEDLE THREAD TENSION RELEASER SPRING	16	23
K 214529	NEEDLE BAR ROCK FRAME REGULATING STUD SPRING	6	21
K 226206	NEEDLE THREAD TENSION RELEASING PIN	16	18
K 228661	FACE PLATE CUSHION (NEOPRENE) (2)	18	5
K 236957	THREAD LUBRICATOR OIL PAD (FELT) (3)	18	13
K 240245	FEED REGULATING STUD RETAINING SPRING	20	10
K 241763	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BACK) (2)	2	28
K 241763	LIFTING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING	2	28
K 241763	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BRASS) (2)	8	38
K 248423	FOOT LIFTER LEVER ROD COTTER PIN	14	12
K 267110	LIFTING ROCK SHAFT NEEDLE BEARING (2)	6	6
K 267608	NEEDLE BAR ROCK FRAME DRIVING CONNECTION	2	18
K 267608	FEED DRIVING CONNECTION	8	24
K 267609	NEEDLE BAR ROCK FRAME DRIVING CONNECTION K267608 WITH K271055	2	20
K 267609	FEED DRIVING CONNECTION K267608 WITH K271055	8	26
K 267610	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC	2	21
K 267610	LIFTING ECCENTRIC	2	21
K 267610	FEED DRIVING ECCENTRIC	8	41
K 267612	FOOT LIFTER CRANK	6	30
K 267617	LIFTING LINK HINGE PIN WITH K268258	4	1
K 267617	LIFTING LINK HINGE PIN WITH K268258	4	1
K 267617	LIFTING ECCENTRIC CONNECTION HINGE PIN WITH K268258	6	12
K 267618	LIFTING ECCENTRIC ADJUSTING DISC SPRING	2	30
K 267623	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE	2	25
K 267623	LIFTING ECCENTRIC FRICTION PLATE	2	25
K 267623	FEED DRIVING ECCENTRIC FRICTION PLATE	8	39
K 267626	LIFTING LEVER HINGE STUD	4	8
K 267627	LIFTING LINK	4	3
K 267628	LIFTING PRESSER BAR	4	40
K 267631	LIFTING PRESSER BAR LIFTING CRANK WITH K268258	4	15
K 267633	LIFTING ROCK SHAFT	6	3
K 267650	PRESSER BAR SPRING HOUSING SUPPORT RETAINER	14	13
K 267656 -452	THREAD LUBRICATOR	18	11
K 267657	VIBRATING PRESSER BAR	4	26

NUMERICAL PARTS LIST

300SD

PART NO.	DESCRIPTION	PAGE	NO.
K 267658	VIBRATING PRESSER BAR HINGE STUD	4	27
K 267665	LOOP DEFLECTOR	10	2
K 267704	FOOT LIFTER LEVER ROD	14	11
K 267707	NEEDLE THREAD TENSION RELEASING PLATE	14	3
K 267714	PRESSER BAR SPRING HOUSING SUPPORT	14	18
K 267718	PRESSER BAR SPRING ARM BALL RETAINER	4	10
K 267738	PRESSER BAR SPRING ARM	14	22
K 267907	LIFTING PRESSER BAR GUIDE ROD	4	44
K 267971	NEEDLE THREAD TENSION COMPLETE, NOS. K32572, K59538, K59539, K131741, K143657, K143658 AND TWO K2102	16	7
K 268004 -451	ARM SHAFT BALL BEARING (BACK) HOUSING	2	44
K 268009	ARM SHAFT OIL STOP BALL SPRING (FRONT)	2	12
K 268029	NEEDLE BAR ROCK FRAME NEEDLE BEARING (2)	4	32
K 268032	FACE PLATE LOCK SPRING	18	6
K 268033	FACE PLATE LOCK STUD	18	4
K 268044	ARM SHAFT OIL STOP BALL SPRING (REAR)	2	15
K 268044	BED SHAFT OIL STOP BALL SPRING	8	20
K 268052	LOOPER THREAD TAKE-UP ROD	12	20
K 268065	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC	2	29
K 268065	LIFTING ECCENTRIC ADJUSTING DISC	2	29
K 268065	FEED DRIVING ECCENTRIC ADJUSTING DISC	8	42
K 268066	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING	8	43
K 268070	FEED DRIVING ROCK SHAFT	10	15
K 268074	FEED LIFTING CONNECTION	8	9
K 268077	FEED LIFTING ECCENTRIC LUBRICATING PAD (WOOD)	8	7
K 268078	FEED LIFTING LINK	10	19
K 268079	FEED LIFTING LINK HINGE PIN WITH K268258 (2)	10	20
K 268081	FEED REGULATING STUD	20	8
K 268111	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET	16	2
K 268123	LOOPER THREAD TUBE	16	29
K 268139	NEEDLE BAR CONNECTING LINK CAP WASHER	4	18
K 268139	LOOPER DRIVING CONNECTION WASHER	8	4
K 268144	NEEDLE BAR OILING FELT (2)	4	33
K 268148	NEEDLE BAR ROCK FRAME REGULATING STUD	6	22
K 268149	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE	6	20
K 268162	SPREADER POINT	12	2
K 268167	NEEDLE THREAD TENSION BRACKET	16	21
K 268184	SPREADER BAR BRACKET	12	7
K 268190	SPREADER DRIVING PIN	12	10
K 268208	LOOPER CARRIER CRANK HINGE PIN WITH K268258	10	36
K 268214	ARM SHAFT OIL STOP BALL 5/32 IN. DIA. (2)	2	13
K 268214	BED SHAFT OIL STOP BALL 5/32 IN. DIA.	8	21
K 268219	NEEDLE BAR ROCK FRAME THREAD GUIDE	4	36
K 268220	SPREADER DRIVING ECCENTRIC THRUST WASHER (2)	8	49
K 268258	LIFTING ECCENTRIC CONNECTION HINGE PIN OIL PACKING (WICK)	4	2
K 268258	LIFTING LINK HINGE PIN OIL PACKING (WICK)	4	2
K 268258	LIFTING PRESSER BAR LIFTING CRANK OIL PACKING (WICK)	4	16
K 268258	LIFTING ECCENTRIC CONNECTION HINGE PIN OIL PACKING (WICK)	6	13
K 268258	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD OIL PACKING	6	25
K 268258	FEED LIFTING CONNECTION HINGE STUD OIL PACKING (WICK)	8	14
K 268258	FEED DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)	8	30
K 268258	FEED LIFTING LINK HINGE PIN OIL PACKING (WICK) (2)	10	21
K 268258	LOOPER CARRIER CRANK HINGE PIN OIL PACKING (WICK)	10	37
K 268264	ARM SHAFT OIL CONTROL ROD (WOOD)	2	11
K 268265	BED SHAFT OIL CONTROL ROD (WOOD)	8	19
K 268270	ARM SHAFT CONNECTION BELT (REINFORCED NEOPRENE)	2	40
K 268278	NEEDLE BAR OILING FELT HOLDER (2)	4	34
K 268312	NEEDLE THREAD GUIDE (ON ARM HEAD)	16	28
K 268330	FACE PLATE HINGE STUD	18	2
K 268333	LOOPER THREAD TENSION THREAD GUIDE	20	27
K 268380	LOOPER WITH K141478 AND K141494	10	29
K 268490	LIFTING ECCENTRIC CONNECTION	2	35
K 268491	LIFTING ECCENTRIC CONNECTION WITH K271055	2	37
K 268500	LOOPER THREAD TUBE COVER CUSHION (2)	16	31
K 268505	LOOPER THREAD GUIDE (TOP OF ARM)	16	3
K 268506	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET K268111 WITH K268505 AND TWO K50169	16	1

NUMERICAL PARTS LIST

300SD

PART NO.	DESCRIPTION	PAGE	NO.
K 268512	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD)	4	21
K 268513	NEEDLE THREAD GUIDE (ON SIDE OF ARM) (2)	16	26
K 269617	LOOPER CARRIER SHAFT	10	48
K 269619	LOOPER THREAD GUIDE (ON FRONT)	12	22
K 270026	FEED REGULATING STUD SPRING	20	9
K 270266	NEEDLE BAR CONNECTING LINK NEEDLE BEARING (2)	4	20
K 271055	NEEDLE BAR ROCK FRAME DRIVING CONNECTION NEEDLE BEARING	2	19
K 271055	LIFTING ECCENTRIC CONNECTION NEEDLE BEARING	2	36
K 271055	FEED DRIVING CONNECTION NEEDLE BEARING	8	25
K 272142	ARM SHAFT BALL BEARING (BACK)	2	51
K 272142	BED SHAFT THRUST COLLAR BEARING	8	60
K 276025	PRESSER BAR SPRING ARM BALL	4	13
K 281207	NEEDLE GUARD	10	30
K 281208	LOOPER AND NEEDLE GUARD COMPLETE, NOS. K268380 AND K281207	10	28
K 281216	BED SHAFT BALL BEARING	8	16
K 281223	LOOPER DRIVING CONNECTION WITH K415500	10	33
K 281224	BED SHAFT BALL BEARING	8	17
K 281239	NEEDLE BAR CRANK COMPLETE, NOS. K415138, K32848, K281258, KE0099 AND TWO K545205-451	2	3
K 281246	SPREADER DRIVING CONNECTION WITH K415368, K281248 AND K544203-001	8	50
K 281248	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER	8	52
K 281249	SPREADER DRIVING ROCK SHAFT SCREW STUD WITH K32825	12	15
K 281258	NEEDLE BAR CRANK OIL PACKING (WICK)	2	9
K 281290	ARM SHAFT CONNECTION BELT PULLEY WITH TWO EACH K414546 AND K202253	2	41
K 281292	BED SHAFT CONNECTION BELT PULLEY WITH TWO K414546	8	55
K 281294	ARM SHAFT THRUST COLLAR WITH K272142, K281295-001 AND TWO K544209-005	2	50
K 281294	BED SHAFT THRUST COLLAR WITH K281295-001, K272142 AND TWO K544209-005	8	57
K 281295 -001	ARM SHAFT THRUST COLLAR	2	52
K 281295 -001	BED SHAFT THRUST COLLAR	8	58
K 281296 -467	MACHINE PULLEY WITH K414525 AND K414526	2	46
K 281297 -467	MACHINE PULLEY	2	47
K 281912	NEEDLE BAR	4	28
K 281914	NEEDLE BAR CONNECTING STUD WITH K202330, K414545 AND TWO K414511	4	22
K 281916	NEEDLE BAR CONNECTING LINK WITH TWO K270266	4	19
K 281927	PRESSER BAR SPRING ARM FULCRUM	6	31
K 281975	SPREADER WITH K268162	12	1
K 350579	BED SHAFT OIL SUPPLY BUSH STABILIZER	22	28
K 350604	PRESSER BAR SPRING ARM FULCRUM SET SCREW (2)	6	33
K 350604	FEED LIFTING CRANK PINCH SCREW	10	26
K 374098	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW (2)	2	26
K 374098	LIFTING ECCENTRIC FLANGE FRICTION PLATE SCREW (2)	2	33
K 374098	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW (2)	8	40
K 374099	LOOPER DRIVING CRANK POSITION SCREW (2)	8	2
K 374107 -001	THROAT PLATE SCREW (BACK)	20	5
K 374107 -003	FEED DOG SCREW (2)	10	9
K 374107 -003	OILER BRACKET SCREW	22	6
K 374397 -002	FACE PLATE LOCKER SCREW (4)	18	15
K 412011	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325	8	44
K 412203	LOOPER THREAD TENSION DISC (2)	20	21
K 412373	LIFTING ROD CONNECTION (UPPER)	14	23
K 414504	LIFTING ROCK SHAFT BRACKET SCREW (2)	6	15
K 414508	BED PLATE SCREW (8)	20	2
K 414509	LIFTING ECCENTRIC CONNECTION CRANK PINCH SCREW (2)	6	10
K 414509	FOOT LIFTER ARM PINCH SCREW	6	35
K 414510	LOOPER THREAD GUIDE SCREW	12	23
K 414511	LIFTING CRANK PINCH SCREW (2)	4	7
K 414511	NEEDLE BAR CONNECTING STUD PINCH SCREW (2)	4	24
K 414511	FEED LIFTING ROCK SHAFT CRANK PINCH SCREW (2)	8	11
K 414511	FEED DRIVING ROCK SHAFT CRANK PINCH SCREW (2)	8	28
K 414512	LIFTING PRESSER BAR GUIDE BLOCK PINCH SCREW	4	43
K 414514	NEEDLE THREAD GUIDE SCREW (2)	16	27
K 414516	LIFTING PRESSER BAR GUIDE BLOCK ADJUSTING SCREW	4	42
K 414516	LOOPER CARRIER CRANK HINGE PIN PINCH SCREW	10	35
K 414517	NEEDLE BAR CONNECTING LINK CAP WASHER SCREW	4	17
K 414518	LOOPER DRIVING CONNECTION WASHER SCREW	8	5
K 414518	LOOPER CARRIER SHAFT SUPPORTING PLATE SCREW (2)	10	53

NUMERICAL PARTS LIST

300SD

PART NO.	DESCRIPTION	PAGE	NO.
K 414518	THROAT PLATE SCREW (FRONT)	20	6
K 414519	NEEDLE SET SCREW	4	29
K 414520	BED COVER (BACK) SCREW (2)	20	13
K 414522	NEEDLE BAR OILING FELT HOLDER SCREW (2)	4	35
K 414524	SPREADER BAR BRACKET SCREW (2)	12	8
K 414525	MACHINE PULLEY SET SCREW	2	48
K 414526	MACHINE PULLEY POSITION SCREW	2	49
K 414527	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE SET SCREW	6	23
K 414528	NEEDLE BAR ROCK FRAME REGULATING STUD CAP SET SCREW	6	19
K 414528	SPREADER DRIVING ECCENTRIC SET SCREW (2)	8	48
K 414528	SPREADER DRIVING ECCENTRIC COUNTERBALANCE SET SCREW (2)	8	48
K 414529	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC SPACING COLLAR SET SCREW (2)	2	17
K 414529	LIFTING ECCENTRIC SPACING COLLAR SET SCREW (2)	2	39
K 414529	SPREADER HOLDER SET SCREW (2)	12	6
K 414532	LOOPER THREAD TENSION BRACKET SCREW (2)	20	26
K 414533	BOTTOM PLATE SCREW (6)	20	33
K 414534	FACE PLATE LOCK SPRING SCREW (2)	18	8
K 414537	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)	16	5
K 414539	NEEDLE BAR ROCK FRAME THREAD GUIDE SCREW (2)	4	37
K 414543	LIFTING ECCENTRIC CONNECTION HINGE PIN PINCH SCREW	6	11
K 414545	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD) SET SCREW	4	25
K 414546	ARM SHAFT CONNECTION BELT PULLEY SET SCREW (2)	2	43
K 414546	BED SHAFT CONNECTION BELT PULLEY SET SCREW (2)	8	56
K 414548	PRESSER BAR SPRING ARM BALL RETAINER SCREW (2)	4	11
K 414549	FEED LIFTING ROCK SHAFT CRANK POSITION SCREW	8	12
K 414552	SPREADER SCREW	12	3
K 414555	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE SET SCREW (2)	2	24
K 414555	LIFTING ECCENTRIC FLANGE SET SCREW (2)	2	24
K 414555	FEED DRIVING ECCENTRIC FLANGE SET SCREW (2)	8	36
K 414557	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)	2	27
K 414557	LIFTING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)	2	27
K 414557	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)	8	37
K 414558	LOOPER SET SCREW (2)	10	45
K 414559	FEED DOG SHANK ADJUSTING SCREW	10	5
K 414566	FOOT LIFTER CRANK STOP SCREW STUD	6	32
K 414567	PRESSER BAR SPRING ARM HINGE SCREW	14	19
K 414570	FOOT LIFTER LEVER SPRING SCREW EYE	14	9
K 414577	FOOT LIFTER LEVER ROD HINGE SCREW	14	5
K 414578	ARM SHAFT OIL STOP BALL SCREW (2)	2	14
K 414578	BED SHAFT OIL STOP BALL SCREW	8	22
K 414638	VIBRATING PRESSER FOOT PINCH SCREW	4	39
K 414638	LIFTING PRESSER PINCH SCREW	4	48
K 414639	LOOPER THREAD TUBE COVER SCREW (4)	16	32
K 414750 -002	FEED DOG SHANK SCREW	10	7
K 414750 -002	LOOPER HOLDER SCREW	10	46
K 414750 -004	PRESSER BAR SPRING ARM FULCRUM SCREW	6	37
K 414750 -004	STOP COLLAR SCREW (2)	14	33
K 414753 -004	FOOT LIFT LEVER SCREW	14	31
K 414753 -004	FOOT LIFT PIVOT SCREW (2)	14	34
K 414774	LIFTING LEVER	14	27
K 414790	NEEDLE BAR ROCK FRAME DRIVING ARM PINCH SCREW (2)	6	29
K 415016	FACE PLATE LOCK SPRING PLATE	18	7
K 415059	LIFTING PRESSER BAR GUIDE BLOCK WITH K414512 AND K414516	4	41
K 415061	LIFTING CRANK WITH K141424, K141338 AND TWO K414511	4	4
K 415065	LIFTING ROCK SHAFT COLLAR WITH TWO K504020	6	7
K 415065	FEED LIFTING ROCK SHAFT COLLAR WITH TWO K504020 (2)	10	23
K 415065	SPREADER DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2)	12	18
K 415067	LIFTING LEVER WITH TWO KE0008	4	12
K 415069	LIFTING ECCENTRIC CONNECTION CRANK WITH K414543 AND TWO K414509	6	9
K 415071 -451	LIFTING ROCK SHAFT BRACKET	6	14
K 415073	FEED DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND K374098	8	34
K 415074	FEED DRIVING ECCENTRIC FLANGE	8	35
K 415076	LIFTING ECCENTRIC FLANGE K415077 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND K374098	2	31
K 415077	LIFTING ECCENTRIC FLANGE	2	32

NUMERICAL PARTS LIST

300SD

PART NO.	DESCRIPTION	PAGE	NO.
K 415078	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE K415079 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND K374098	2	22
K 415079	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE	2	23
K 415081	LIFTING ECCENTRIC AND NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. K267618, K415076, K415078 AND TWO EACH K267610, K268065	2	34
K 415082	FEED DRIVING ECCENTRIC COMPLETE, NOS. K267610, K268065, K268066, K412011 AND K415073	8	33
K 415086	LIFTING ECCENTRIC SPACING COLLAR WITH TWO K414529	2	38
K 415091	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD WITH 268258	6	24
K 415091	FEED LIFTING CONNECTION HINGE STUD WITH K268258	8	13
K 415091	FEED DRIVING CONNECTION HINGE STUD WITH K268258	8	29
K 415094 -451	NEEDLE BAR ROCK FRAME DRIVING ARM WITH TWO K414790	6	28
K 415098	NEEDLE BAR ROCK FRAME REGULATING STUD COMPLETE, NOS. K214529, K415099, K268148 AND K268149	6	17
K 415099	NEEDLE BAR ROCK FRAME REGULATING STUD CAP WITH K414528	6	18
K 415106	PRESSER BAR SPRING HOUSING COMPLETE	14	15
K 415122	FOOT LIFTER ARM WITH K414509 AND K545213	6	34
K 415138	NEEDLE BAR CRANK WITH K500272-833, K544358 AND K549024	2	1
K 415172	LOOPER CARRIER SHAFT COLLAR WITH TWO 544204-001	10	49
K 415174	LOOPER CARRIER CRANK WITH K414516	10	38
K 415187	SPREADER DRIVING ECCENTRIC WITH K543808-002 AND TWO K414528	8	46
K 415190	SPREADER DRIVING ECCENTRIC COUNTERBALANCE WITH TWO K414528	8	54
K 415194	SPREADER DRIVING CRANK WITH TWO K544204-001	12	13
K 415196	SPREADER HOLDER WITH TWO K414529	12	5
K 415204	FEED LIFTING CRANK WITH K350604 AND K545213	10	25
K 415206	FEED LIFTING ROCK SHAFT CRANK WITH K414549 AND TWO K414511	8	10
K 415210	FEED LIFTING ECCENTRIC WITH K268077 AND TWO K544208-005	8	6
K 415213	FEED DRIVING ROCK SHAFT CRANK WITH TWO K414511	8	27
K 415215	FEED DRIVING ROCK SHAFT CRANK K415213 WITH K267609, K415091, K541197 AND K545297	8	23
K 415252	NEEDLE THREAD TENSION RELEASER CAP WITH K504048	16	24
K 415255	LOOPER THREAD TENSION BRACKET	20	24
K 415291	LOOPER THREAD TENSION STUD	20	20
K 415292	LOOPER CARRIER CRANK CLAMPING STUD	10	39
K 415294	LOOPER THREAD TENSION COMPLETE, NOS. K10148, K415291, K541452 AND TWO K412203	20	19
K 415297	FEED DRIVING ROCK SHAFT BUSHING (2)	10	14
K 415297	FEED LIFTING ROCK SHAFT BUSHING (2)	10	14
K 415297	SPREADER DRIVING ROCK SHAFT BUSHING (2)	12	11
K 415308	LIFTING ECCENTRIC SPACING COLLAR WITH TWO K414529	2	16
K 415342 -451	LOOPER THREAD TUBE COVER	16	30
K 415357	NEEDLE THREAD TENSION RELEASER	16	19
K 415368	SPREADER DRIVING CONNECTION NEEDLE BEARING	8	51
K 415377	THREAD WIRE	23	1
K 415389	SPREADER DRIVING ROCK SHAFT WITH K504019	12	12
K 415500	LOOPER DRIVING CONNECTION BUSHING	10	34
K 415500	LOOPER CARRIER BUSHING (2)	10	43
K 500264 -833	LOOPER DRIVING CRANK SET SCREW	8	3
K 500264 -833	FEED DRIVING ROCK FRAME SET SCREW	10	12
K 500272 -833	NEEDLE BAR CRANK SET SCREW	2	6
K 502986	ARM PLUG (SMALL) (2)	15	33
K 504019	LOOPER THREAD TAKE-UP ROD SET SCREW	12	21
K 504019	THREAD LUBRICATOR SCREW	18	12
K 504020	LIFTING ROCK SHAFT COLLAR SET SCREW (2)	6	8
K 504020	FEED LIFTING ROCK SHAFT COLLAR SET SCREW (4)	10	24
K 504020	SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)	12	19
K 504048	NEEDLE THREAD TENSION RELEASER CAP SET SCREW	16	25
K 541166 -001	PRESSER BAR SPRING ARM FULCRUM NUT	6	38
K 541166 -001	LIFTING ROD CONNECTION NUT (3)	14	24
K 541166 -003	FOOT LIFTER LEVER ROD HINGE SCREW NUT	14	7
K 541197	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD NUT	6	26
K 541197	FEED LIFTING CONNECTION HINGE STUD NUT	8	15
K 541197	FEED DRIVING CONNECTION HINGE STUD NUT	8	31
K 541198	LOOPER CARRIER CRANK CLAMPING STUD NUT	10	40
K 541198	PRESSER BAR SPRING HOUSING NUT (2)	14	17
K 541200	FEED DOG SHANK ADJUSTING SCREW LOCK NUT	10	6
K 541452	LOOPER THREAD TENSION THUMB NUT	20	23
K 543162	TWEEZERS	23	3
K 543803 -005	FOOT LIFT PIVOT SCREW WASHER (2)	14	35
K 543804 -004	FEED DOG SHANK SCREW WASHER	10	8

NUMERICAL PARTS LIST

300SD

PART NO.	DESCRIPTION	PAGE	NO.
K 543804 -004	LOOPER HOLDER SCREW WASHER	10	47
K 543804 -004	FOOT LIFTER LEVER ROD HINGE SCREW WASHER	14	6
K 543805 -004	FEED DOG SHANK SCREW SPRING WASHER	10	55
K 543805 -005	OILER BRACKET SCREW SPRING WASHER	22	7
K 543805 -005	FOOT LIFT PIVOT SCREW SPRING WASHER (2)	14	36
K 543808 -002	SPREADER DRIVING ECCENTRIC PIN	8	47
K 543841 -001	LIFTING ROCK SHAFT BRACKET POSITION PIN (2)	6	16
K 543850 -001	NEEDLE THREAD TENSION RELEASING PLATE PIN	14	4
K 543853 -003	NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)	16	20
K 543853 -003	LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)	20	25
K 543874 -005	PRESSER BAR SPRING ARM HINGE SCREW WASHER	14	20
K 544203 -001	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER SET SCREW	8	53
K 544204 -001	FEED BAR SET SCREW (2)	10	17
K 544204 -001	LOOPER CARRIER SHAFT COLLAR SET SCREW (2)	10	50
K 544204 -001	SPREADER DRIVING CRANK SET SCREW (2)	12	14
K 544208 -005	FEED LIFTING ECCENTRIC SET SCREW (2)	8	8
K 544209 -003	LOOPER CARRIER SHAFT SET SCREW	10	51
K 544209 -005	ARM SHAFT THRUST COLLAR SET SCREW (2)	2	53
K 544209 -005	BED SHAFT THRUST COLLAR SET SCREW (2)	8	59
K 544209 -005	BED SHAFT PULLEY SET SCREW (2)	8	62
K 544211 -052	LOOPER THREAD GUIDE SET SCREW	20	29
K 544211 -052	OIL TUBE (TO N/B ROCK FRAME) SUPPORT SCREW	22	36
K 544217 -052	BED COVER SCREW (7)	20	15
K 544217 -052	OIL TUBE CLAMP SCREW (2)	22	23
K 544217 -052	OIL TUBE (TO N/B ROCK FRAME) CLAMP SCREW	22	34
K 544301	LIFTING PRESSER BAR GUIDE ROD SET SCREW (UPPER)	4	45
K 544301	LIFTING PRESSER BAR GUIDE ROD SET SCREW (LOWER)	4	46
K 544322	LIFTING LEVER HINGE STUD SET SCREW (2)	4	9
K 544325	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)	8	45
K 544336	ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)	2	45
K 544336	FOOT LIFTER LEVER SPRING SCREW	14	10
K 544336	NEEDLE THREAD TENSION BRACKET SCREW (2)	16	22
K 544358	NEEDLE BAR CRANK POSITION SCREW CHECK SCREW	2	5
K 544875	ARM PLUG (LARGE) (2)	16	6
K 545174 -452	FACE PLATE HINGE STUD SET SCREW (2)	18	3
K 545205 -451	NEEDLE BAR CRANK COVER SCREW (2)	2	8
K 545205 -451	PRESSER BAR SPRING HOUSING SUPPORT RETAINER SCREW (2)	14	14
K 545213	FOOT LIFTER ARM SET SCREW	6	36
K 545213	FEED LIFTING LINK HINGE PIN SET SCREW	10	18
K 545213	FEED LIFTING LINK HINGE PIN SET SCREW	10	27
K 545246 -452	ARM SIDE COVER SCREW (4)	18	10
K 545249 -452	FEED REGULATING STUD SOCKET SCREW (2)	20	11
K 545297	NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW	6	27
K 545297	FEED DRIVING CONNECTION CAP SCREW	8	32
K 545405	PRESSER BAR SPRING ARM HINGE SCREW NUT	14	21
K 545424	SPREADER DRIVING ROCK SHAFT SCREW STUD NUT	12	17
K 547670	SPREADER SCREW WASHER	12	4
K 548035	LIFTING ROCK SHAFT CRANK PIN	6	4
K 548459	LOOPER CARRIER CRANK CLAMPING STUD WASHER	10	41
K 549024	NEEDLE BAR CRANK POSITION SCREW	2	4
K 549024	FEED DRIVING ROCK FRAME POSITION SCREW	10	11
K 559032	FACE PLATE LOCKER	18	14
K 559033	BOTTOM PLATE	20	31
K 559034	BOTTOM PLATE GASKET	20	32
K 559040	BED SHAFT PULLEY	8	61
K 559041	LOOPER CARRIER WITH TWO K415500	10	42
K 559044	LOOPER CARRIER SHAFT SUPPORTING PLATE	10	52
K 559046	FEED BAR	10	16
K 559049	FEED DRIVING ROCK FRAME	10	10
K 559051	FEED BAR HINGE PIN	10	13
K 559052	FEED LIFTING ROCK SHAFT	10	22
K 559055	LOOPER HOLDER	10	44
K 559057	VIBRATING PRESSER FOOT	4	38
K 559061	FEED DOG	10	1
K 559064	FEED DOG SHANK	10	4

NUMERICAL PARTS LIST

300SD

PART NO.	DESCRIPTION	PAGE	NO.
K 559065	SPREADER BAR	12	9
K 559067	LIFTING ROD CONNECTION (LOWER)	14	26
K 559068	LIFTING ROD	14	25
K 559073	LOOPER COVER THUMB SCREW	20	18
K 559075	BED COVER (BACK)	20	12
K 559077	PRESSER BAR SPRING HOUSING COLLAR	14	16
K 559078	LOOPER THREAD GUIDE (PIPE)	20	30
KE0007	FACE PLATE HINGE STUD	18	16
KE0008	LIFTING LEVER BUSHING (2)	4	14
KE0021	FACE PLATE WITH K268033 AND TWO EACH K228661 AND K545174-452	18	1
KE0026	FOOT LIFT PIVOT WITH TWO KE0030	14	28
KE0030	BUSHING (2)	14	29
KE0034	PIVOT ARM	14	37
KE0035	HANDLE	14	38
KE0037	BED PLATE (LEFT)	20	3
KE0053	OILER	23	4
KE0068	BED COVER (FRONT)	20	14
KE0070	LIFTING PRESSER FOOT	4	47
KE0071	THROAT PLATE	20	4
KE0072	ARM SIDE COVER	18	9
KE0073	BED PLATE (RIGHT)	20	1
KE0075	FEED REGULATING STUD SOCKET	20	7
KE0083	FOOT LIFT LEVER WITH K414753-004	14	30
KE0084	STOP COLLAR WITH K414750-004 (2)	14	32
KE0085	FOOT LIFTER LEVER WITH K543850-001	14	1
KE0099	NEEDLE BAR CRANK COVER	2	7
KE0117	BOTTLE WITH OIL (100cc)	23	5
KE0255	LOOPER COVER	20	16
KE0257	BED COVER (LEFT)	20	17
KE0282	OIL TUBE SUPPORT SCREW	22	37
KE0320	GLASS OILER	22	4
KE0321	OILER OIL TUBE COUPLER	22	9
KE0323	OILER FIX NUT	22	8
KE0326	OIL DISTRIBUTOR PLUG	22	13
KE0327	OIL DISTRIBUTOR SCREW (2)	22	14
KE0328	ARM SHAFT OIL SUPPLY BUSH WITH KE0329 AND KE0330 (2)	22	16
KE0329	ARM SHAFT OIL SUPPLY BUSH OIL TUBE COUPLER	22	17
KE0330	OIL SUPPLY BUSH OIL SEAL (2)	22	18
KE0330	OIL SUPPLY BUSH OIL SEAL (2)	22	27
KE0331	ARM SHAFT OIL SUPPLY BUSH STABILIZER	22	19
KE0333	BED SHAFT OIL SUPPLY BUSH WITH KE0334 AND KE0330 (2)	22	25
KE0334	BED SHAFT OIL SUPPLY BUSH OIL TUBE COUPLER	22	26
KE0337	OIL FLOW VALVE	22	31
KE0338	OIL TUBE (TO N/B ROCK FRAME)SUPPORT	22	35
KE0339	OIL TUBE (OILER-OIL DISTRIBUTOR)	22	11
KE0341 -006	NEEDLE BAR OILING FELT CONNECTION WICK	4	49
KE0342	OIL TUBE (TO BED SHAFGT) CLAMP	22	22
KE0342	OIL TUBE (TO N/B ROCK FRAME) CLAMP	22	33
KE0346	OIL TUBE WITH WICK (DISTRIBUTOR TO BED SHAFT)	22	21
KE0349	LOOPER DRIVING CRANK WITH K500264-833 AND TWO K374099	8	1
KE0354	OIL TUBE (TO BED SHAT) GUIDE BUSH	22	24
KE0358	BED SHAFT WITH K268044, K268214, K268265 AND K414578	8	18
KE0359	OILER OIL TUBE COUPLER SOCKET(45° ELBOW)	22	10
KE0360	NEEDLE BAR ROCK FRAME	4	31
KE0372	OILER BRACKET	22	5
KE0387	OIL DISTRIBUTOR WITH KE0394 AND KE0326	22	12
KE0388	OIL TUBE WITH WICK (DISTRIBUTOR TO ARM SHAFT BUSH)	22	15
KE0390	OIL TUBE WITH WICK (DISTRIBUTOR TO VALVE)	22	30
KE0391	ARM SHAFT WITH K268009, K268044, K268264, TWO EACH K268214 AND K414578	2	10
KE0395	OIL TUBE WITH WICK (VALVE TO N. B. ROCK FRAME)	22	32
62x59	NEEDLE (SIZE 160/23)	4	30
62x59	NEEDLE (SIZE 160/23) (5)	23	6

KAMBARA Engineering Co., Ltd.
Yoshida Soko 1F, 1508-4 Shimohiraide
Utsunomiya, Tochigi 321-0903, Japan
TEL: 81-28-683-6636
FAX: 81-28-683-6638
<https://kambara-engineering.jp>
Printed in Japan